INSTRUCTION MANUAL

# 

HOBBY

## CRASMAN

### OFF-ROAD

#### PERFORMANCE

1/8th SCALE ELECTRIC



www.tractionhobby.com



#### **CAUTIONS**



To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

#### CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL.

- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is high risk of fire and/or damage.

#### INSPECT YOUR MODEL BEFORE OPERATION.

- ■Make sure that screws and nut are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- ■Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- •Always test the brakes and throttle before starting your engine to avoid losing control of the model.
- Make sure no one else is using the same radio frequency as you are using.

#### AFTER OPERATION OF YOUR R/C MODEL.


- ●Turn off receiver first, then turn off transmitter, this will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- •Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean of excess dirt and grease, this will increase the life.

#### **Equipment needed**

Battery Maximum Size :140×47mm



6 or 7-cell NiMH battery/2s-3s LiPo battery

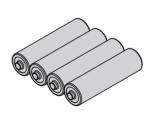


AA battery ×4



Charger

#### **Supplied Tools and Equipment**

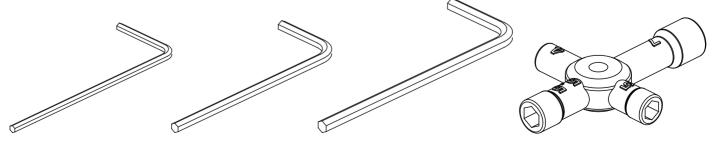

1.5mm "L"wrench


2.0mm "L"wrench

2.5mm "L"wrench


4-way wrench





#### **Chassis Top View**

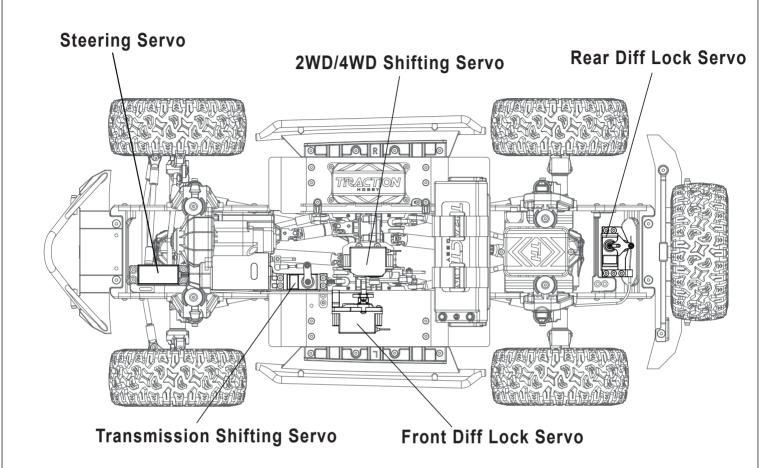



#### **Receiver Connection**

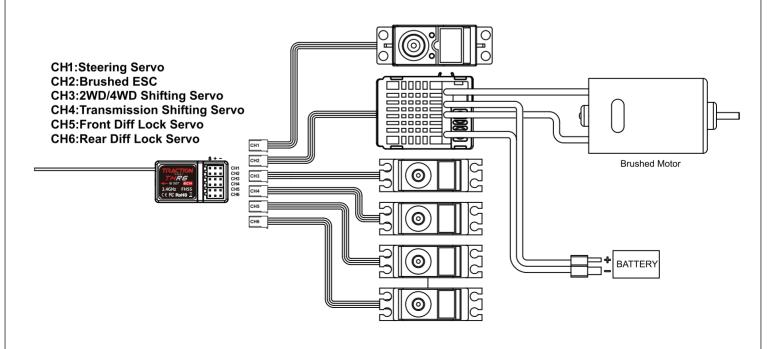


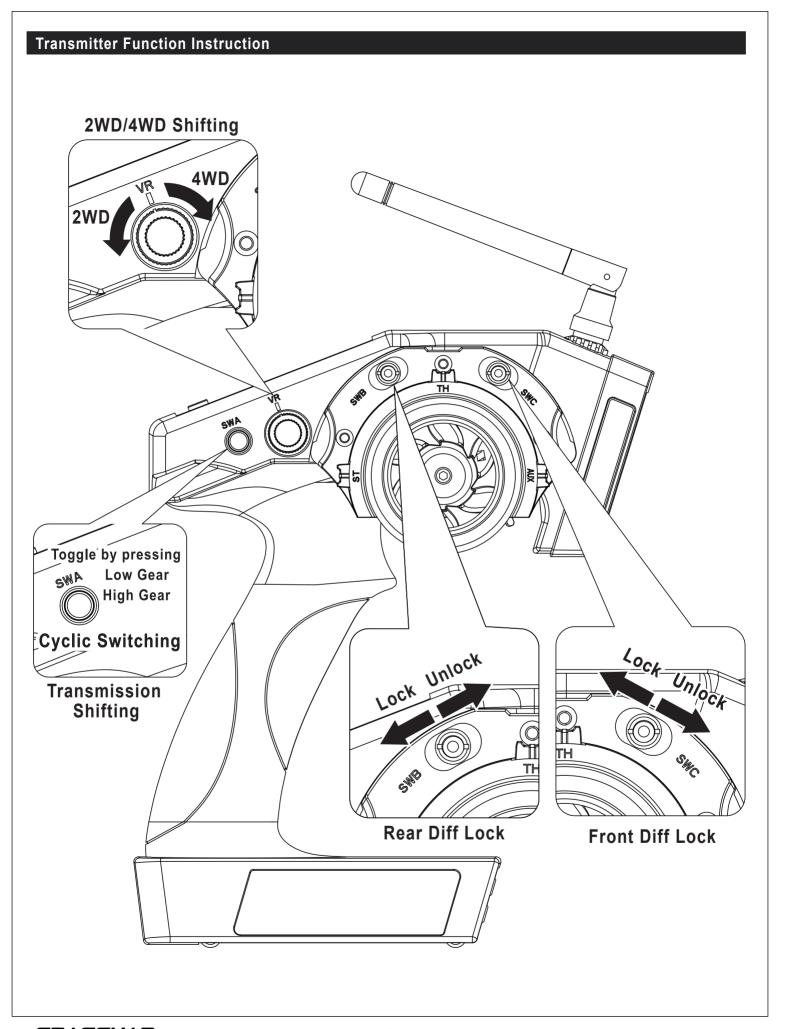

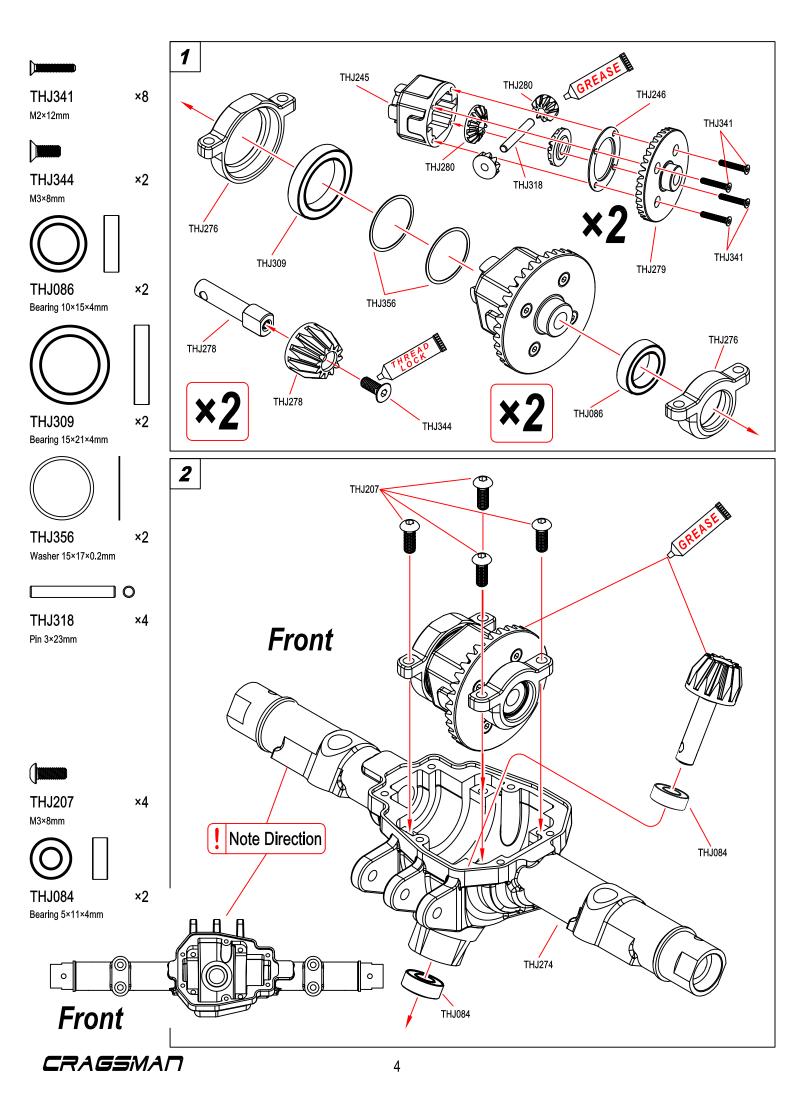

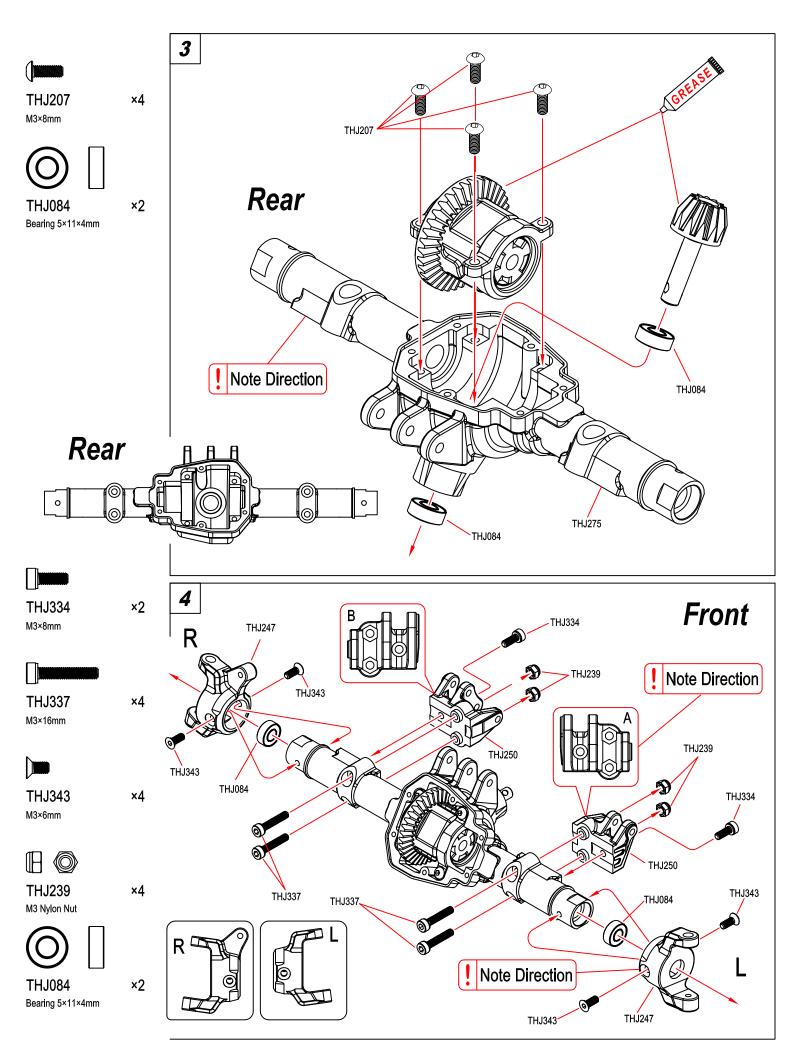

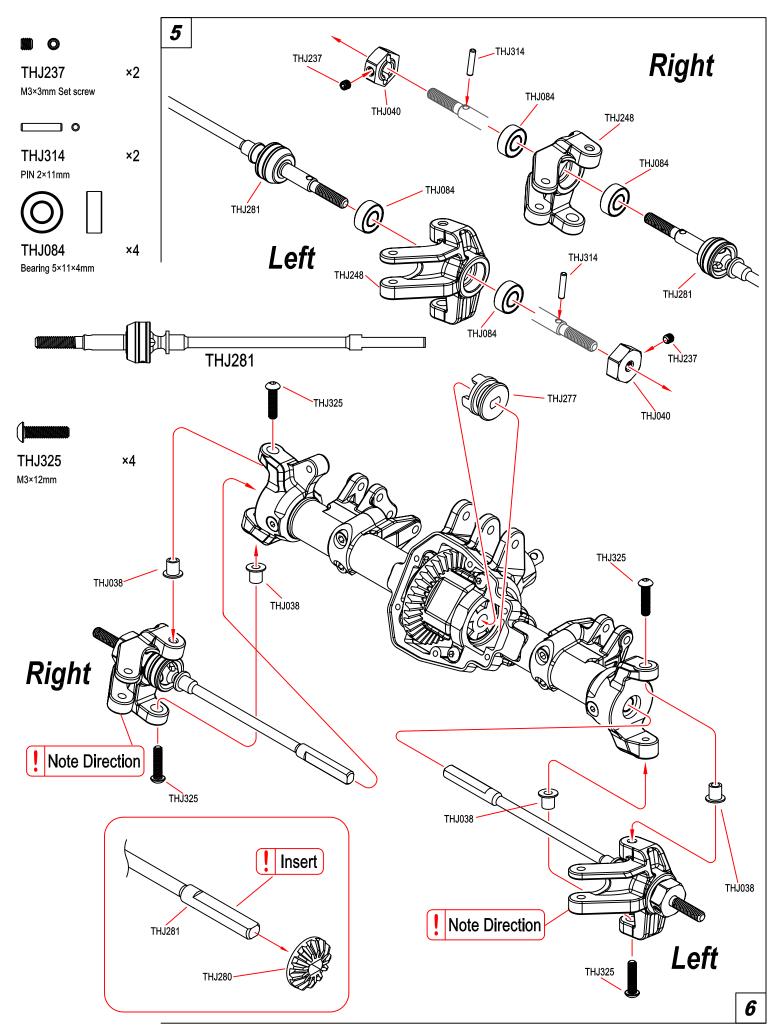

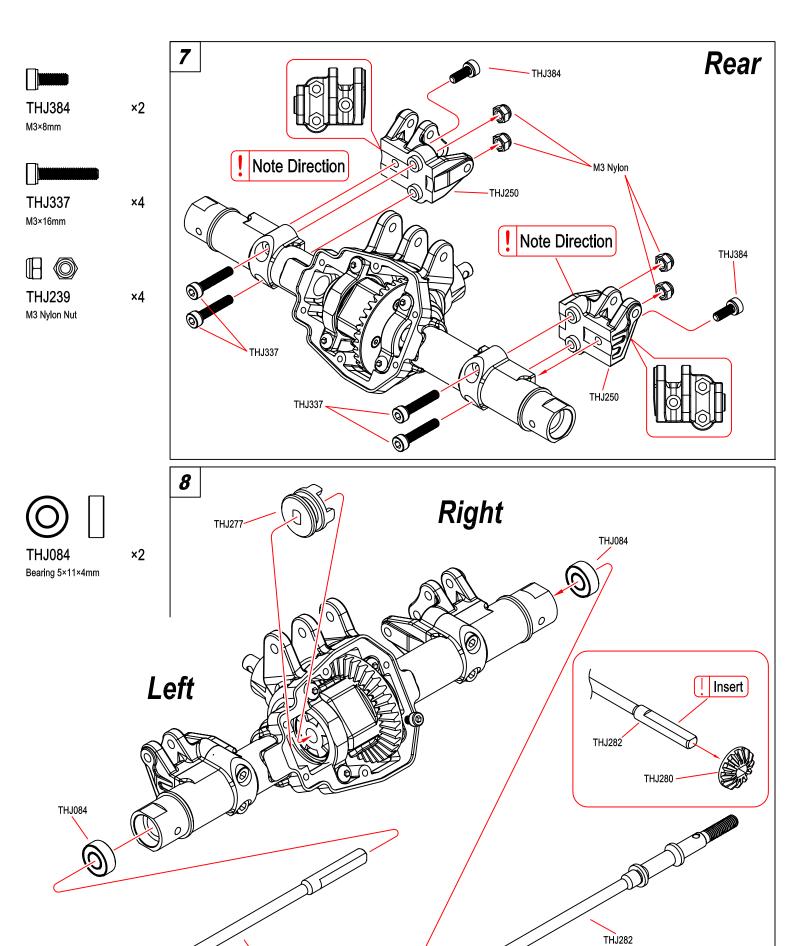

THJ282



THJ207 ×4
M3×8mm

THJ237 ×2 M3×3mm Set screw

□□□ 0 TH 131// ב


THJ314 ×2 PIN 2×11mm


THJ283 ×2 Spacer 5.1×7.9×2mm






THJ084 ×2
Bearing 5×11×4mm

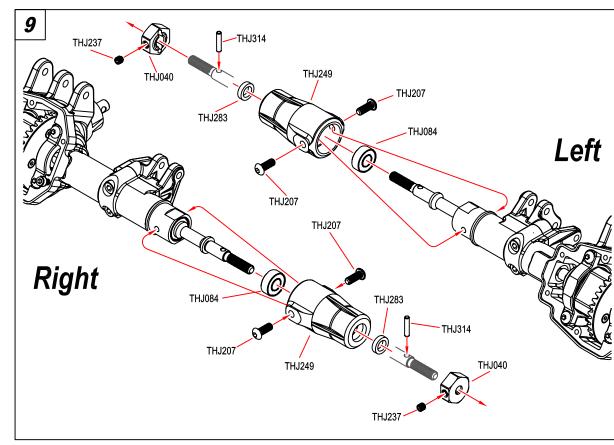


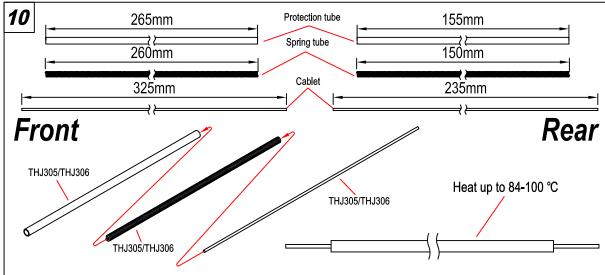




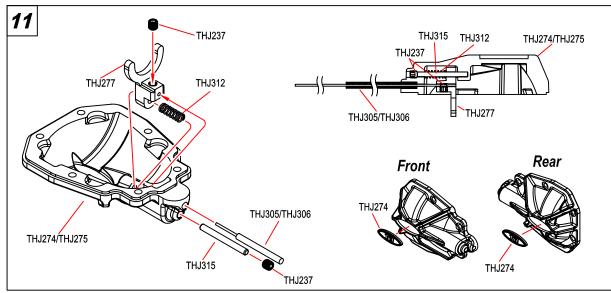



THJ333 ×6

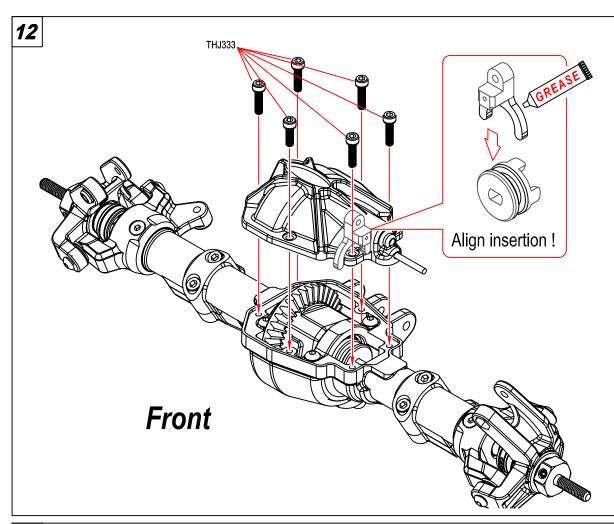




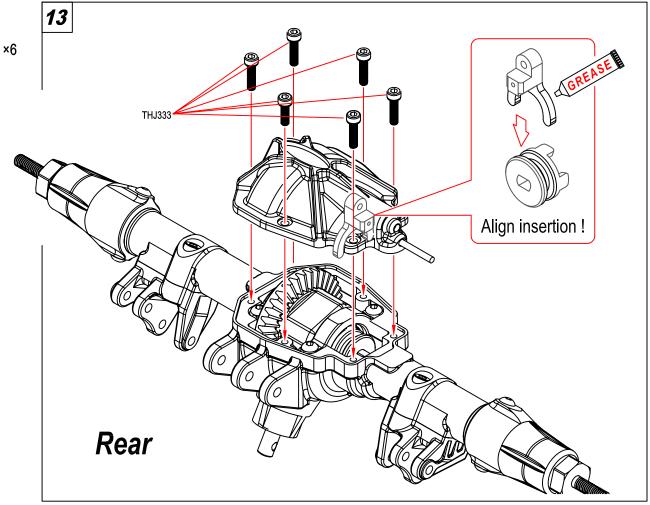

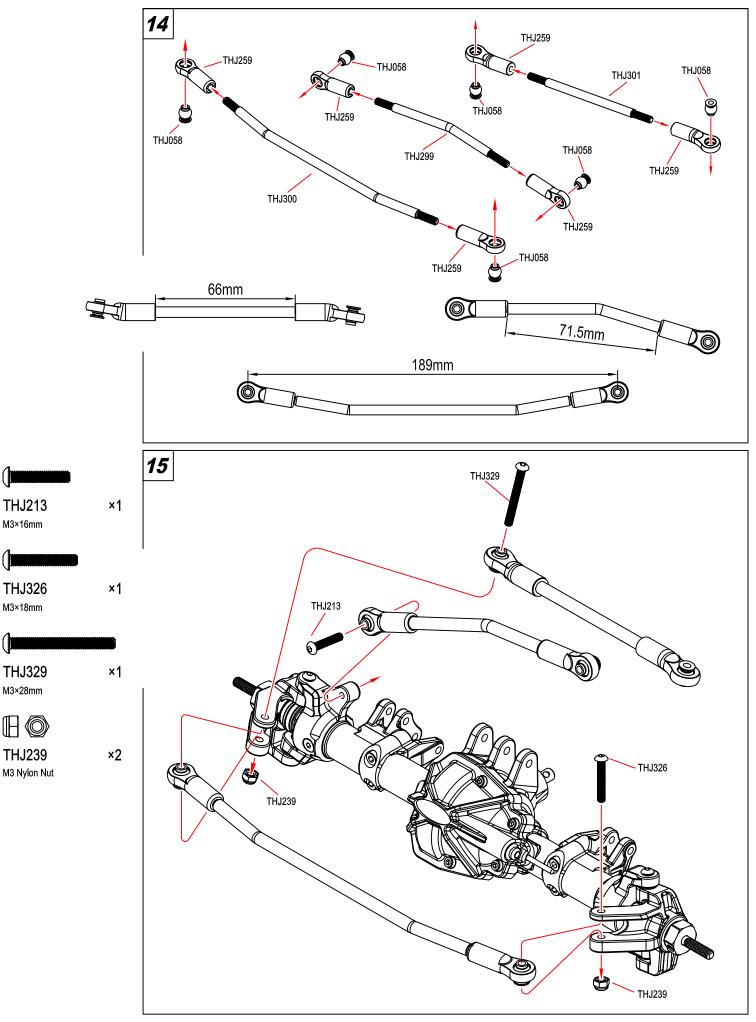

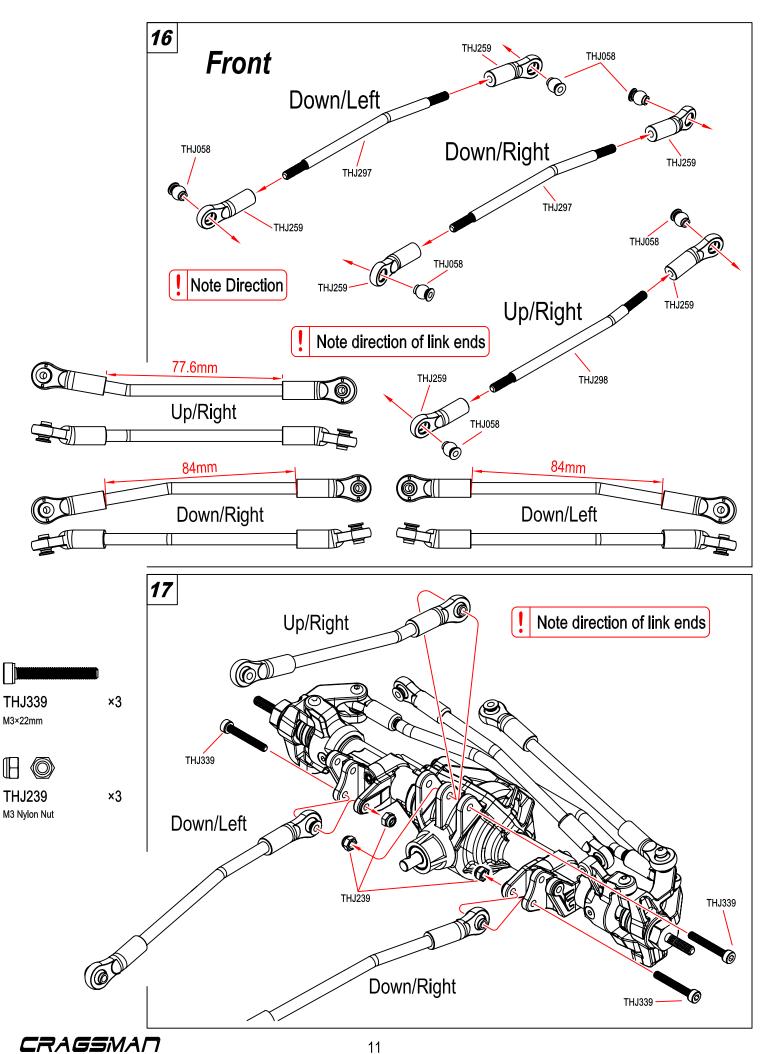

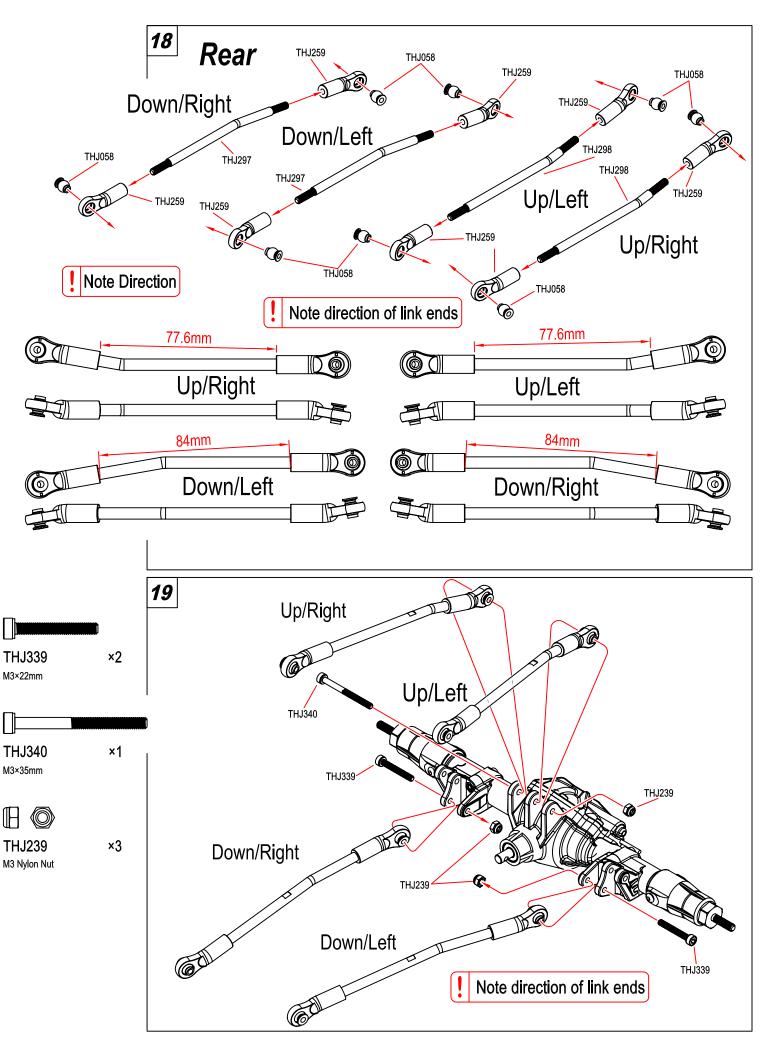



THJ051 ×4
O-ring D14.5×1mm



THJ070 ×4 O-ring D10×1mm



THJ054 ×8
O-ring D6.6×1.9mm




THJ054 ×4 Spacer 3×6.5×1.5mm





THJ054 ×4
Spacer 3×8×2mm





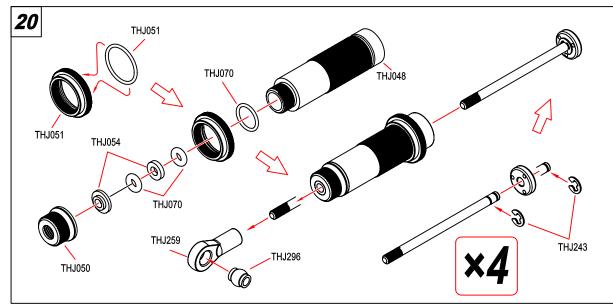

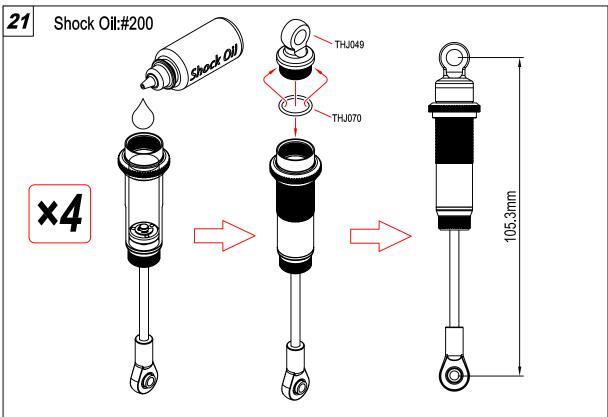

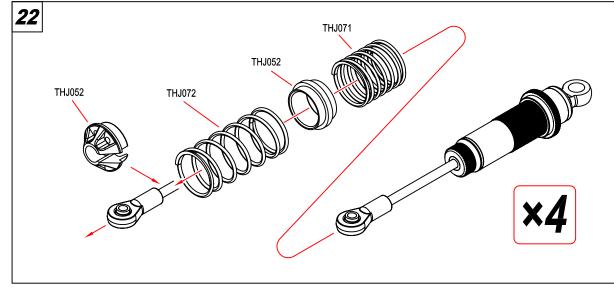






×2


**THJ239** 


M3 Nylon Nut

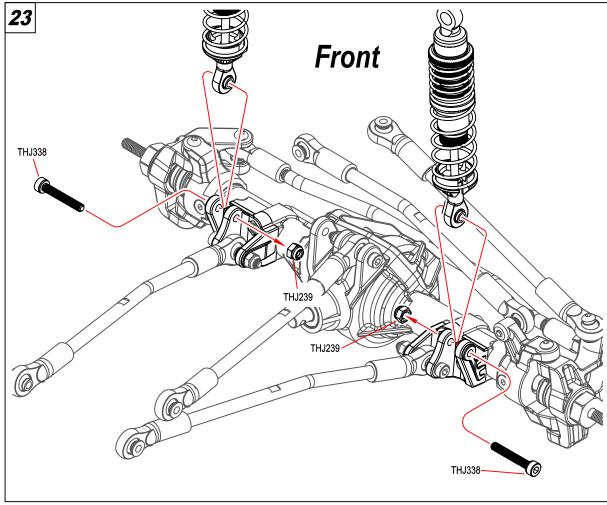

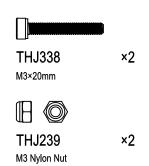

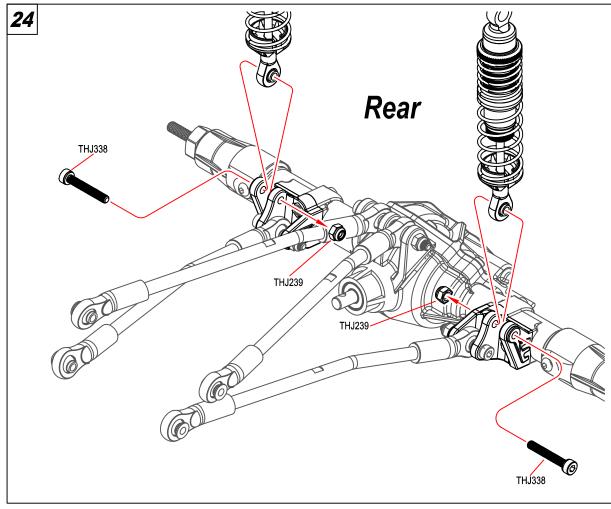


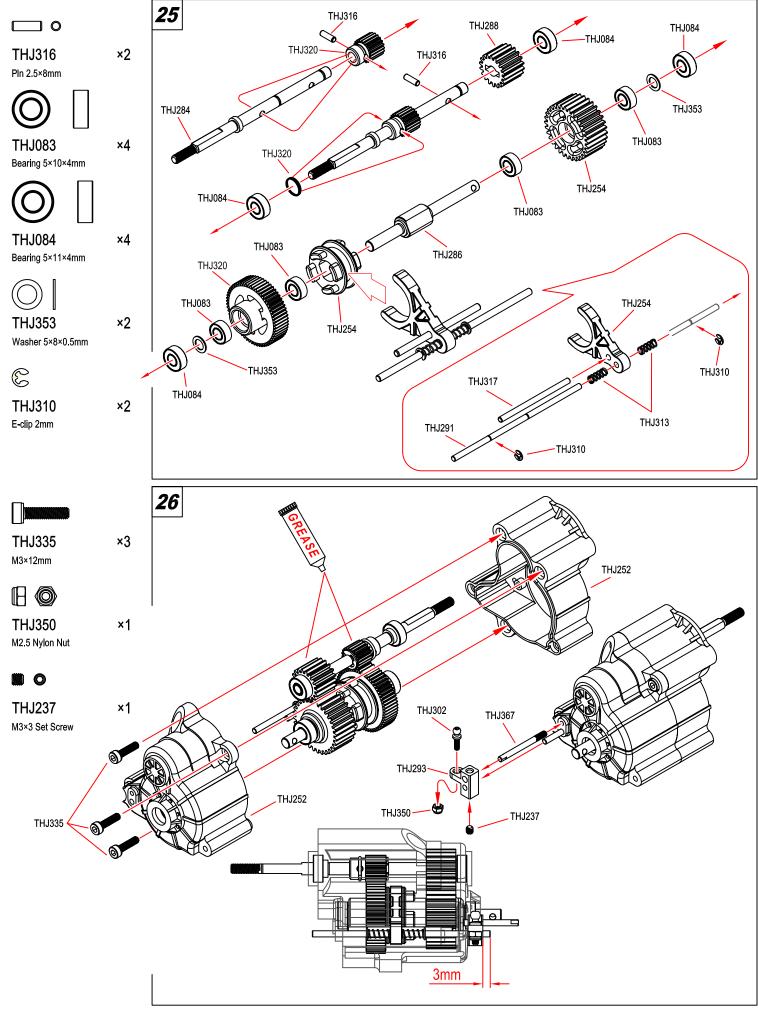

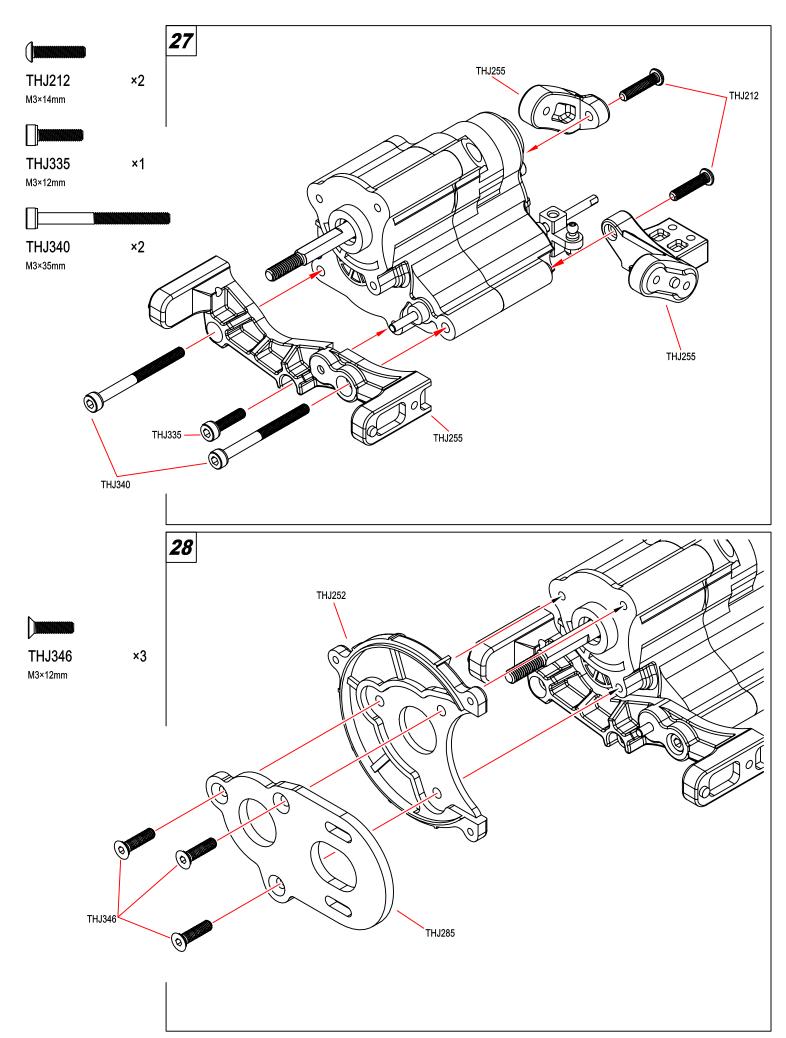






Washer 5×8×0.8mm

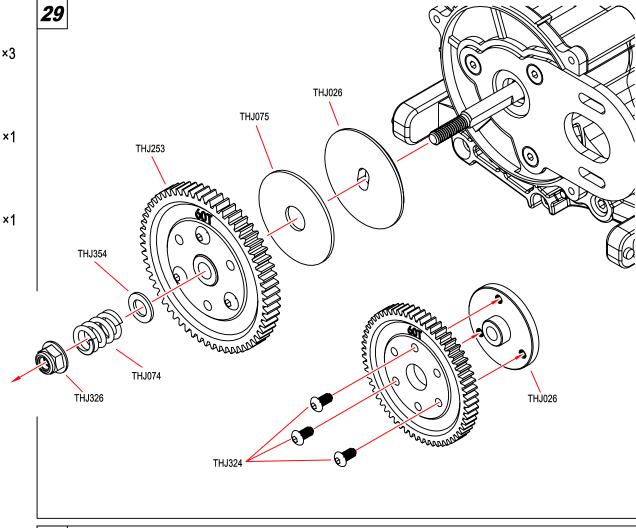





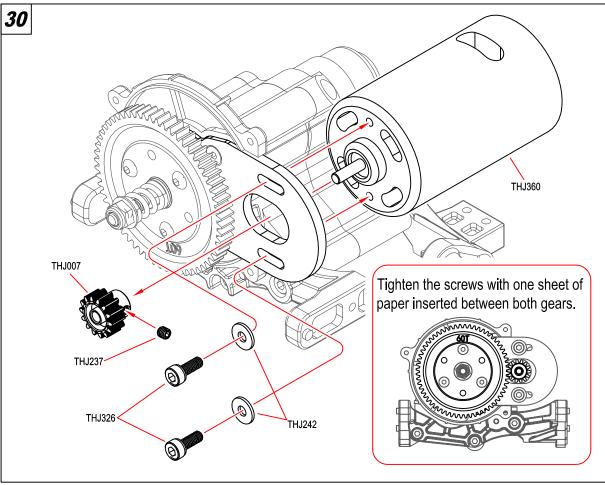


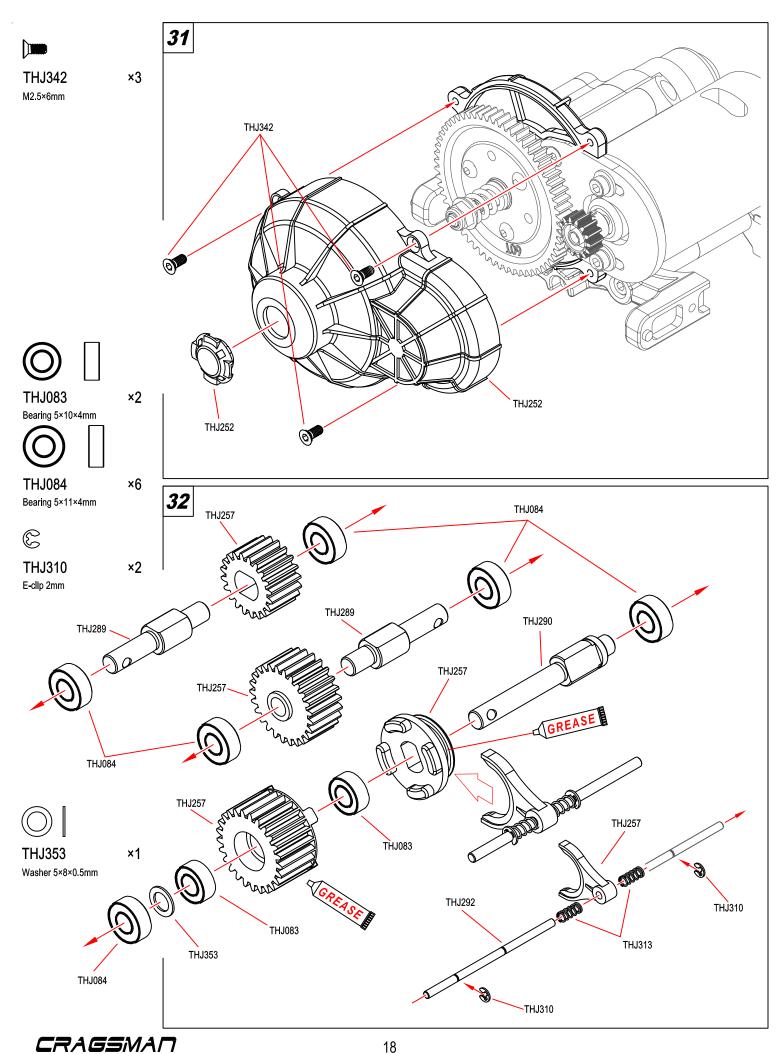


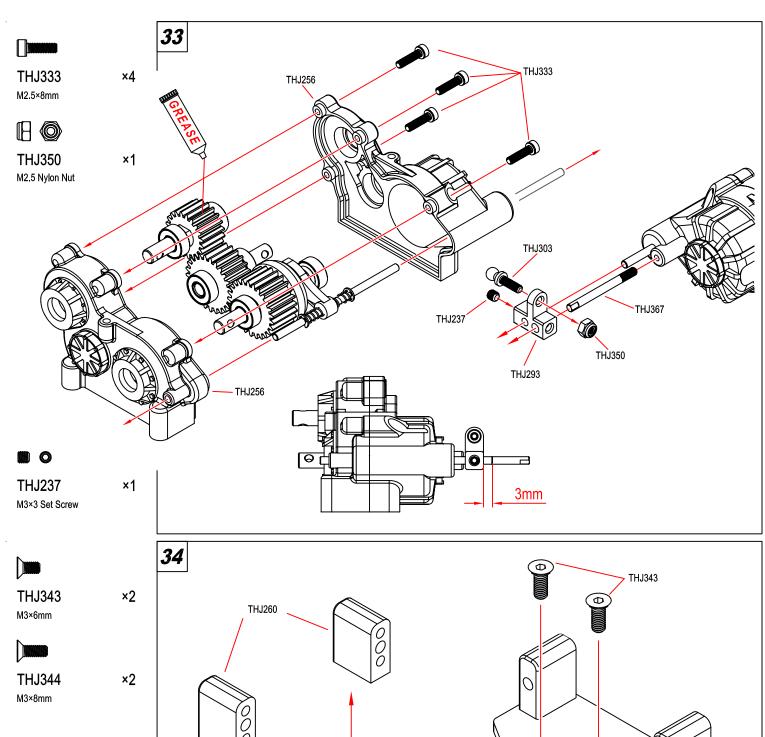


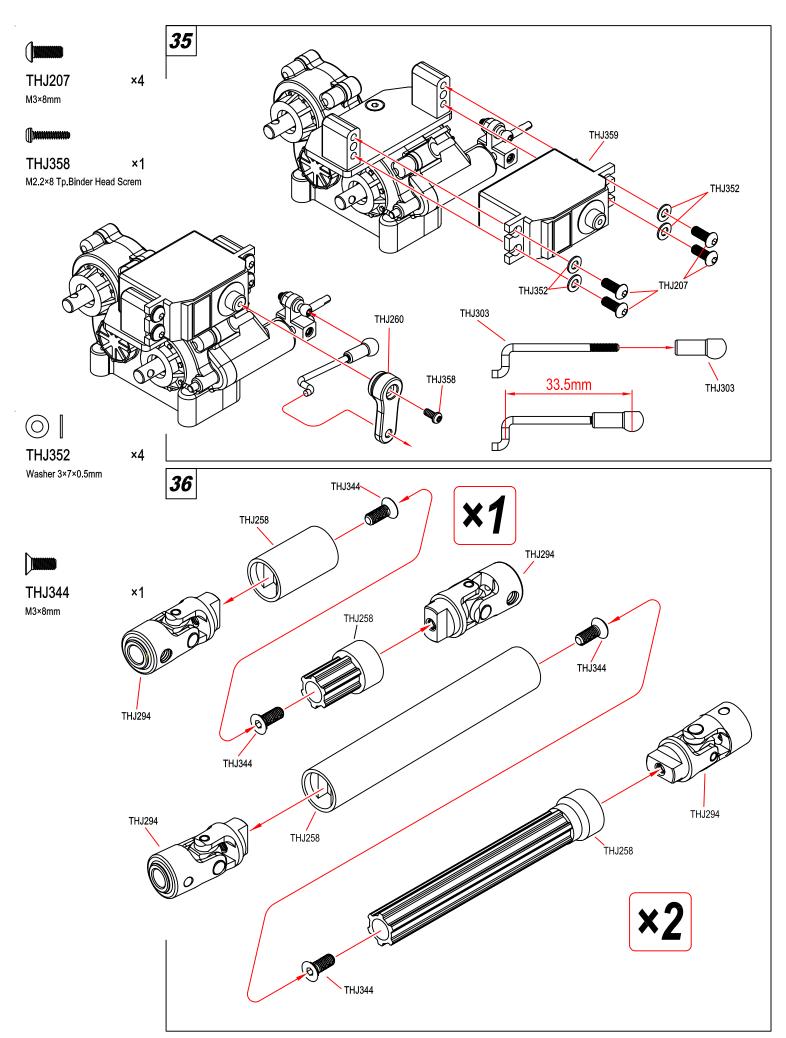

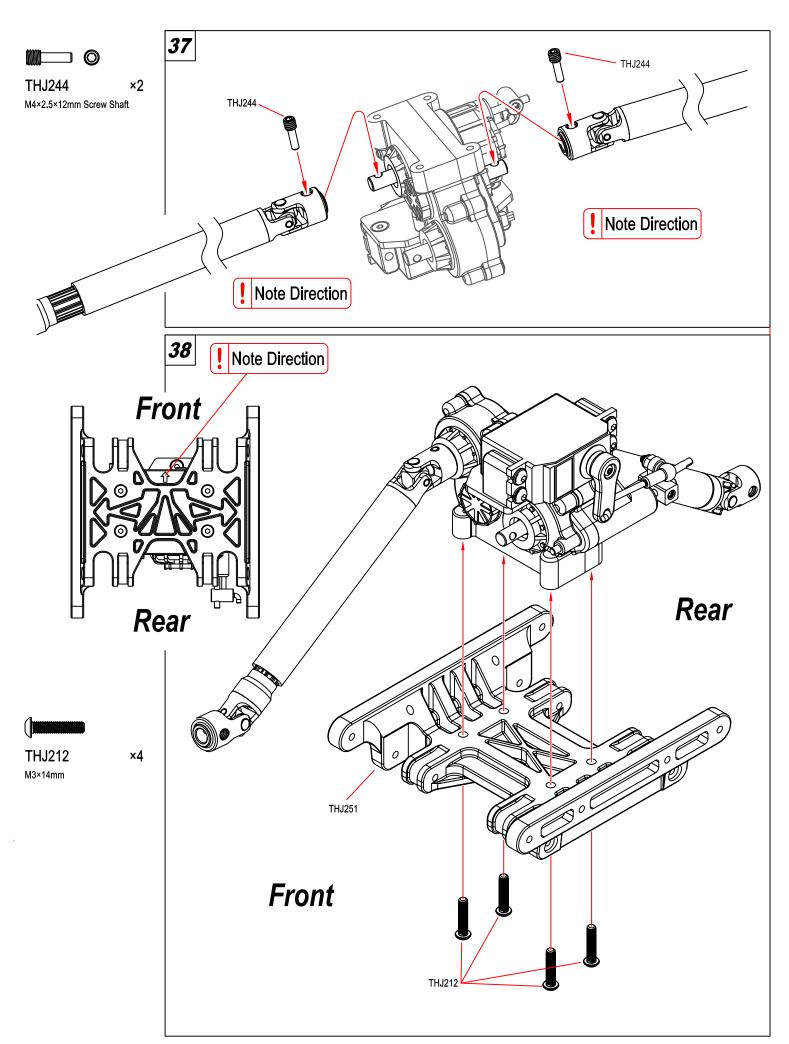


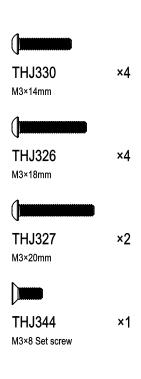


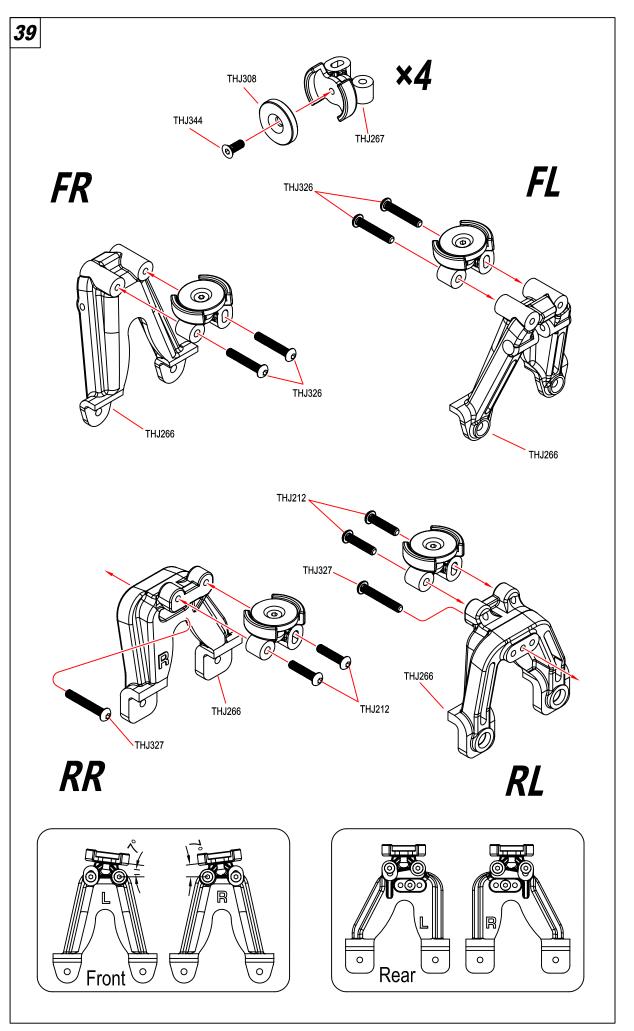


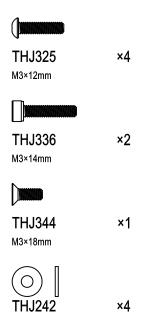


Washer 3.2×8×1mm

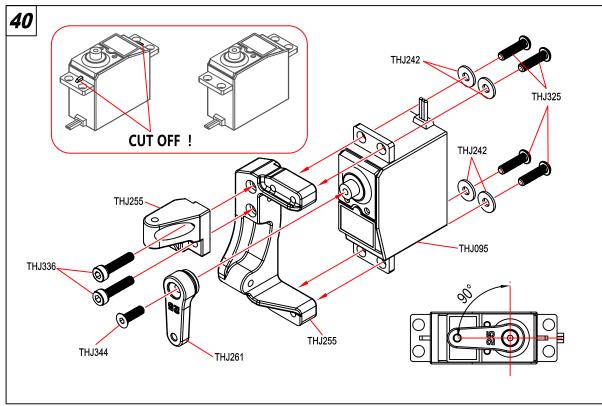

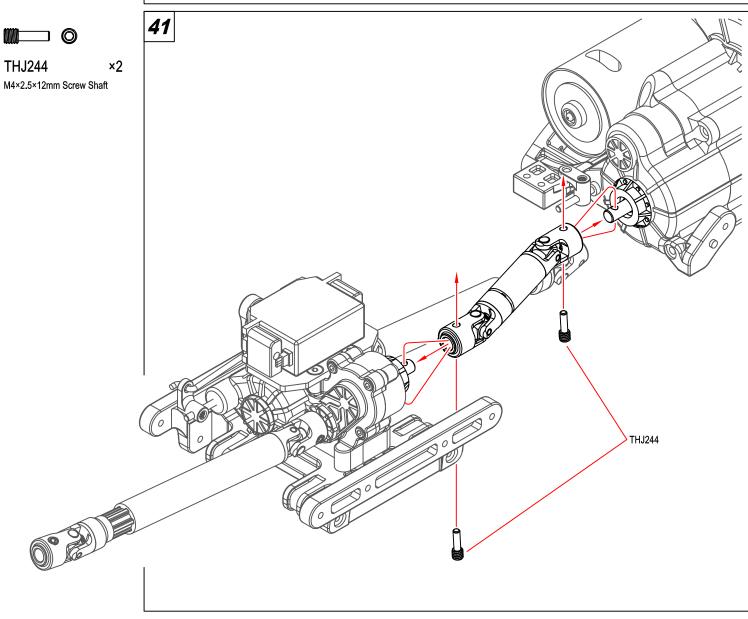


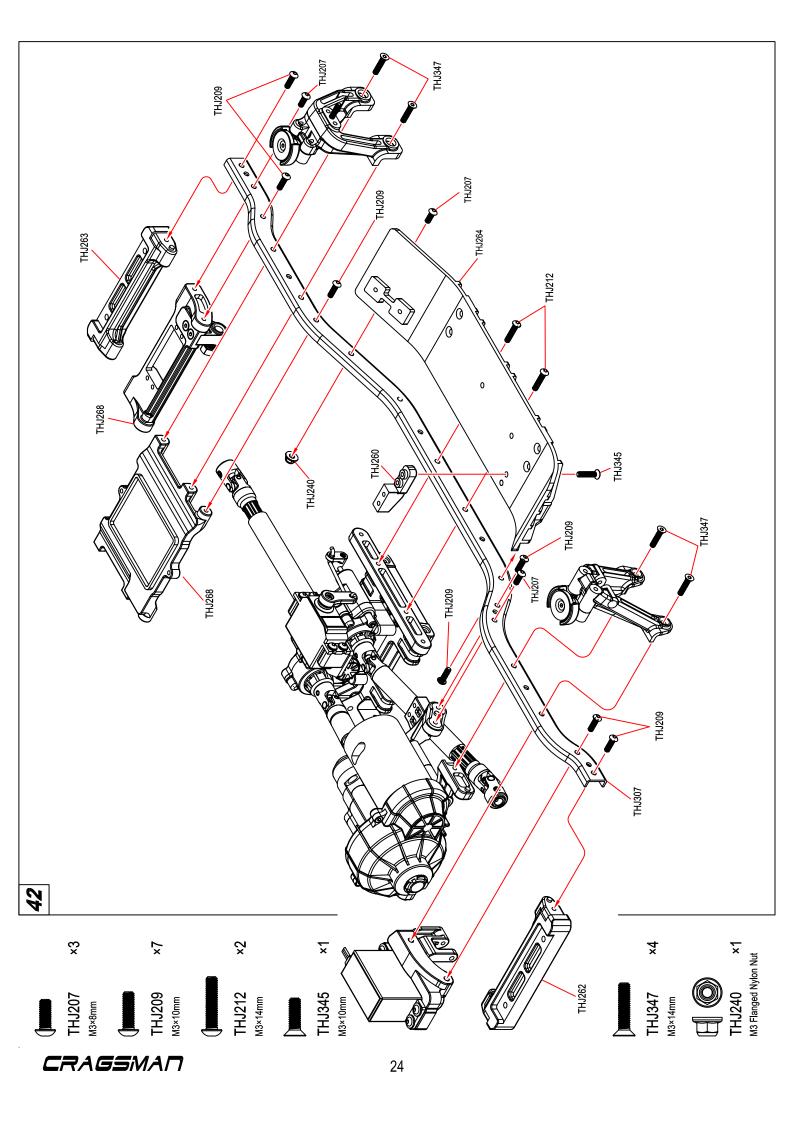


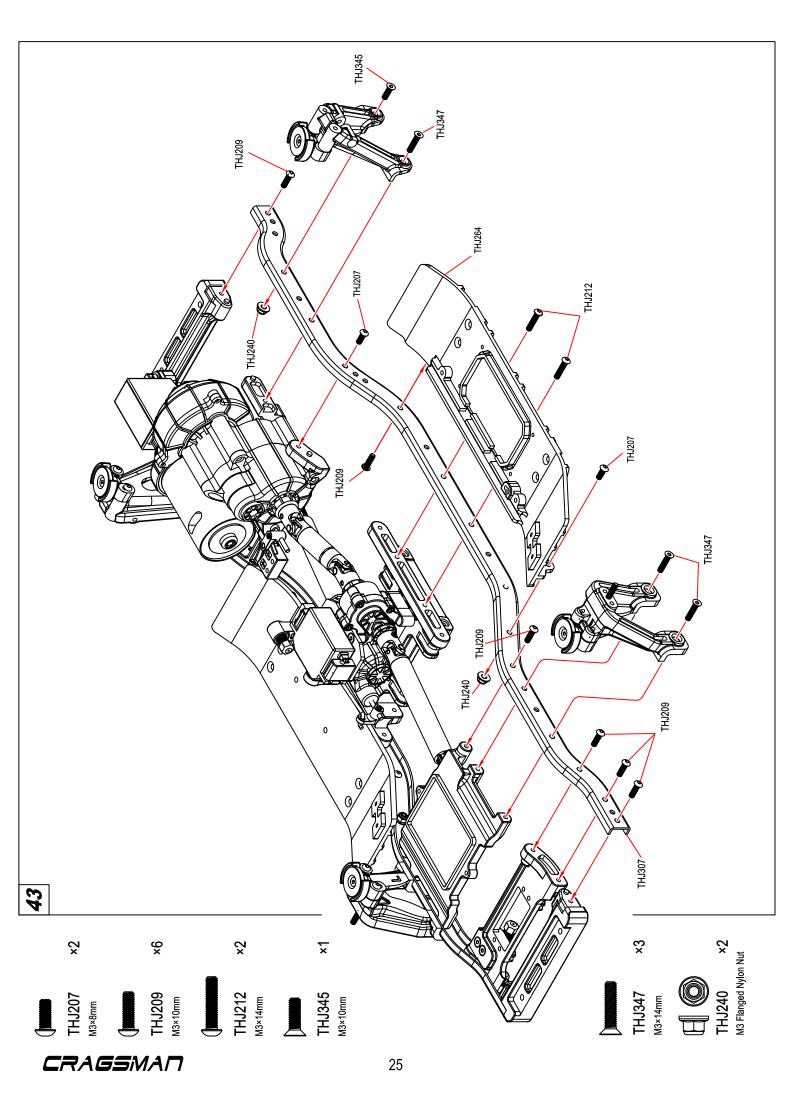



×4

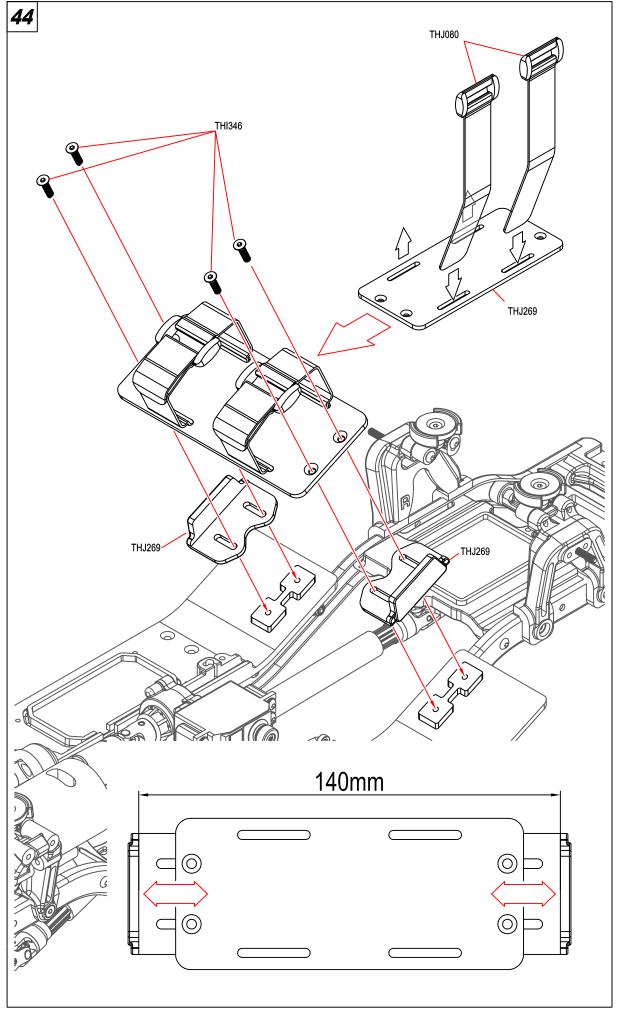

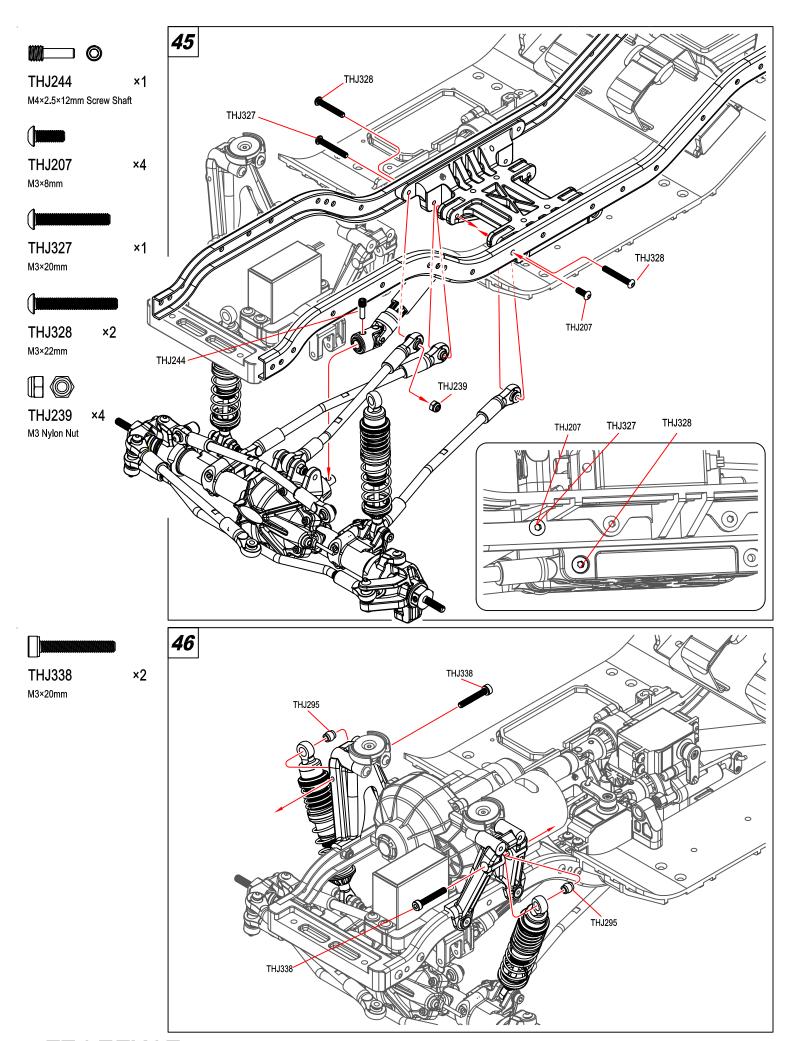


THJ213 M3×16mm


THJ239 ×1
M3 Nylon Nut

**×**1


THJ213

THJ326 ×1

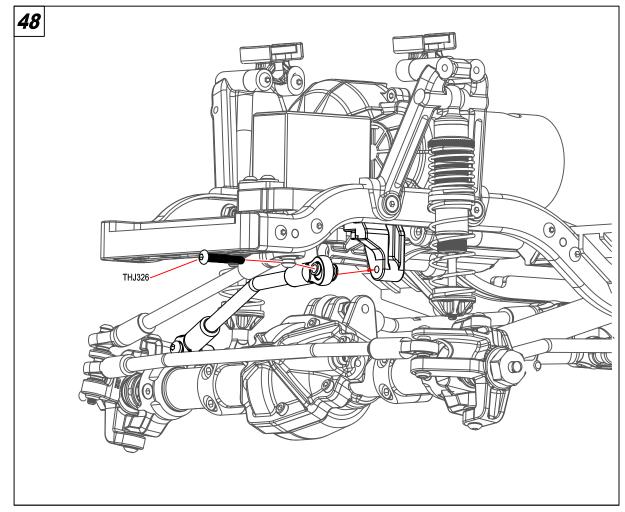

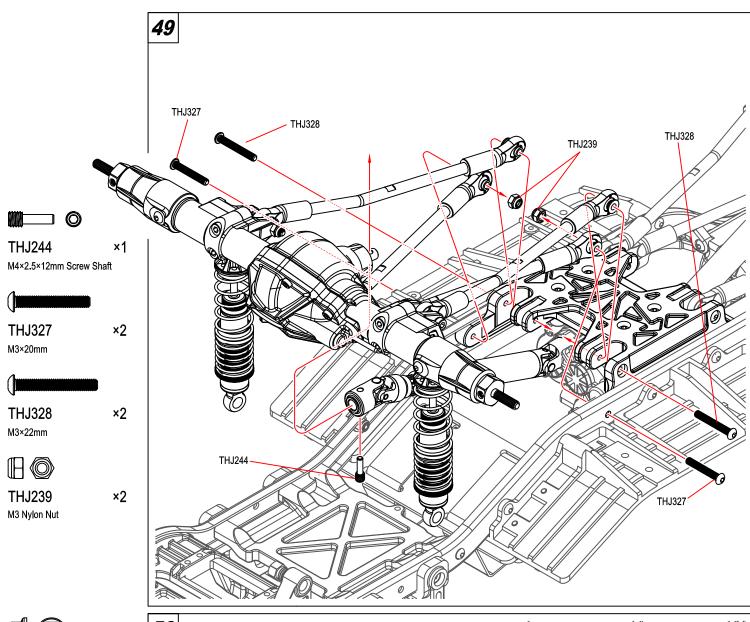



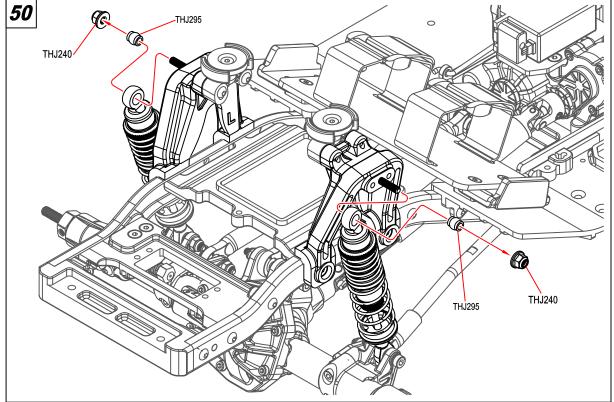



THJ209

M3×10mm



THJ326 ×1

×4


Washer 3×7×0.5mm



THJ326 ×1 M2.5 Nylon Nut



THJ358 ×1
M2.2×8 Tp.Binder Head Screm

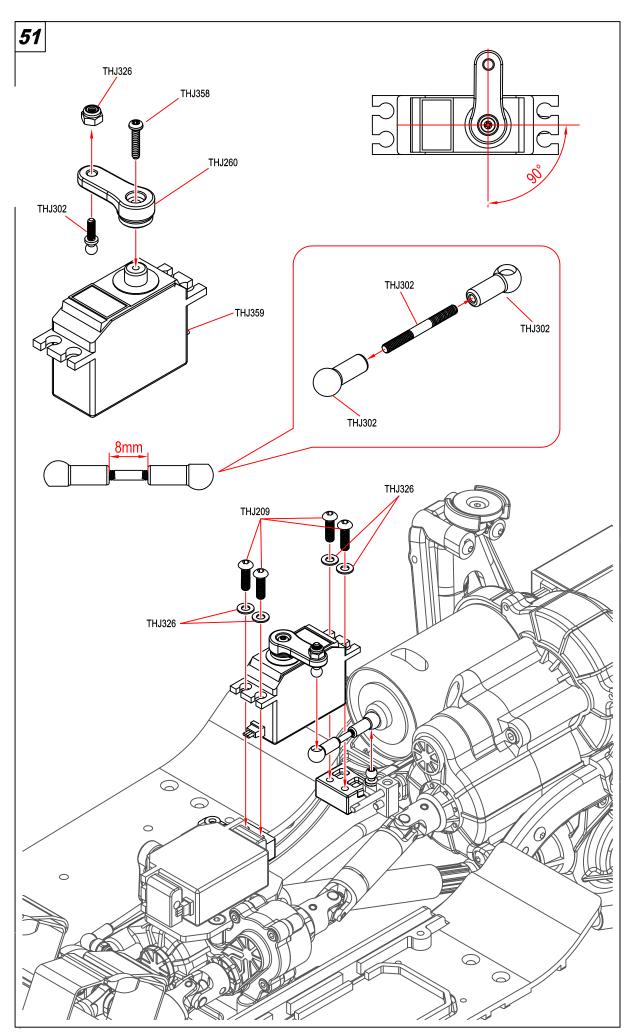



×4

M3×6mm

THJ212 ×2

M3×14mm

THJ213 ×2
M3×16mm

**THJ358** ×2

M2.2×8 Tp.Binder Head Screm


THJ350 ×2 M2.5 Nylon Nut


THJ352 ×2 Washer 3×7×0.5mm

THJ311 ×4
Bearlng 5×8×2.5mm




THJ237 ×1
M3×3 Set Screw

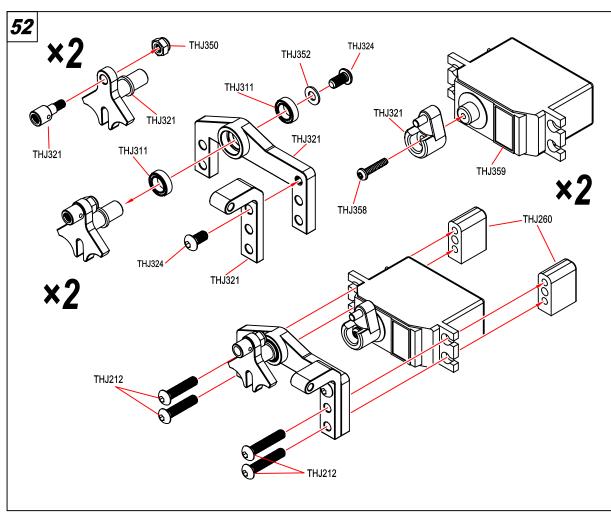

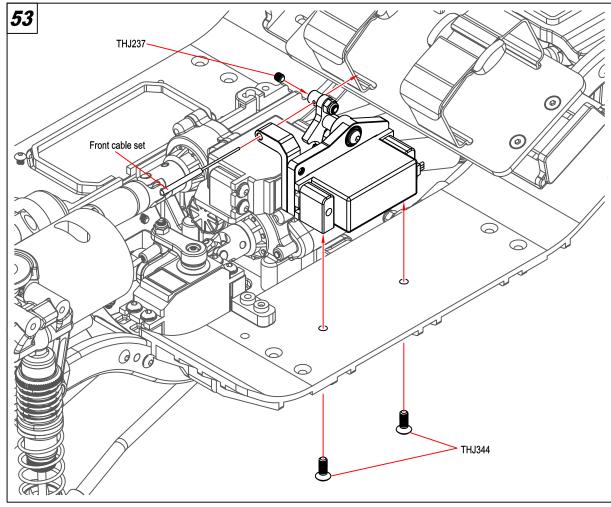



THJ212 ×2
M3×14mm


THJ213 ×2
M3×16mm

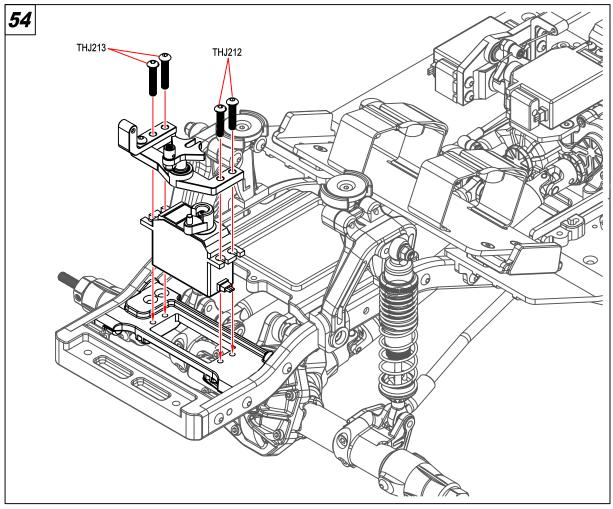


THJ237 ×1
M3×3 Set Screw

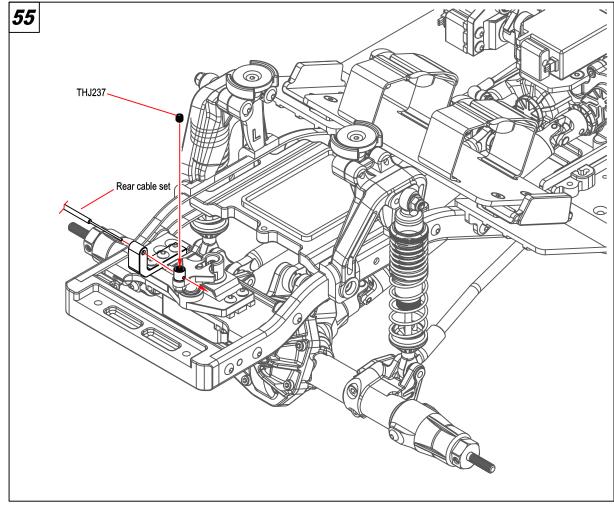


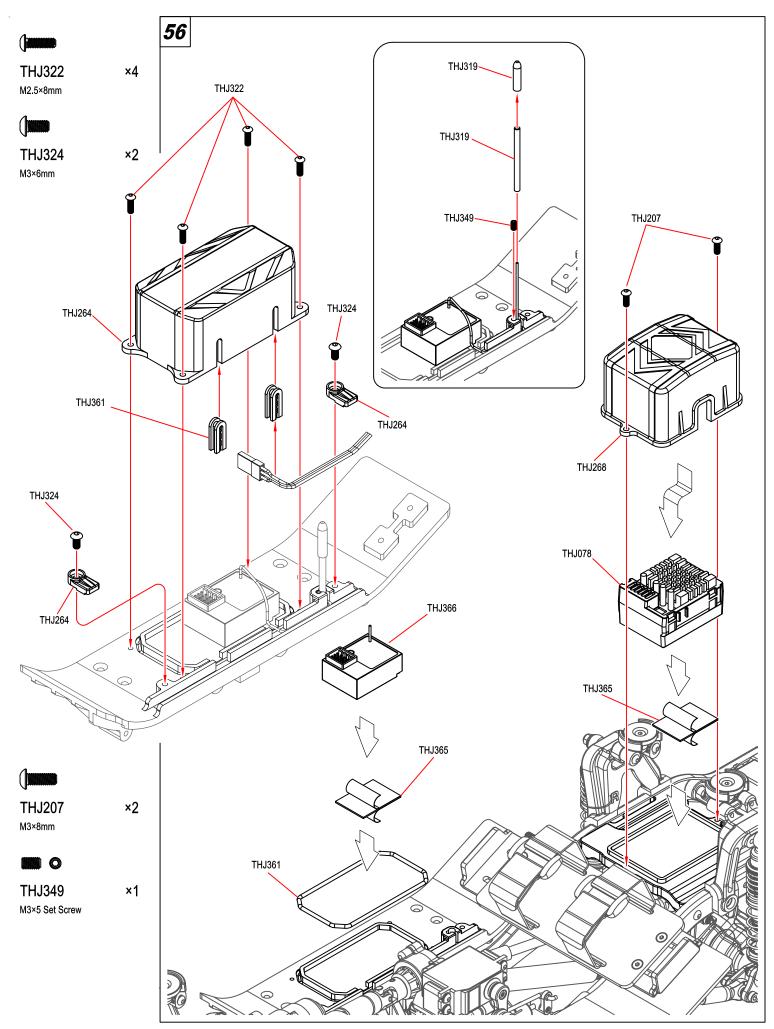

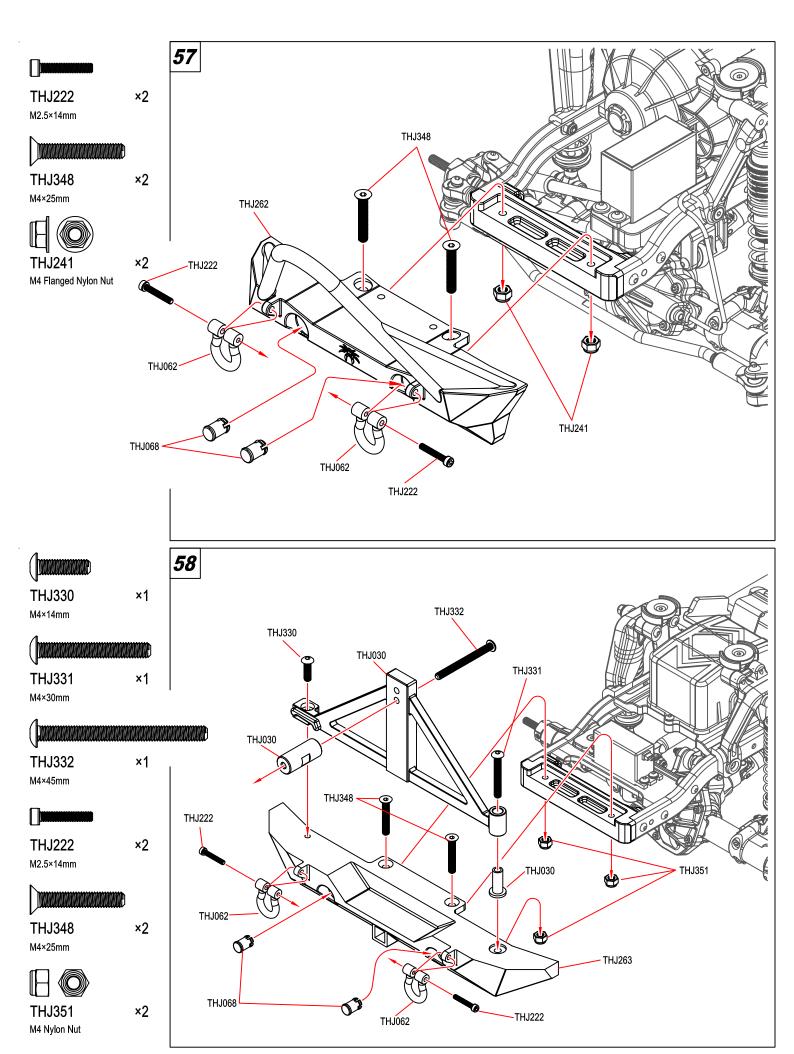


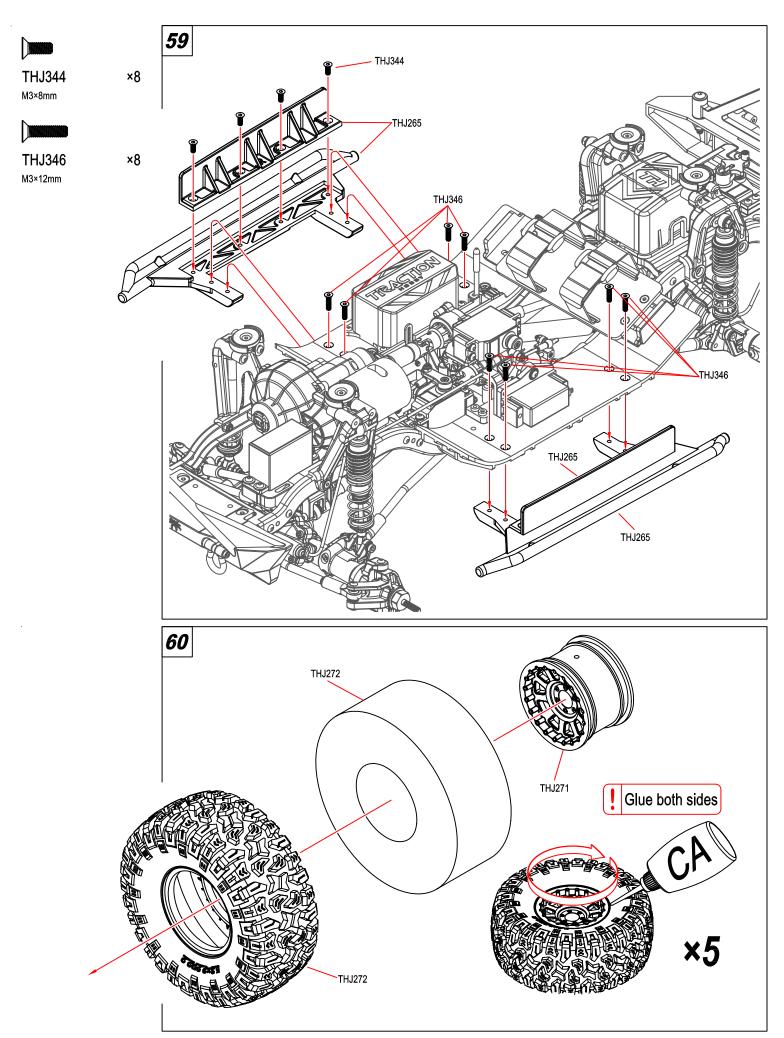





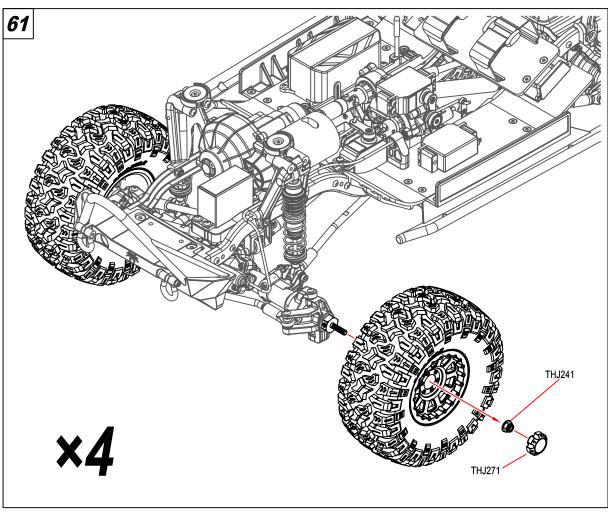




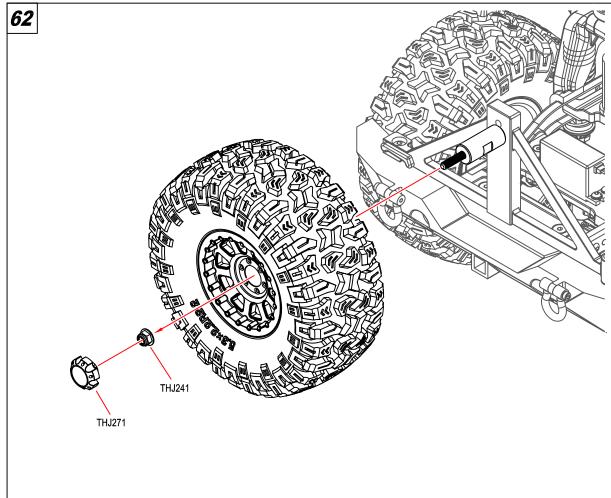


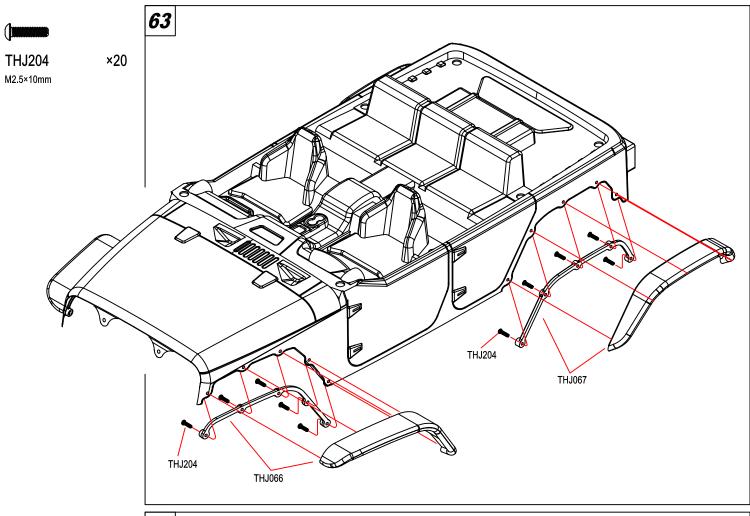

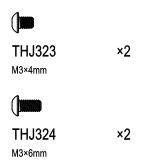


THJ218 ×4
M2×6mm

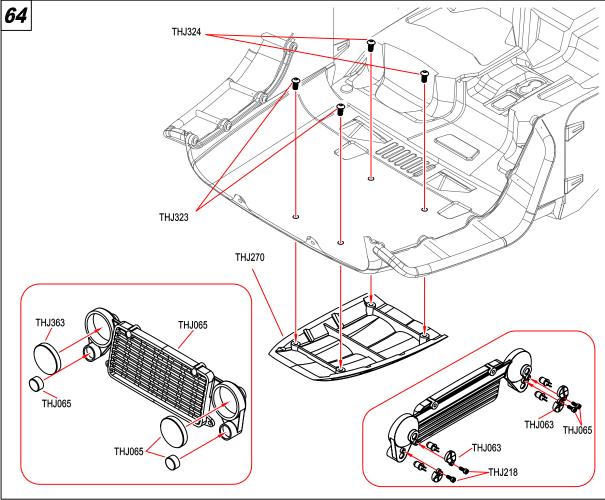


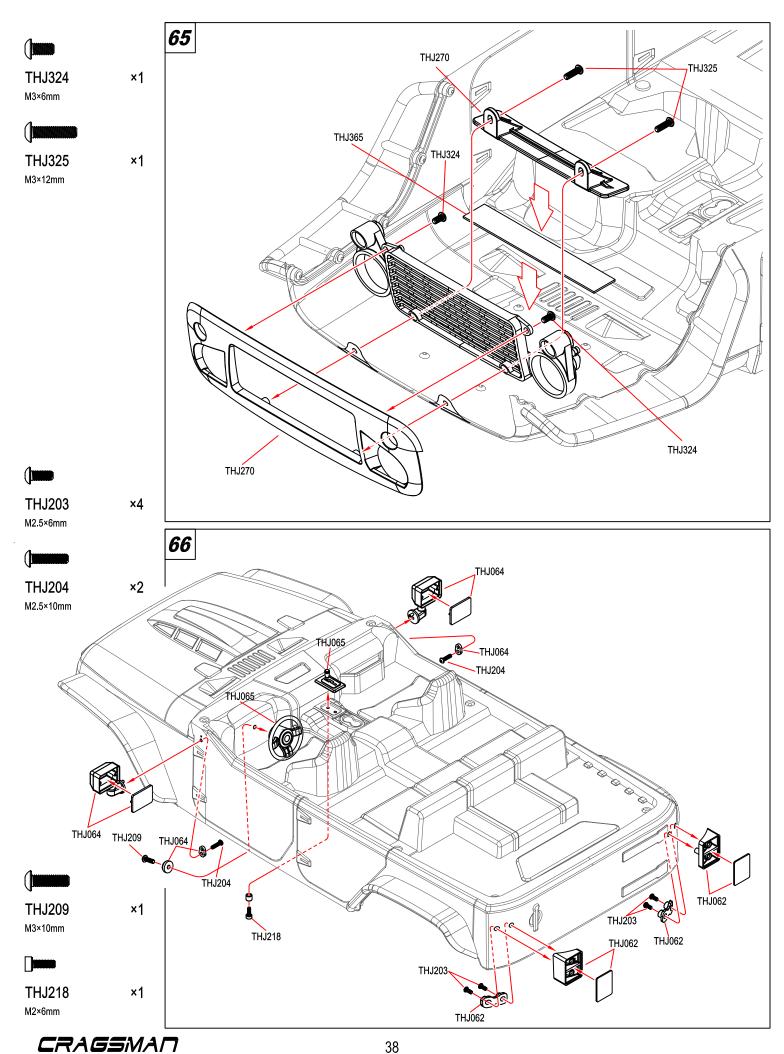

THJ213 ×8
M3×16mm

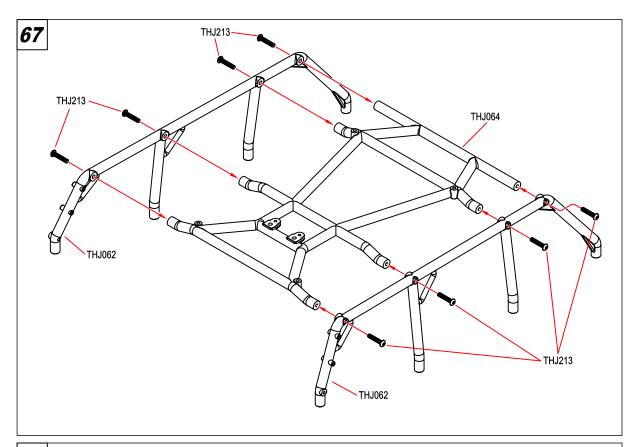




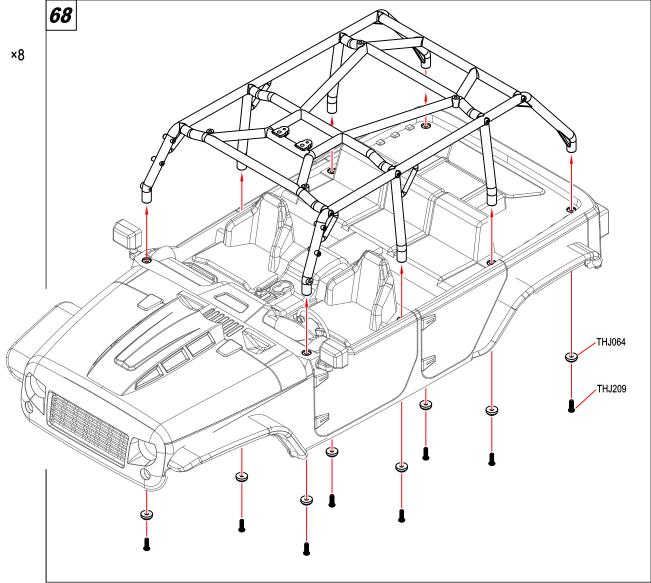

THJ362 ×15
M1.6×4mm


8 🕲

THJ362 ×15
M1.6 Nut

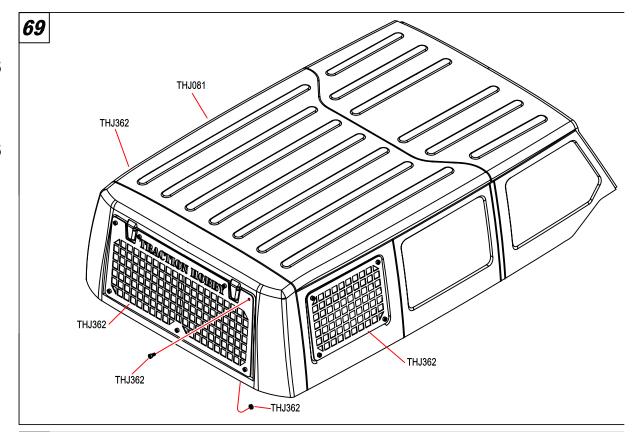

THJ207


THJ207 ×4
M3×8mm

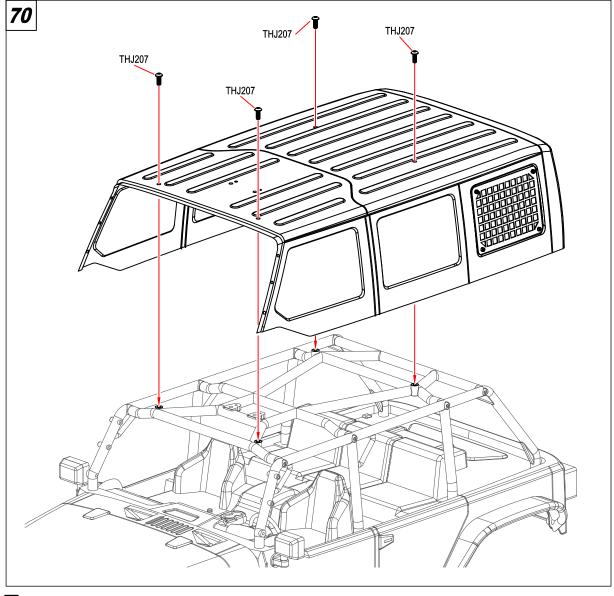


**THJ326** ×4 M2×6mm


**THJ326** ×6 M2.5×10mm


**71** 

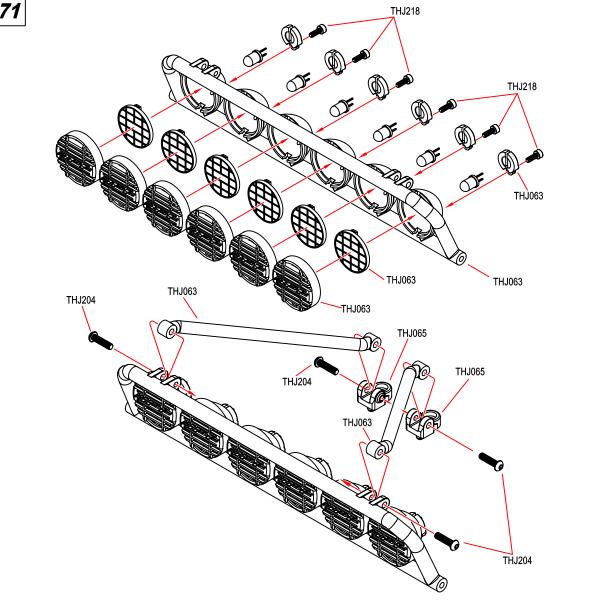



**THJ209** ×2 M3×10mm

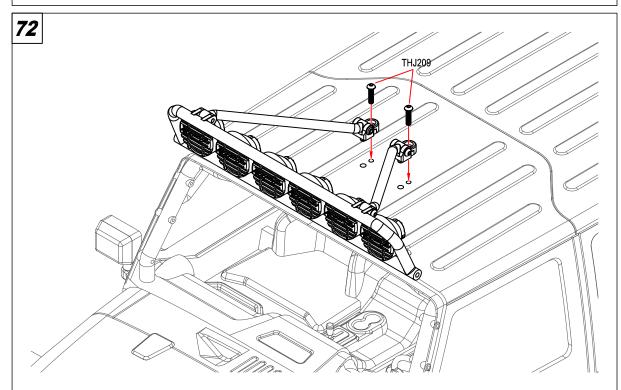


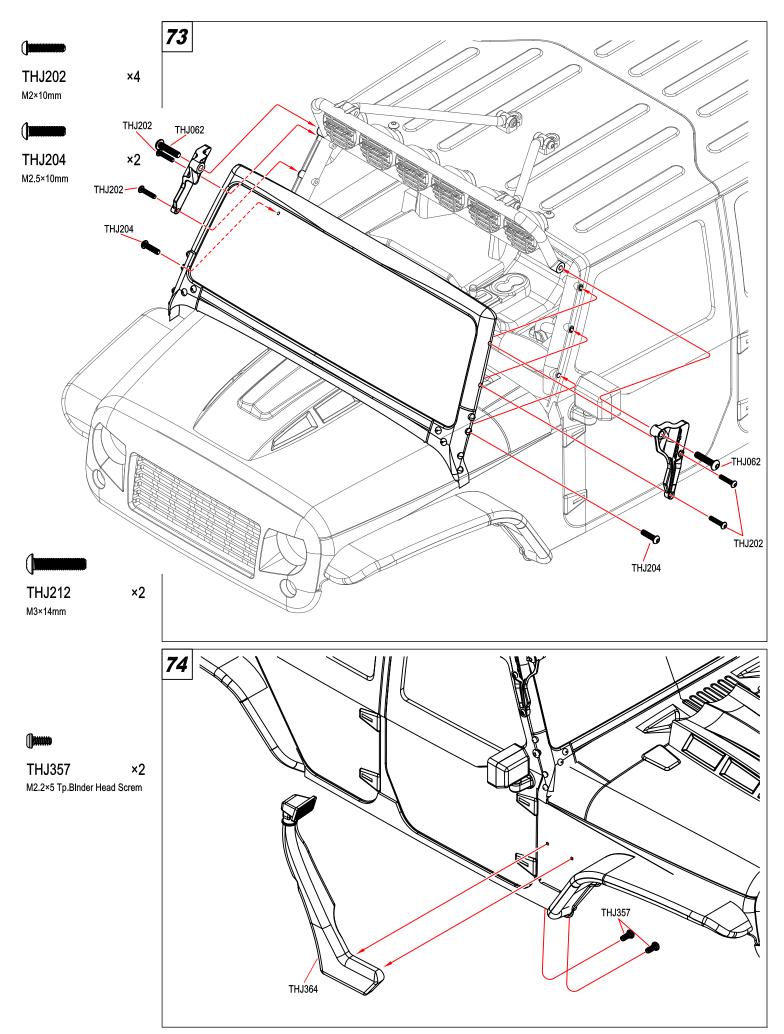


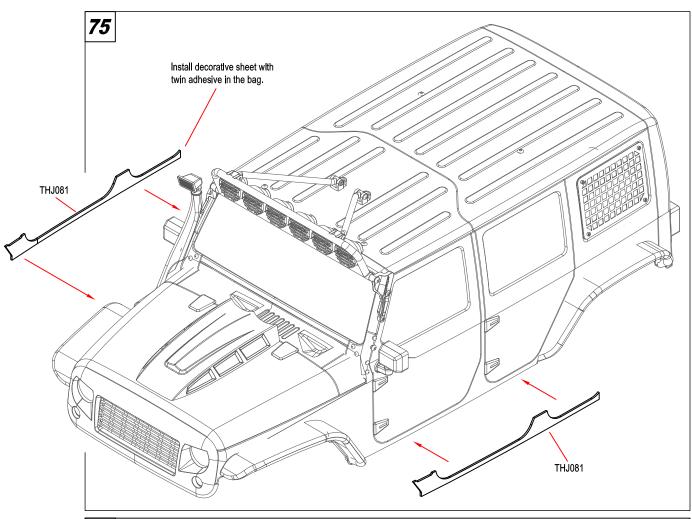

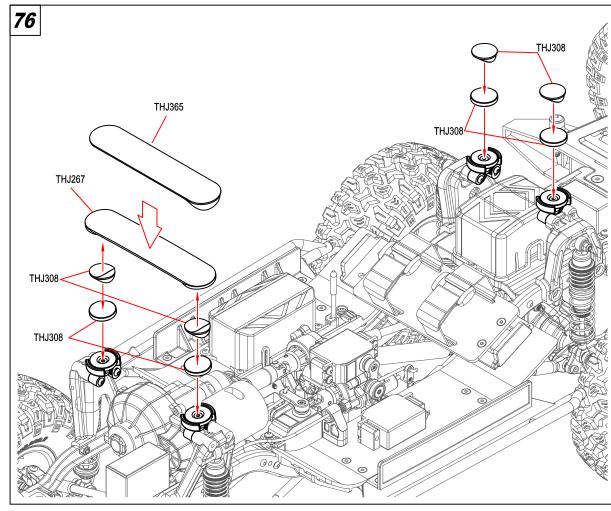

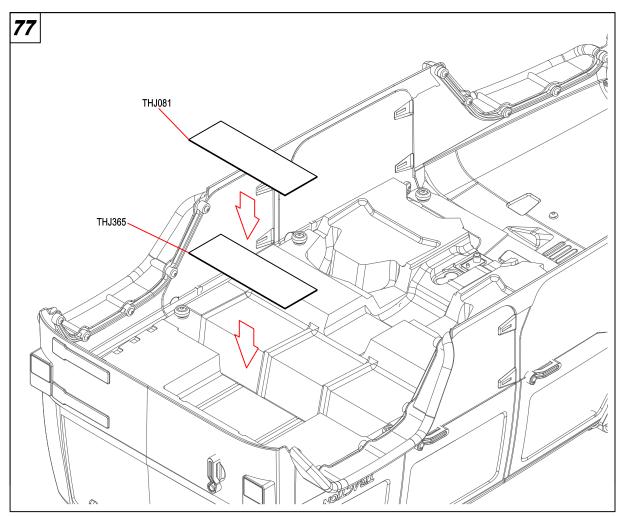

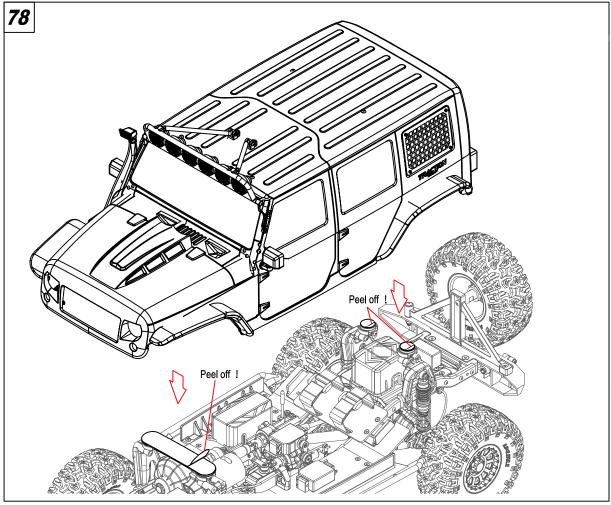

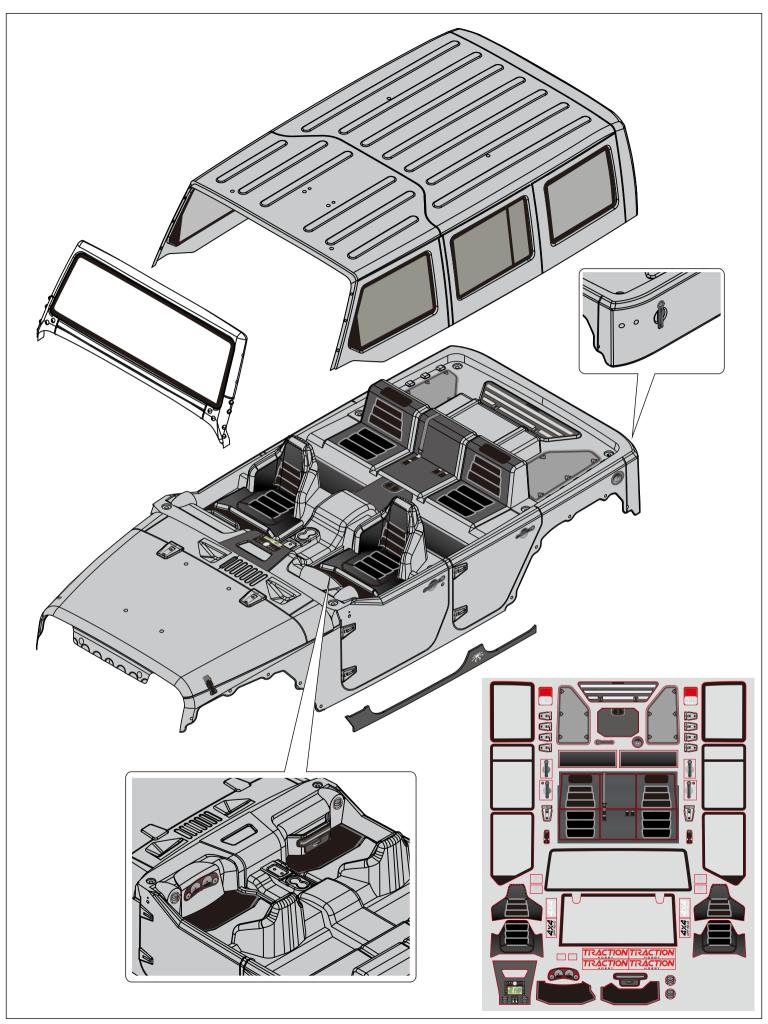



Differntial Pads (2pcs)

C Hub carrier set (1pc)

Steering block

Linkage seat

60T Spur gear

Transfer box set

Driveshaft set

Linkage ball set

Servo arm set

Front bumper set

Rear bumper set

Servo arm

Rear axle lock-out

Frame brace plate

2 speed gear box set

2 speed gear box gear set

2 speed gear box brace

Transfer box gear set

THJ246

THJ247

THJ248

THJ249

THJ250

THJ251

THJ252

THJ253

THJ254

THJ255

THJ256

THJ257

THJ258

THJ259

THJ260

THJ261

THJ262

THJ263

Pin 2.5×43mm (5pcs)

Pin 3×23mm (10pcs) Antenna pipe set (10pcs)

First gear set (1pc)

Self-lock device of diff lock (1pc)

M2.5×8 Button head screw (10pcs)

M3×4 Button head screw (10pcs)

M3×6 Button head screw (10pcs)

M3×12 Button head screw (10pcs)

M3×18 Button head screw (10pcs)

M3×20 Button head screw (10pcs)

M3×22 Button head screw (10pcs)

M3×28 Button head screw (10pcs)

M4×14 Button head screw (10pcs)

M4×30 Button head screw (10pcs)

M4×45 Button head screw (10pcs)

M2.5×8 Cap head screw (10pcs)

M3×8 Cap head screw (10pcs)

THJ317

THJ318

THJ319

THJ320

THJ321

THJ322

THJ323

THJ324

THJ325

**THJ326** 

THJ327

THJ328

THJ329

THJ330

THJ331

THJ332

**THJ333** 

THJ334

