 




Q 1 5 7

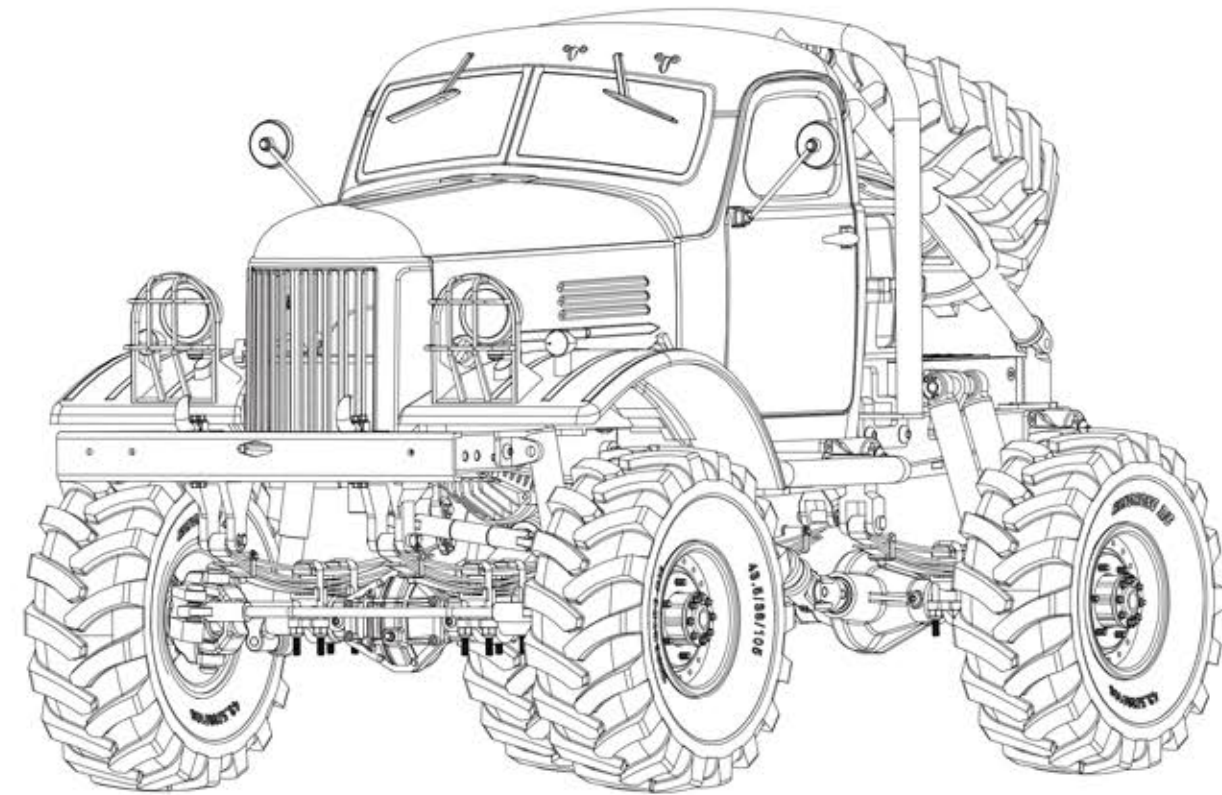

 
Q 1 5 7

1/12TH SCALE R/C 4X4 LIGHT TRUCK




推荐工具

RECOMMENDED TOOLS

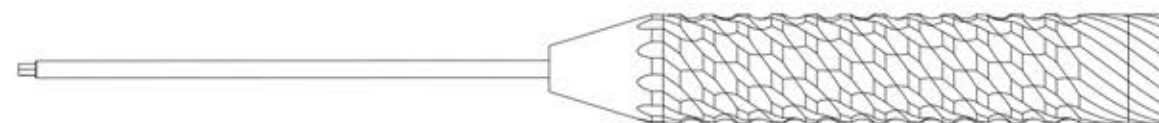

内六角螺丝刀
HEX DRIVERS (1.5MM, 2MM, 2.5MM)

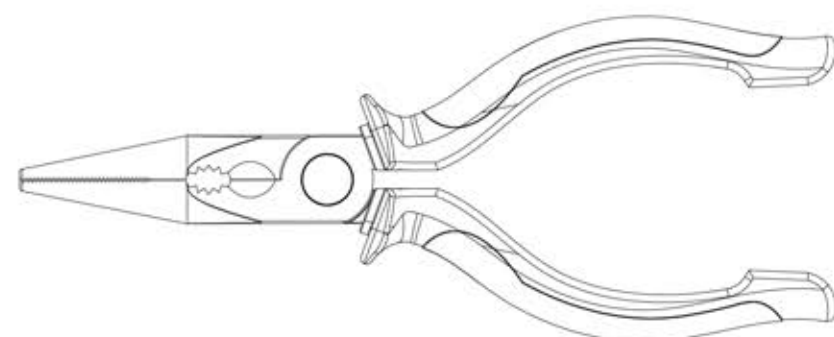 


尖嘴钳
LONG NOSE PLIERS



套筒

 WRENCH (2.0MM, 2.5MM)
黑色螺丝盒中配有原厂套筒

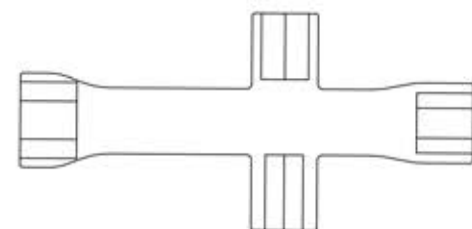

十字套筒
CROSS WRENCH

安装提示:

TIPS FOR ASSEMBLY:

使用好质量的螺丝刀，避免磨损螺丝头

USE GOOD QUALITY HEX DRIVERS TO AVOID STRIPPING SCREW HEADS.







当将金属螺丝拧进金属部件时，请使用螺纹胶

USE THREAD LOCK WHEN PUTTING METAL SCREWS INTO METAL PARTS.









不要将螺丝拧太紧，否则将会磨损螺纹

DO NOT OVER TIGHTEN SCREWS OTHERWISE YOU MAY STRIP THE THREAD.

FJQ157-A1-CHM(x6)

-  M2x4mm 杯头内六角 x2
-  M2x6mm 杯头内六角 x6
-  M1.6x6mm 杯头内六角 x90
-  M3x32mm 杯头内六角 x1
-  M3x30mm 杯头内六角 x3
-  M4x8mm 杯头内六角 x4





FJQ157-B1-TM(x8)

-  M3x4mm 半圆头内六角 x4
-  M3x6mm 半圆头内六角 x18
-  M3x8mm 半圆头内六角 x5
-  M3x10mm 半圆头内六角 x5
-  M3x12mm 半圆头内六角 x6
-  M3x14mm 半圆头内六角 x2
-  M2.5x6mm 半圆头内六角 x26
-  M2.5x8mm 半圆头内六角 x4

FJQ157-C1-HWM(x2)

-  M2x8mm 外六角 x4
-  M2x6mm 外六角 x4

FJQ157-D1-KM(x4)

-  M2x6mm 平头内六角 x16
-  M2x4mm 平头内六角 x12
-  M3x6mm 平头内六角 x2
-  M3x8mm 平头内六角 x4


FJQ157-E1-JM(x1)

-  M3x10mm 机米螺丝 x6


FJQ157-F1-CH(x4)

-  M1.6螺母 x90
-  M2螺母 x30
-  M3防松螺母 x4
-  2mm 卡簧 x14

 
70

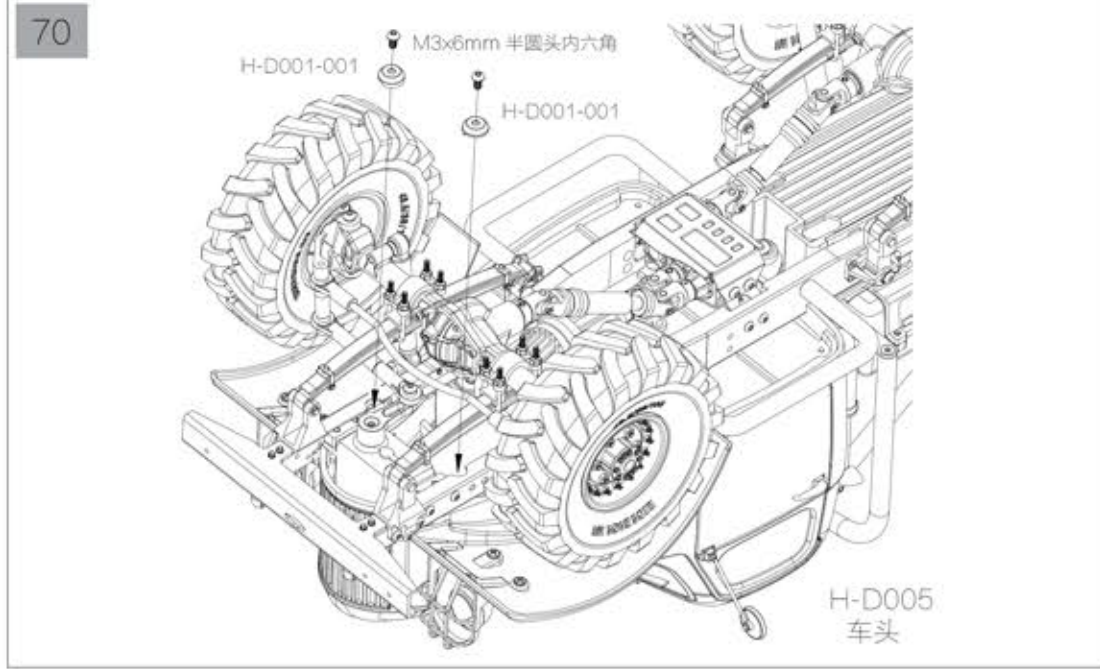


71

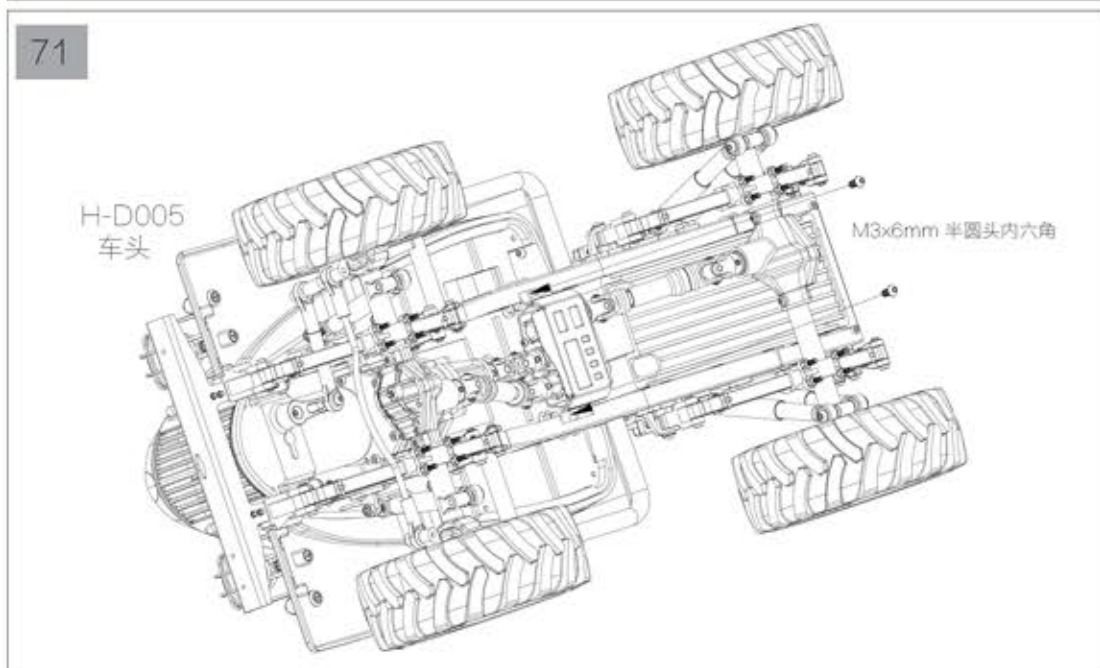 


72

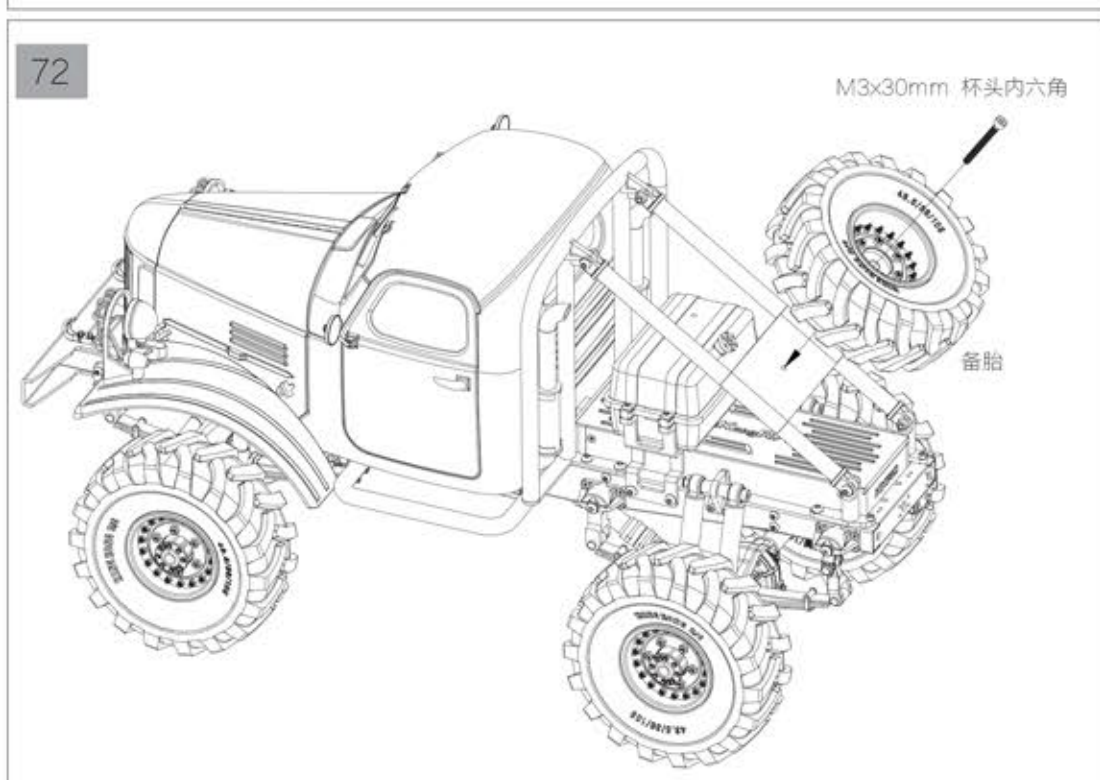 


1

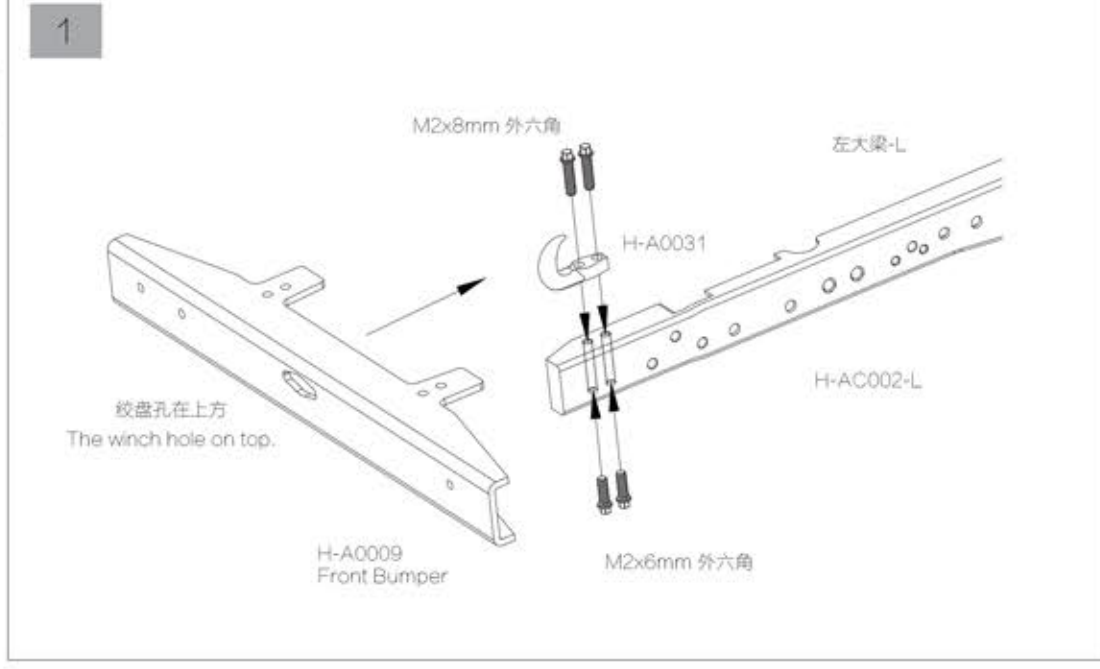 


2

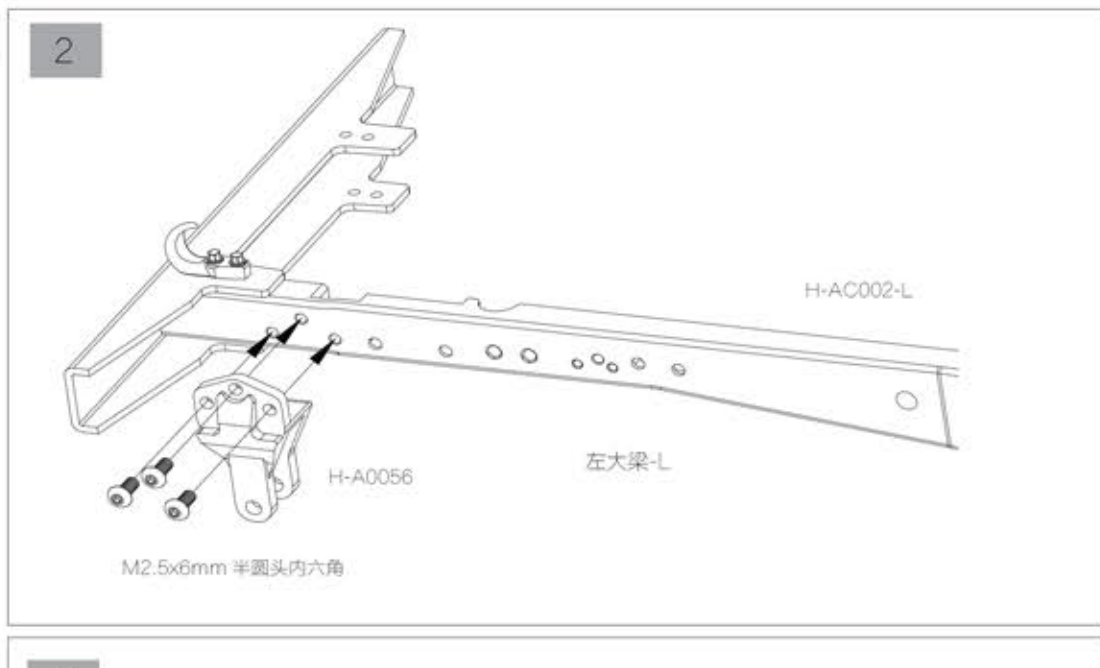 


3

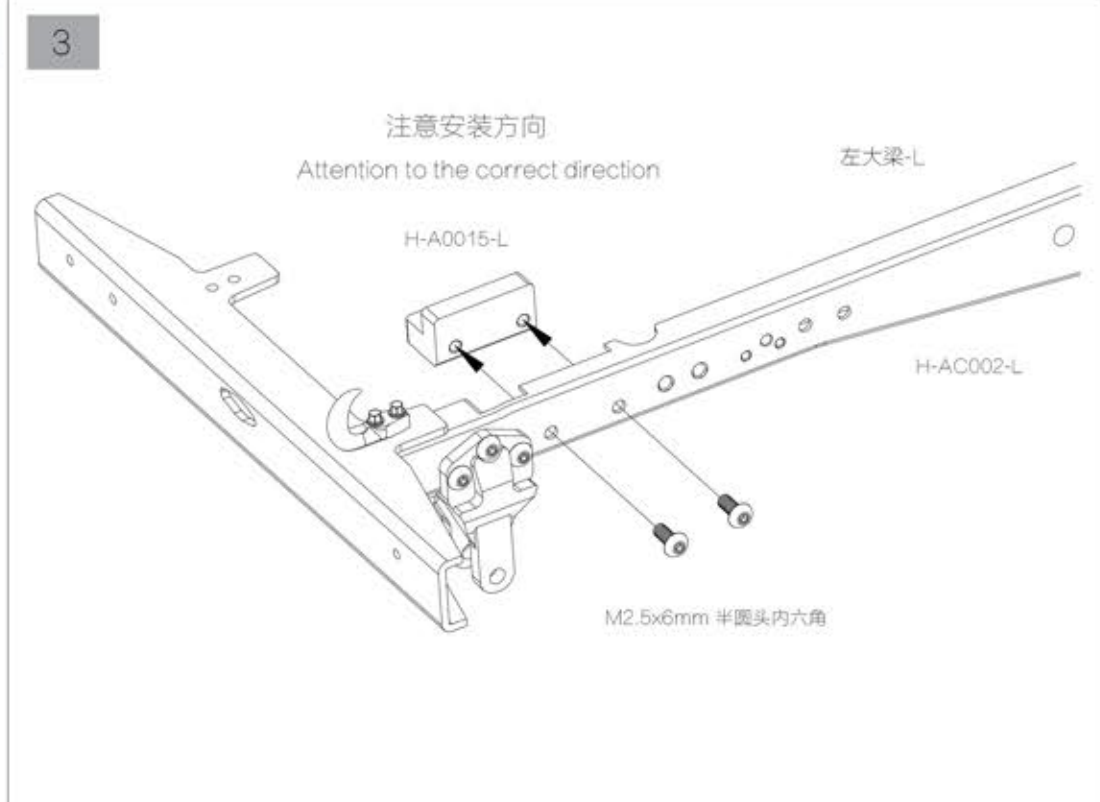 

4

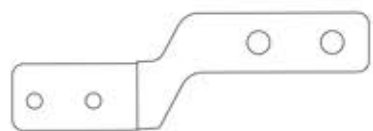 


H-A0016 x 1

 

H-A0054 x 1



 M2.5x6mm半圆头内六角 x 3

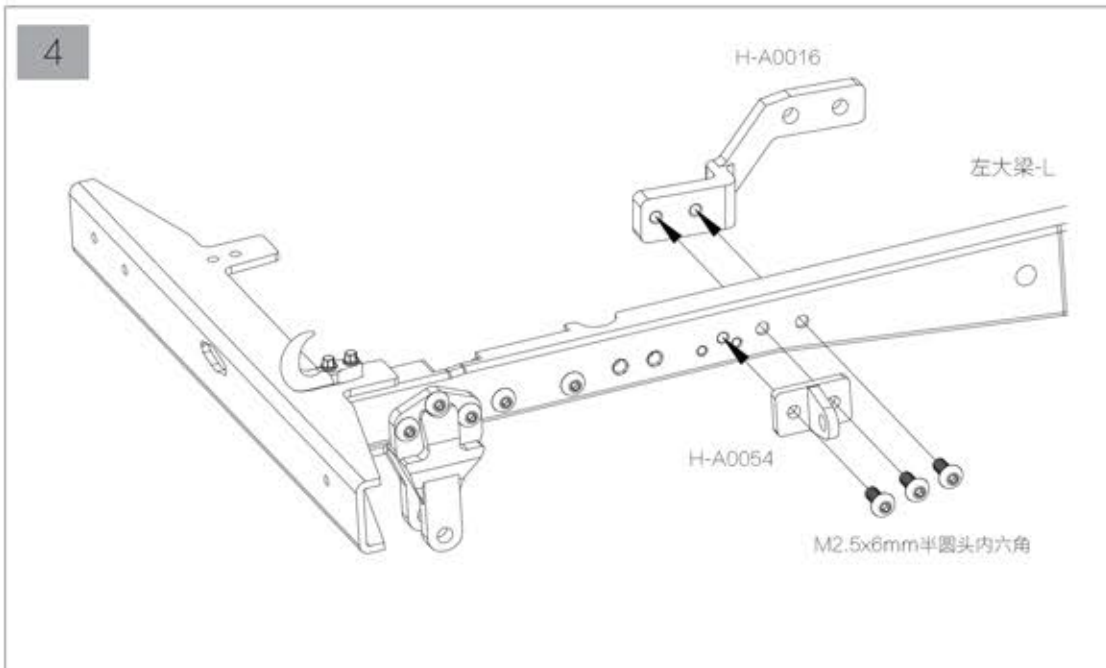

5



H-A0055 x 4



H-A0027 x 2



 
H-A0024 x 1



H-A0023 x 3




2mm卡簧 x 3

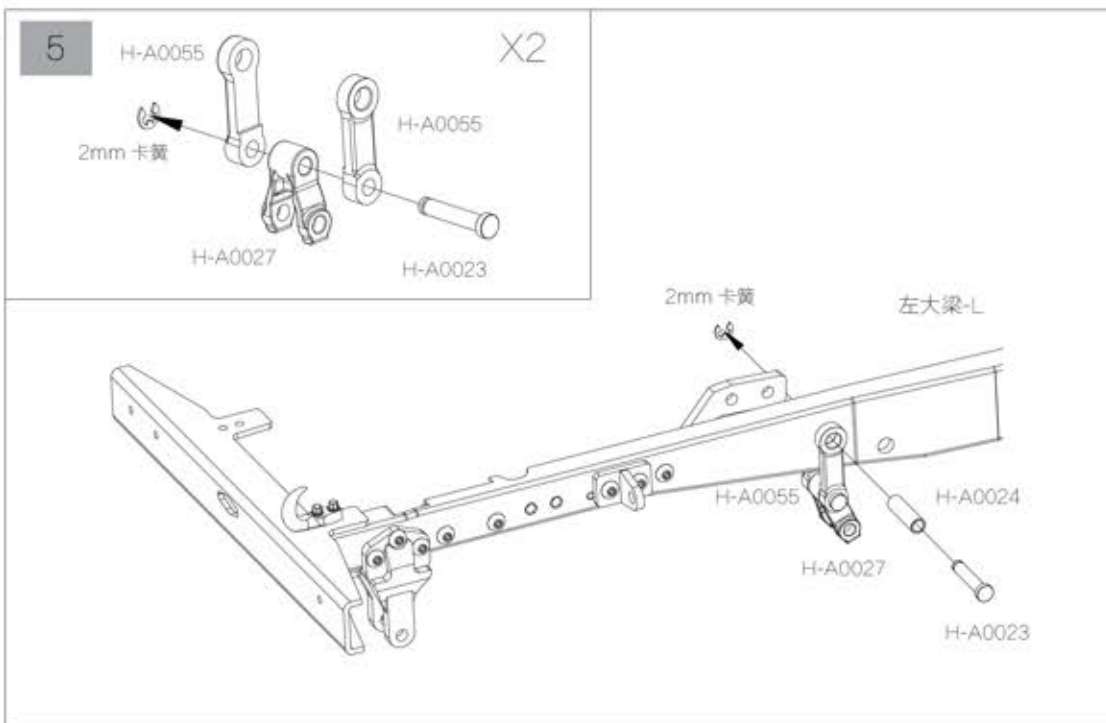


6



 M2.5x6mm半圆头内六角 x 2

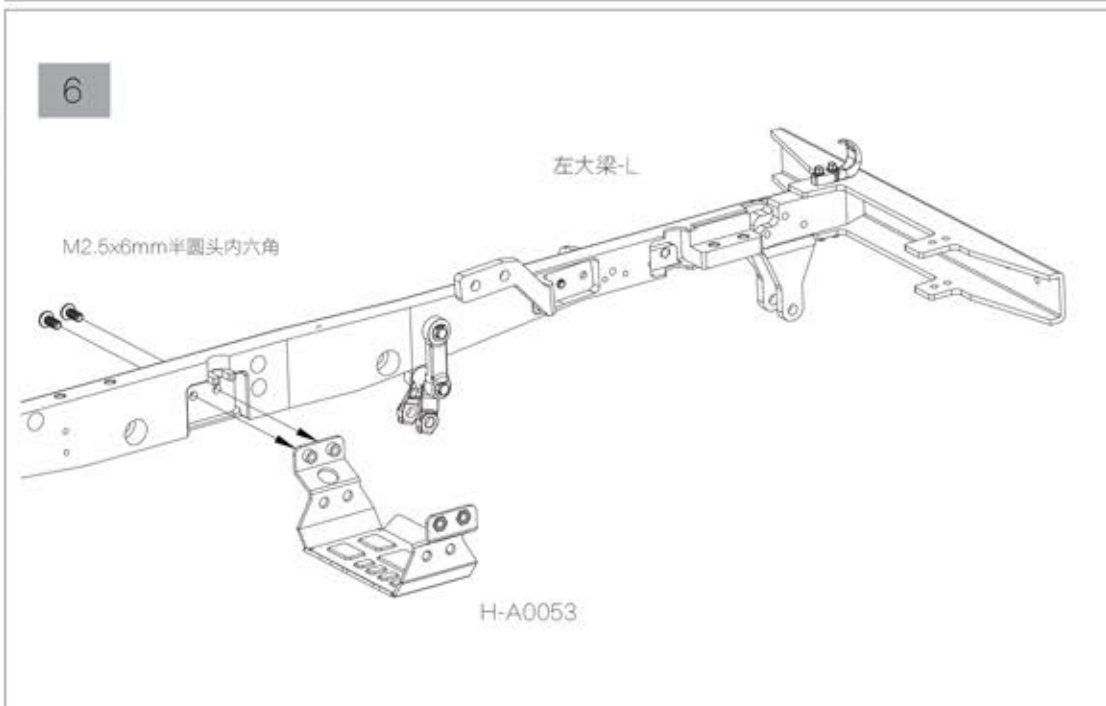

67

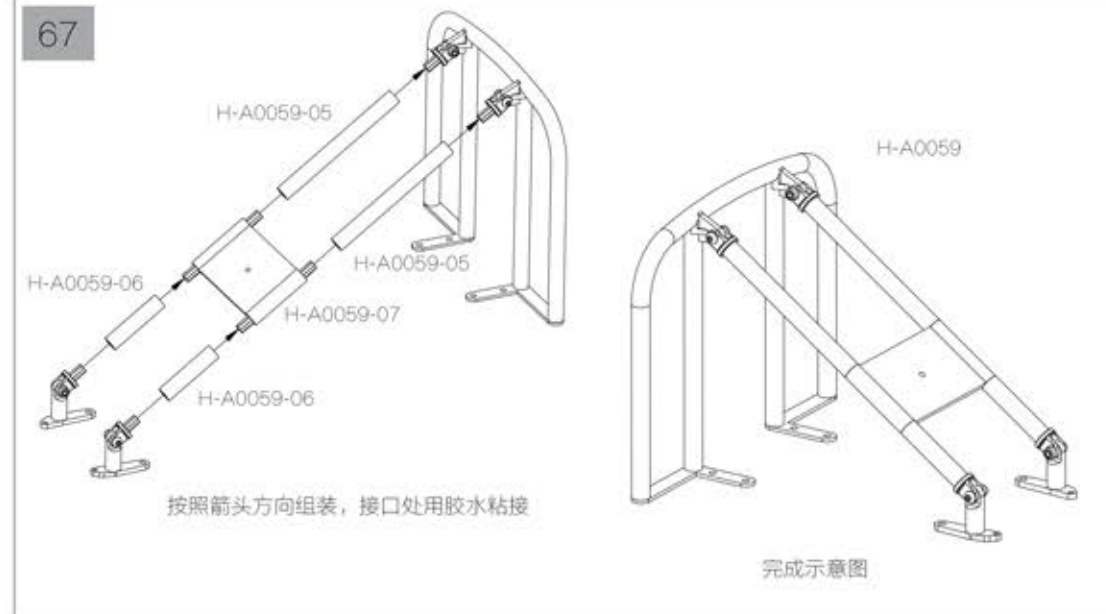 


68



M3x6mm半圆头内六角 x 6



 
M2x6mm杯头内六角 x 2

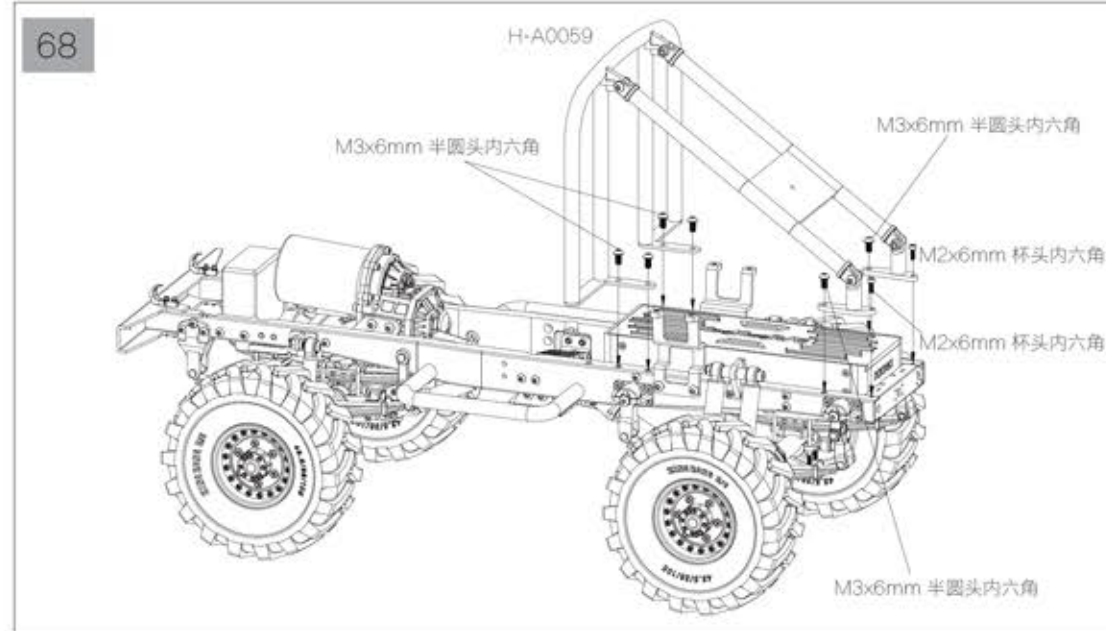

69



 M2.5x8mm半圆头内六角 x 4

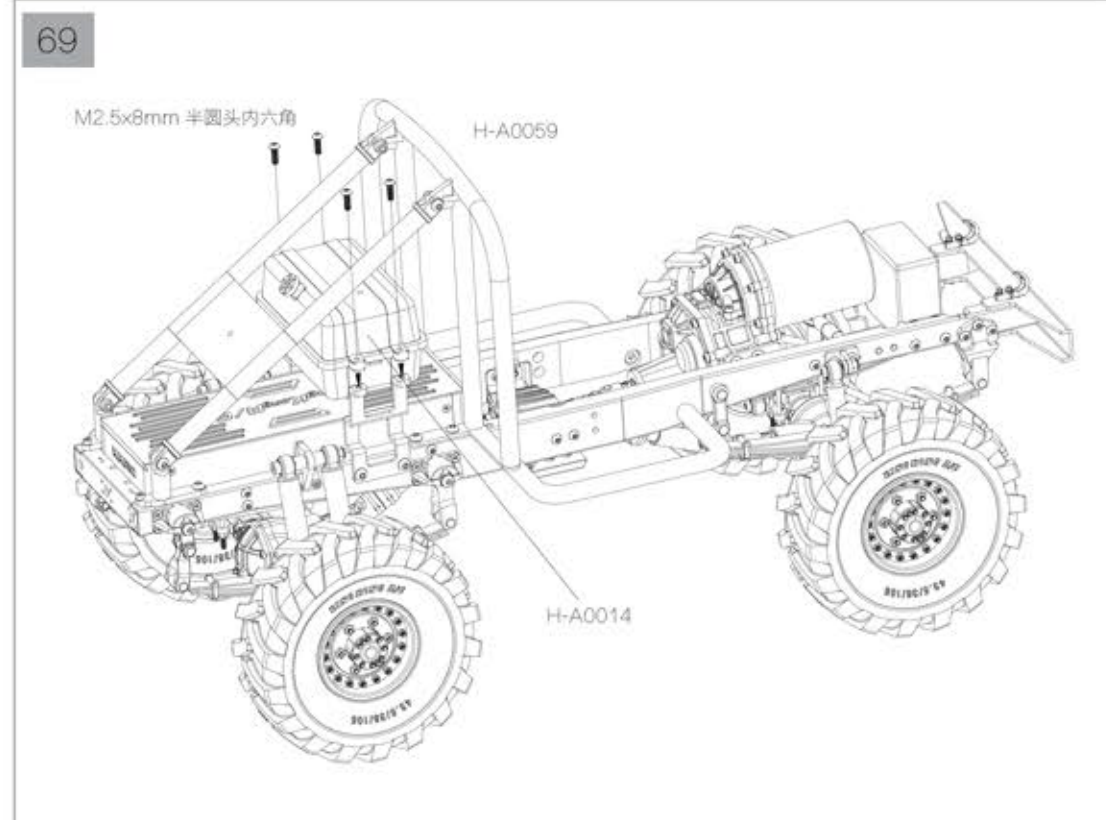

64



M3x8mm 平头内六角 x4



H-A0059-02 x1



H-A0059-03 x1

65

 
 
 


M3x10mm 半圆头内六角 x2


66



M3x10mm 半圆头内六角 x2

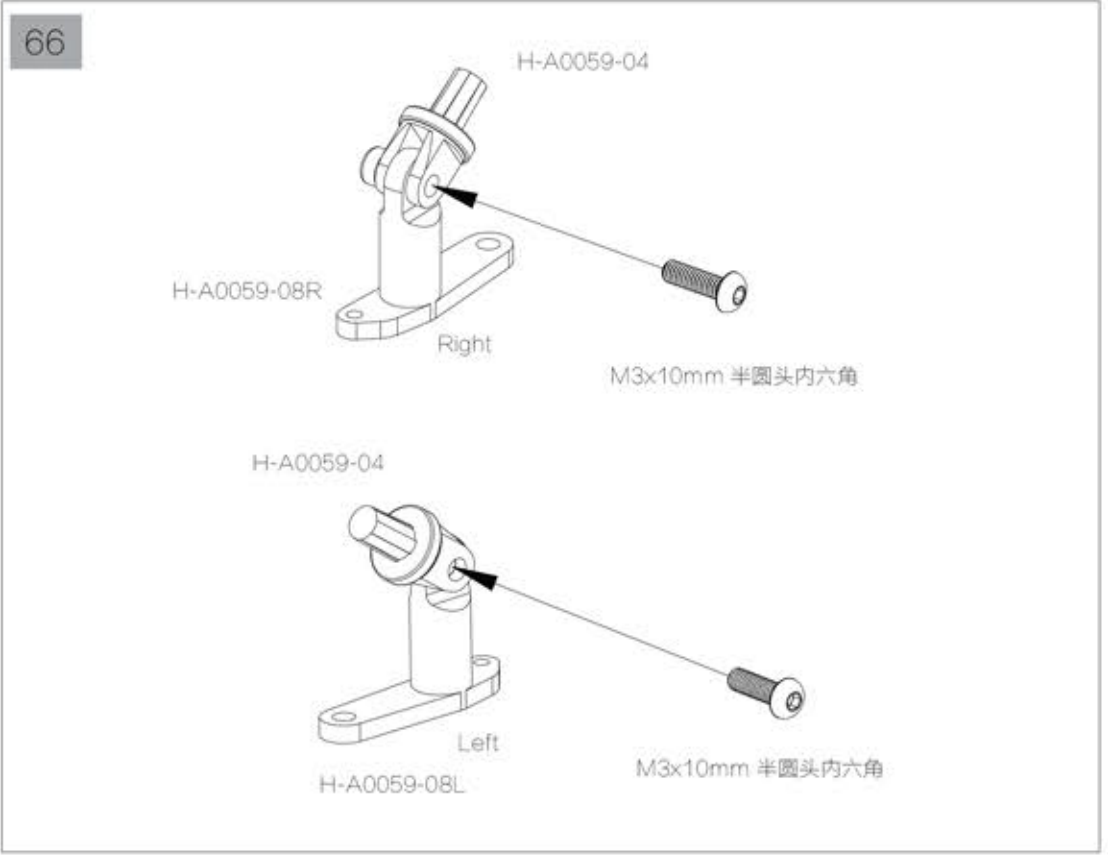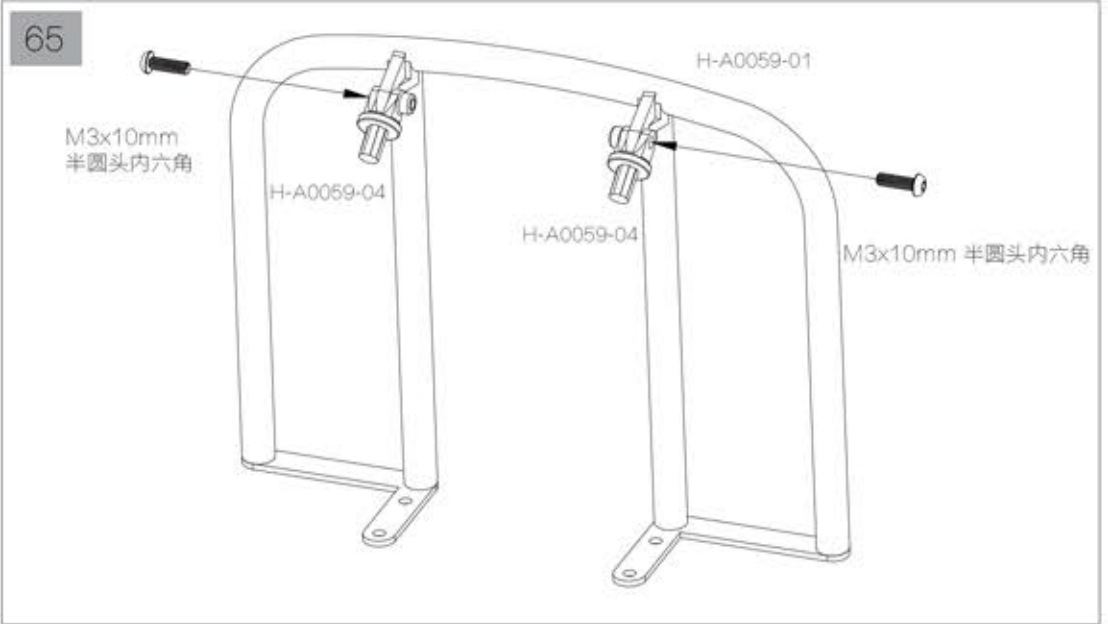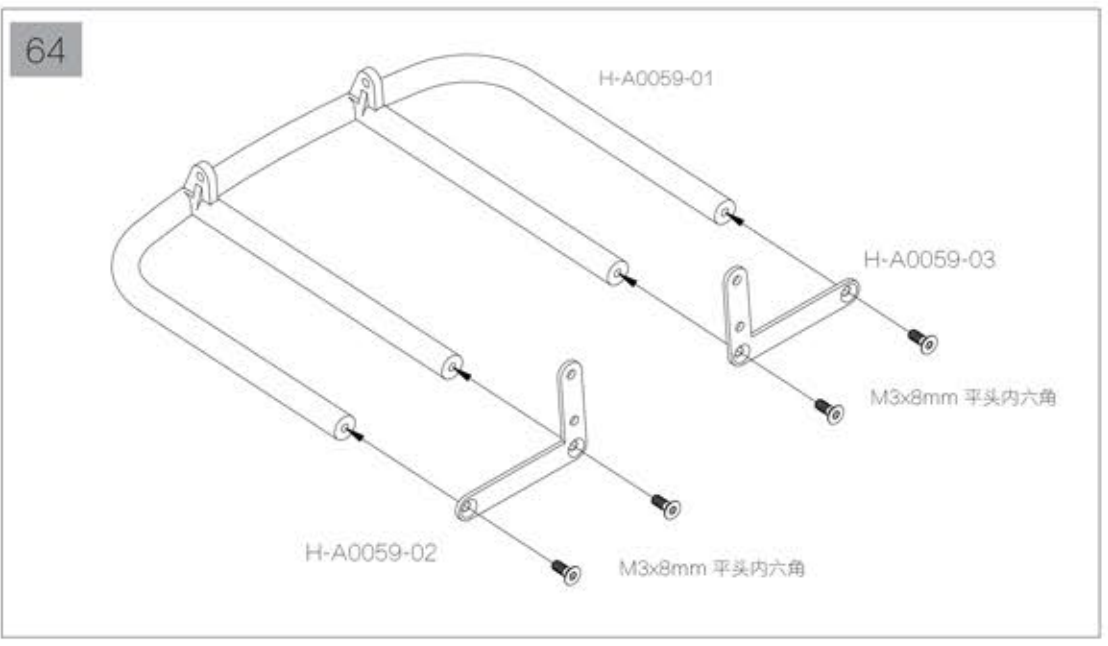


7

 

M4x8mm 杯头内六角 x2

 8



H-A0026 x2



H-A0057 x2



M2x6mm 平头内六角 x4



 
 
H-A0029 x2

9




M3x6mm 半圆头内六角 x2

7

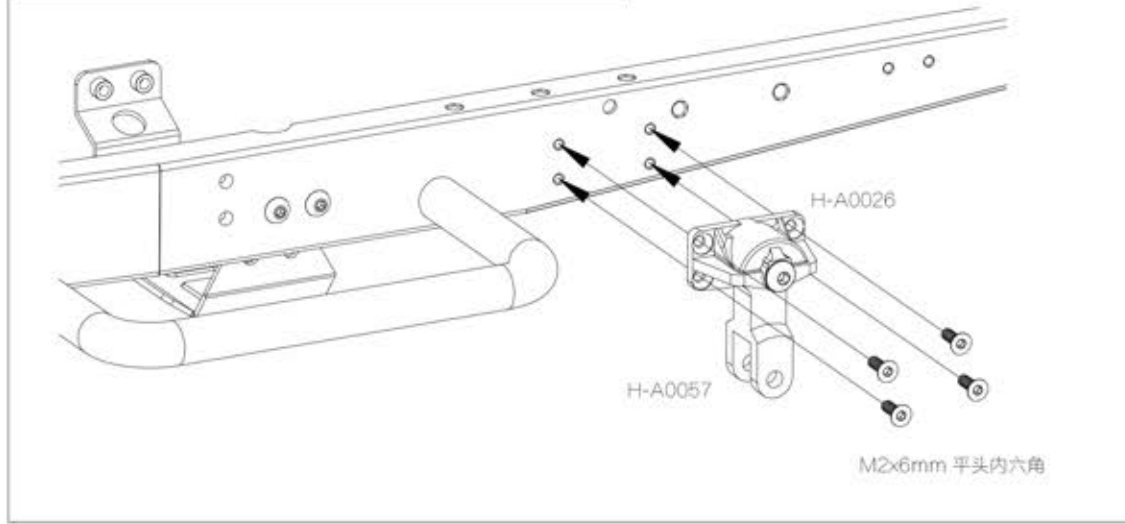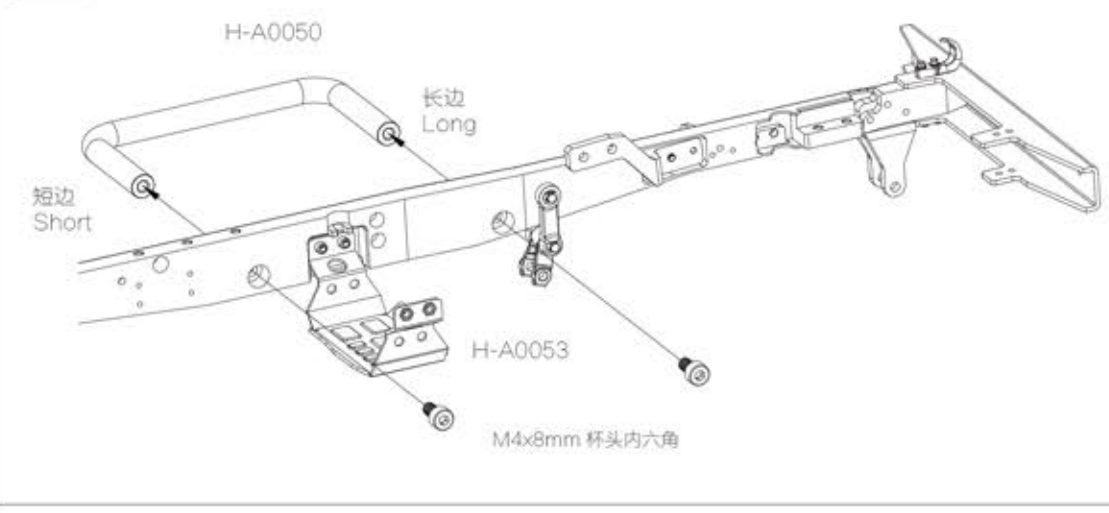

9

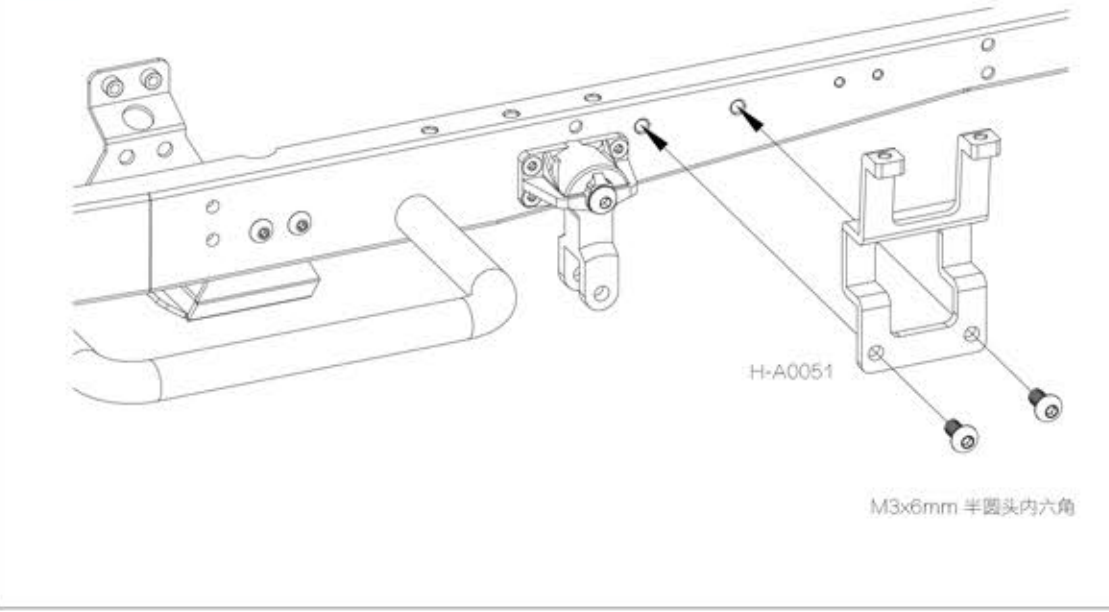 

10



H-A0026 x2



H-A0027 x2



H-A0058 x2



H-A0029 x2



H-A0022 x2



3x1.5 O型圈 X4



2mm 卡簧 x2



H-A0052 x1



 
M2x6mm 杯头内六角 x2




M2x6mm 平头内六角 x4

电池盒侧板组装


10

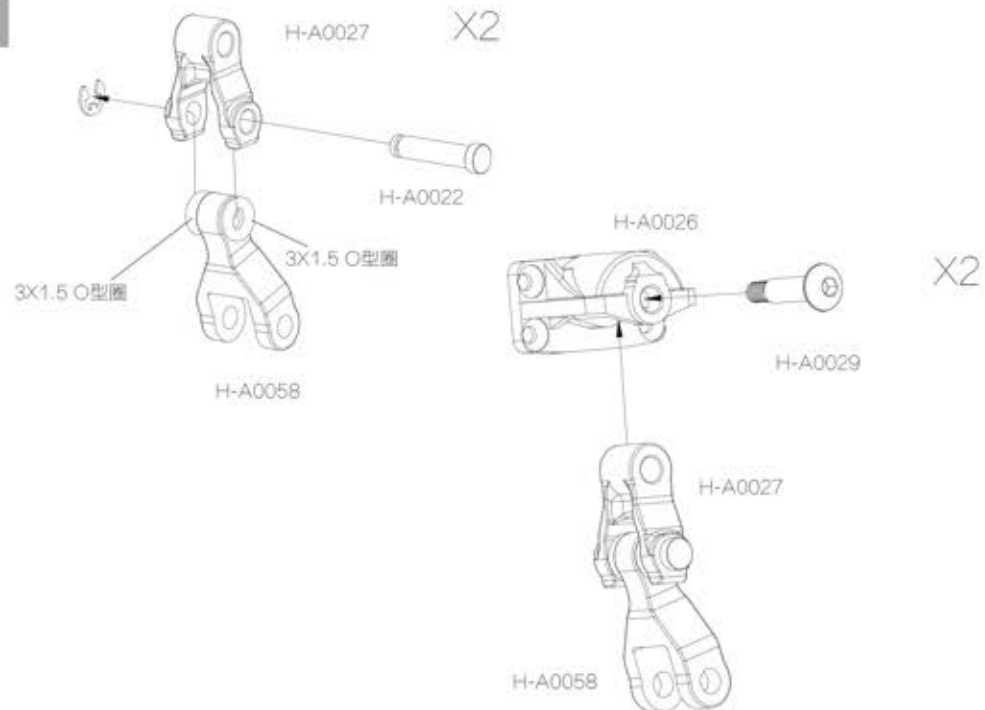

11

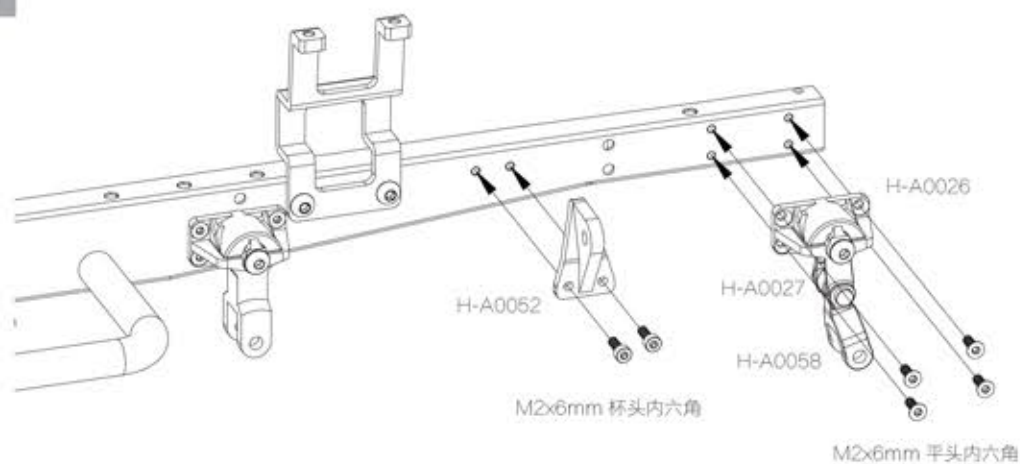 

12

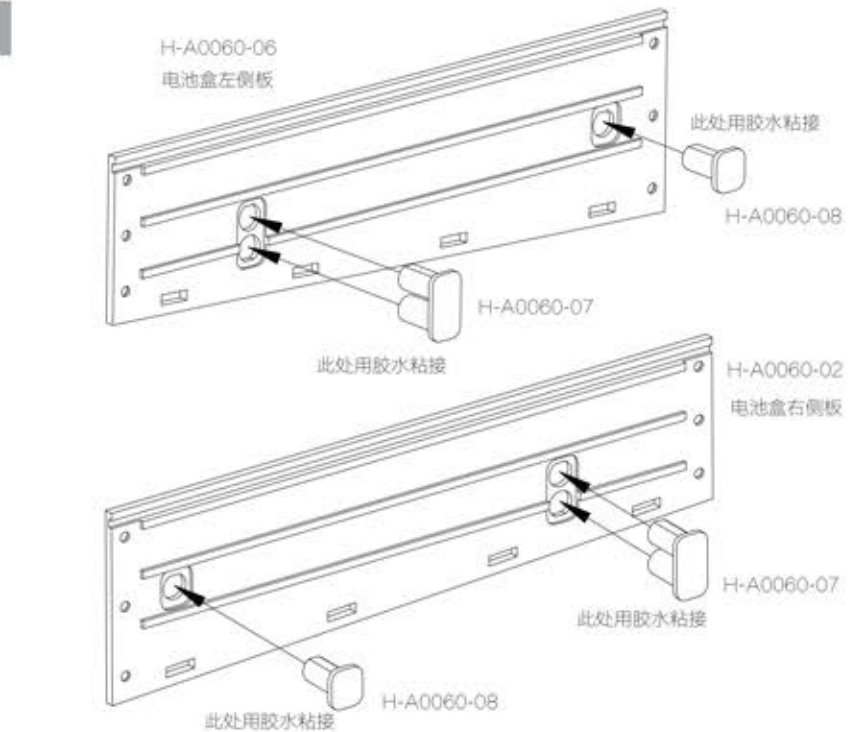 

61



M3x8mm 半圆头内六角 x4

62



D-T017 X1



M3x8mm 半圆头内六角 x1

63



M3x10mm 半圆头内六角 x1

 


M3x32mm 杯头内六角 x1




6x11.2mm 圆柱垫片 x1
KLJG-006

61

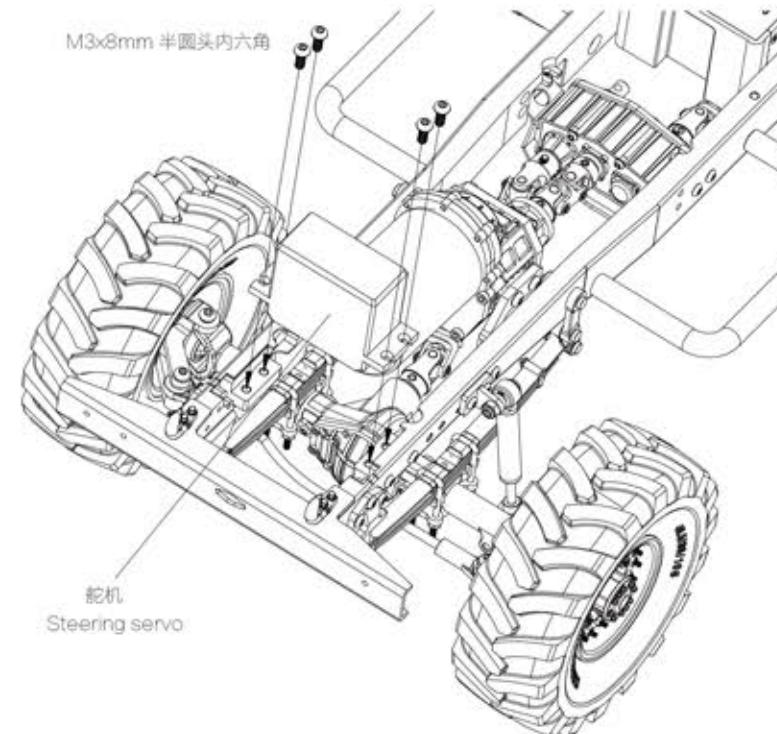


62

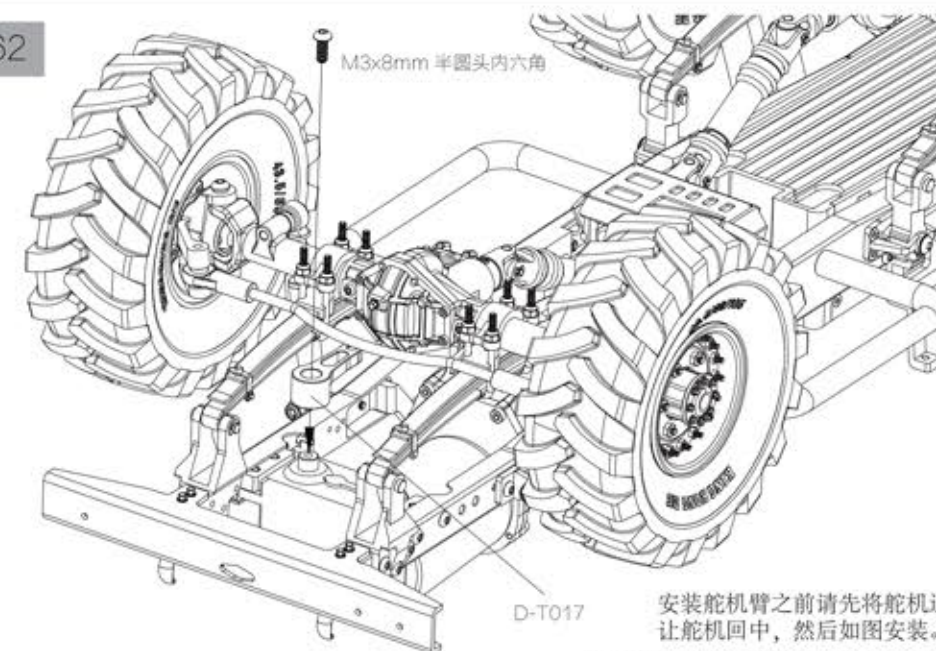 


安装舵机臂之前请先将舵机通电，让舵机回中，然后如图安装。
Before you install the servo arm, power on the servo and make it have a right angle in middle direction, as the figure.

 63

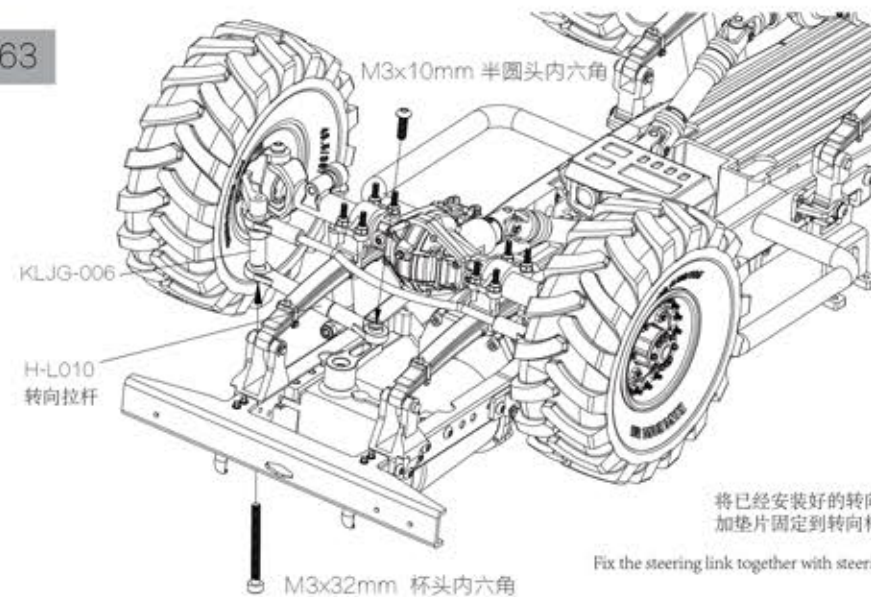

将已经安装好的转向拉杆，加垫片固定到转向杯处即可。
Fix the steering link together with steering cup by adding a washer.

 58

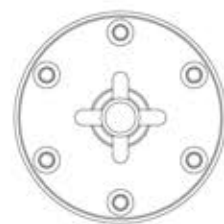

H-C006-018 x1



M2 螺母 x6

 
58

左侧轮毂完成示意图
left



右侧轮毂完成示意图
right

轮毂接合器
H-C006-018

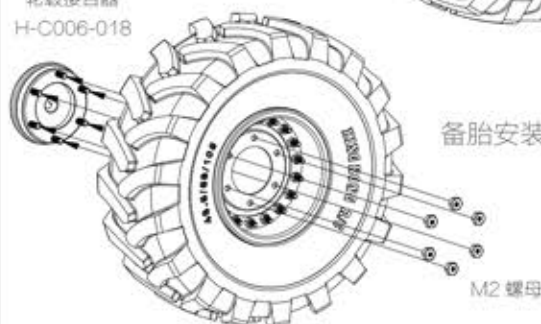

备胎安装

M2 螺母

59

 


M2 螺母 x12

59

左侧
left

M2 螺母

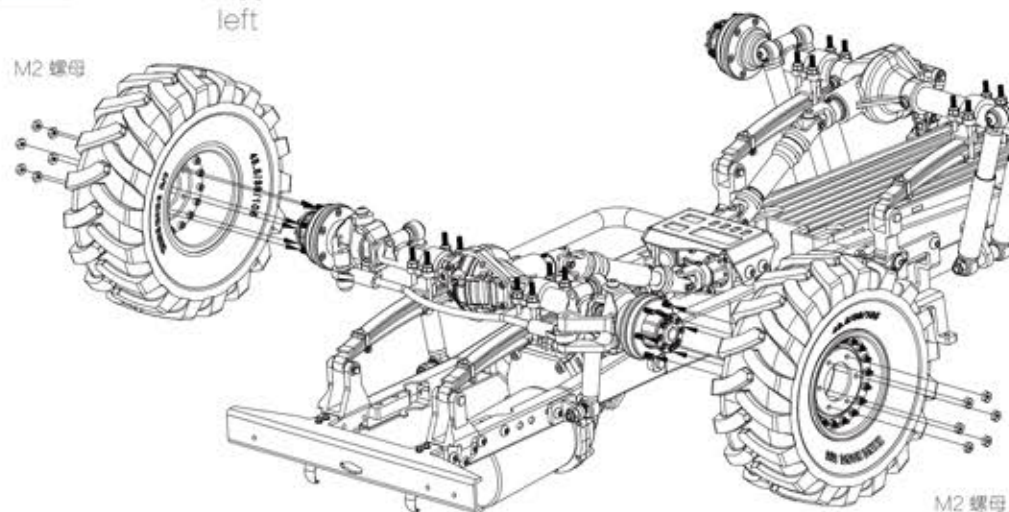

M2 螺母

右侧
right

60

 


M2 螺母 x12

60

左侧
left

M2 螺母

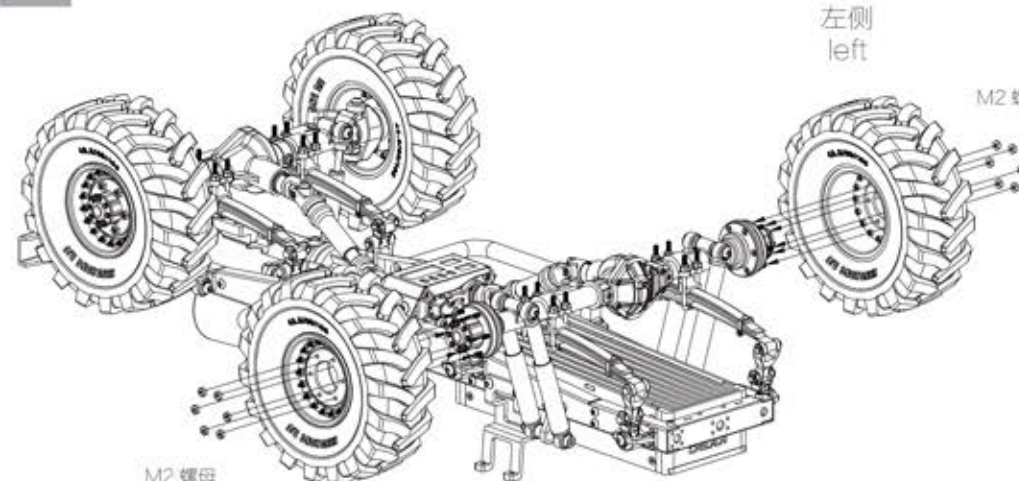


M2 螺母

右侧
right

13

电池盒底板安装示意图

 13

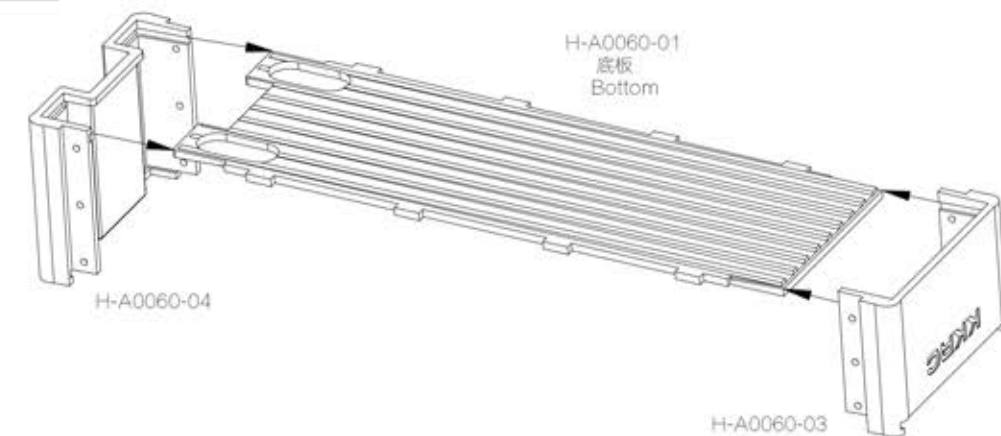


14



M2x4mm 平头内六角 x6

 14

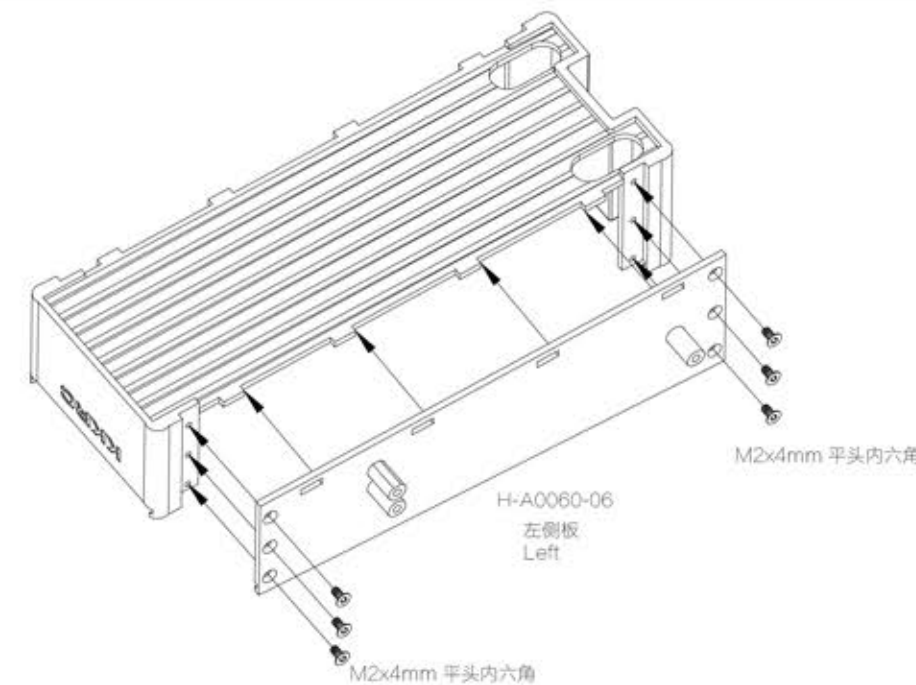

M2x4mm 平头内六角

H-A0060-06
左侧板
Left

 
M2x4mm 平头内六角

15



M2x4mm 平头内六角 x6

15

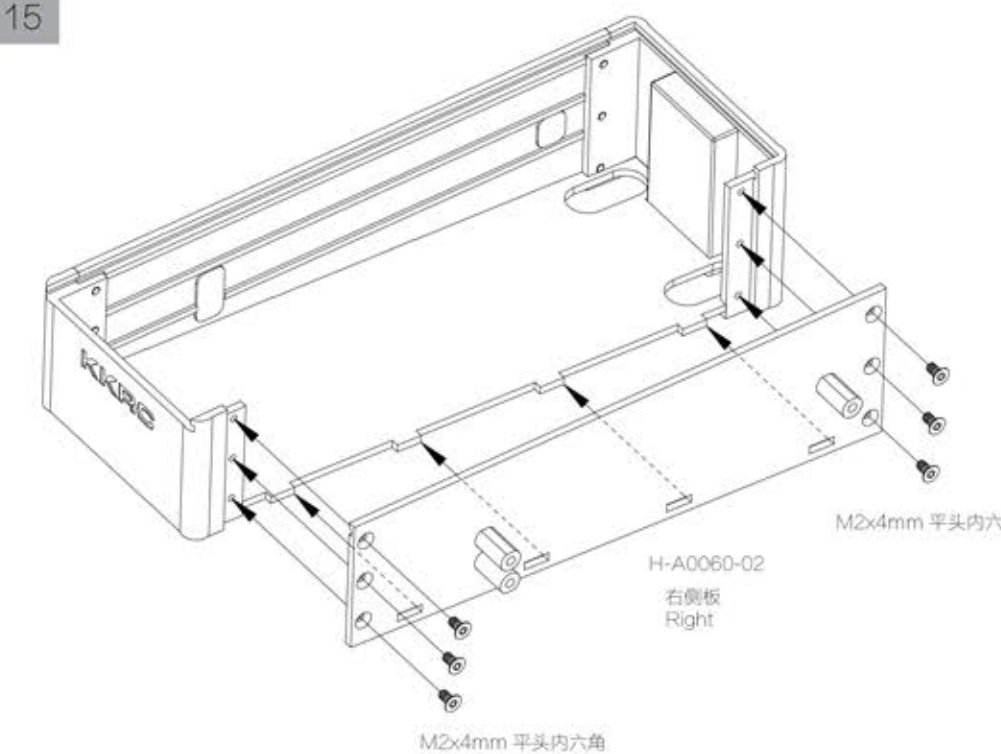

M2x4mm 平头内六角

 
H-A0060-02
右侧板
Right

M2x4mm 平头内六角

16

电池盒上盖安装示意图

16

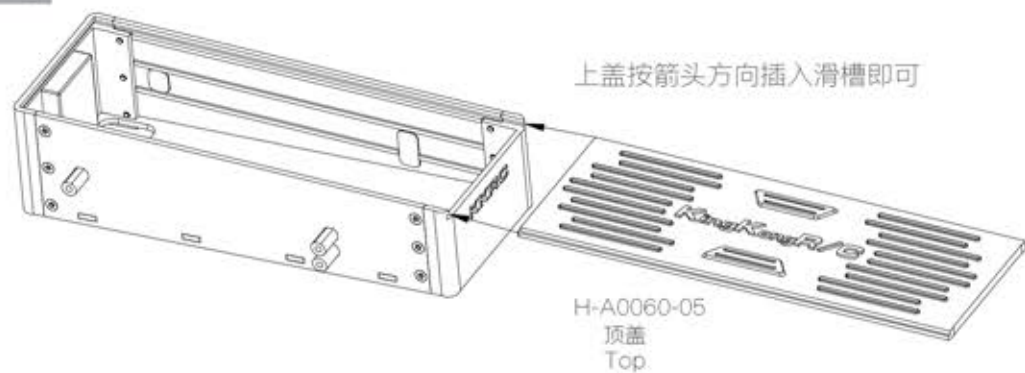


17

M2.5x6mm 半圆头内六角 x3



 17

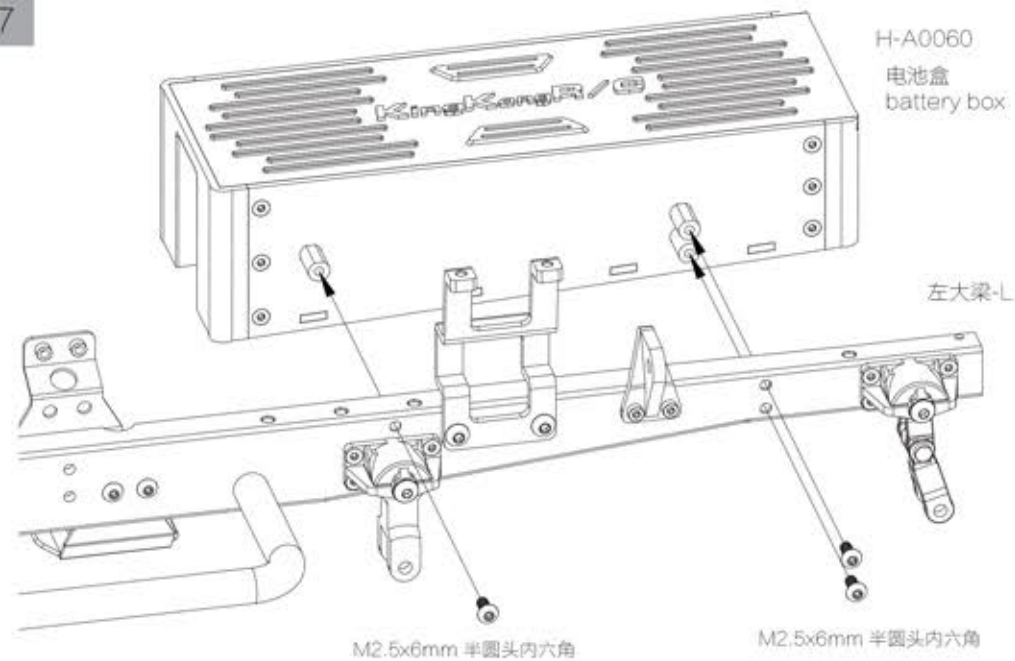


18

M2x4mm 杯头内六角 x1



 18

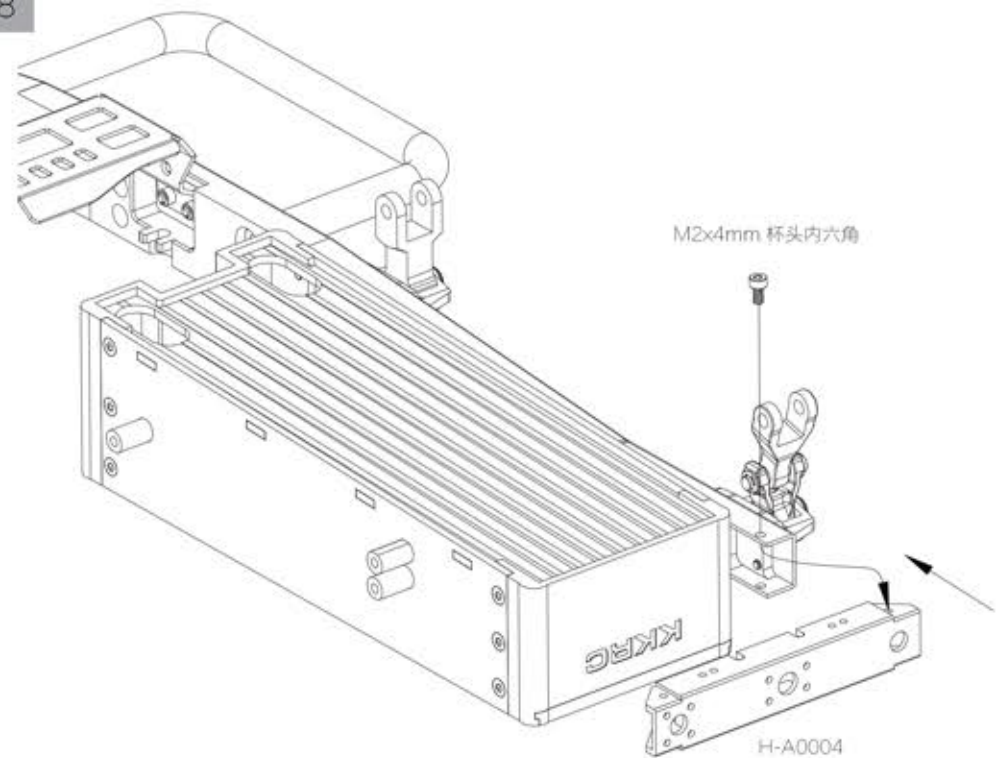

55

M3x10mm 机米螺丝 x1



5X9X2 O型圈 x1

56

57

 
M1.6x6mm 杯头内六角 x90




M1.6螺母 x90



55

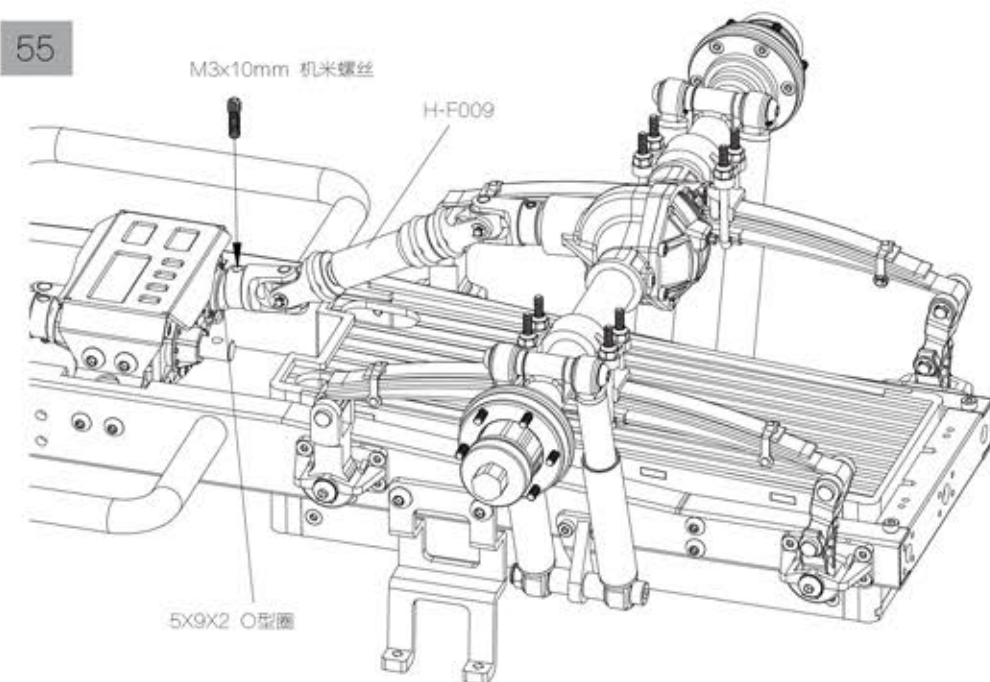

56

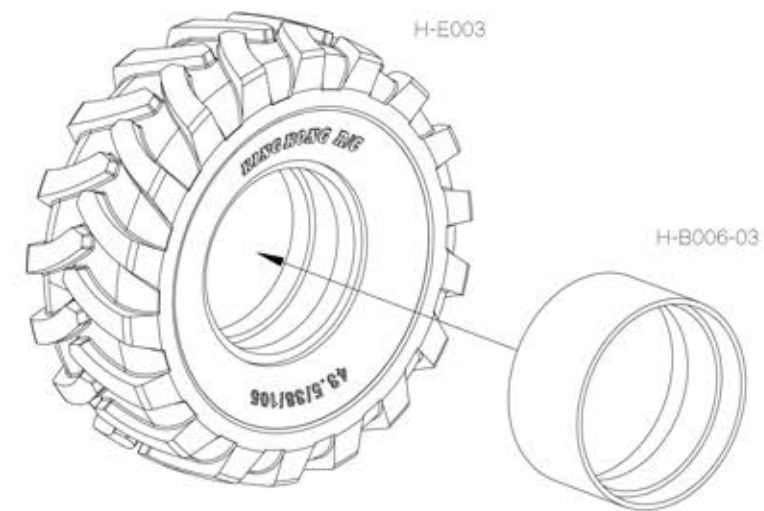 

57

 
M1.6螺母



X5

注意：根据轮胎纹路区分左右，见后一页组装完成示意图

52

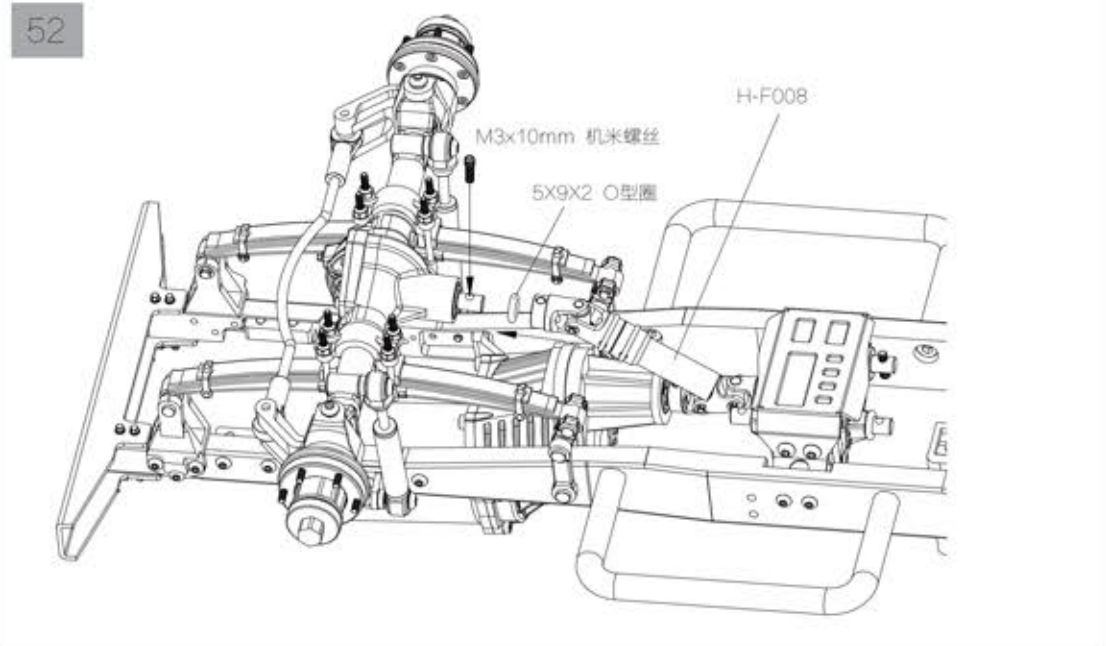


M3x10mm 机米螺丝 x 1



5X9X2 O型圈 x1

 53

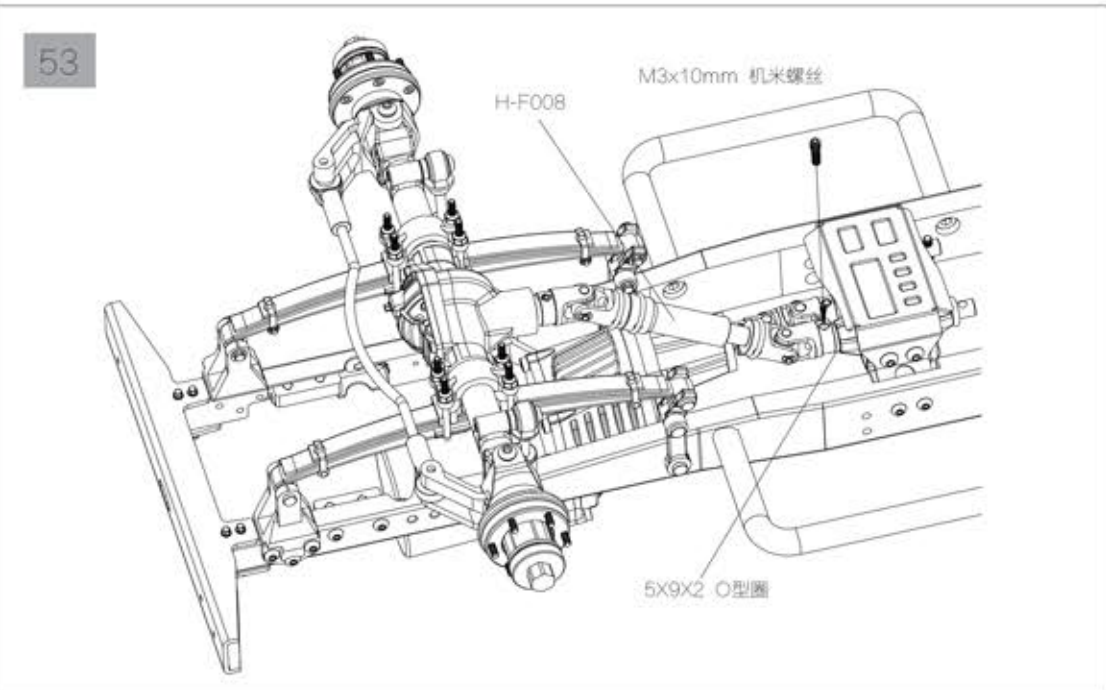


M3x10mm 机米螺丝 x 1



5X9X2 O型圈 x1

 54

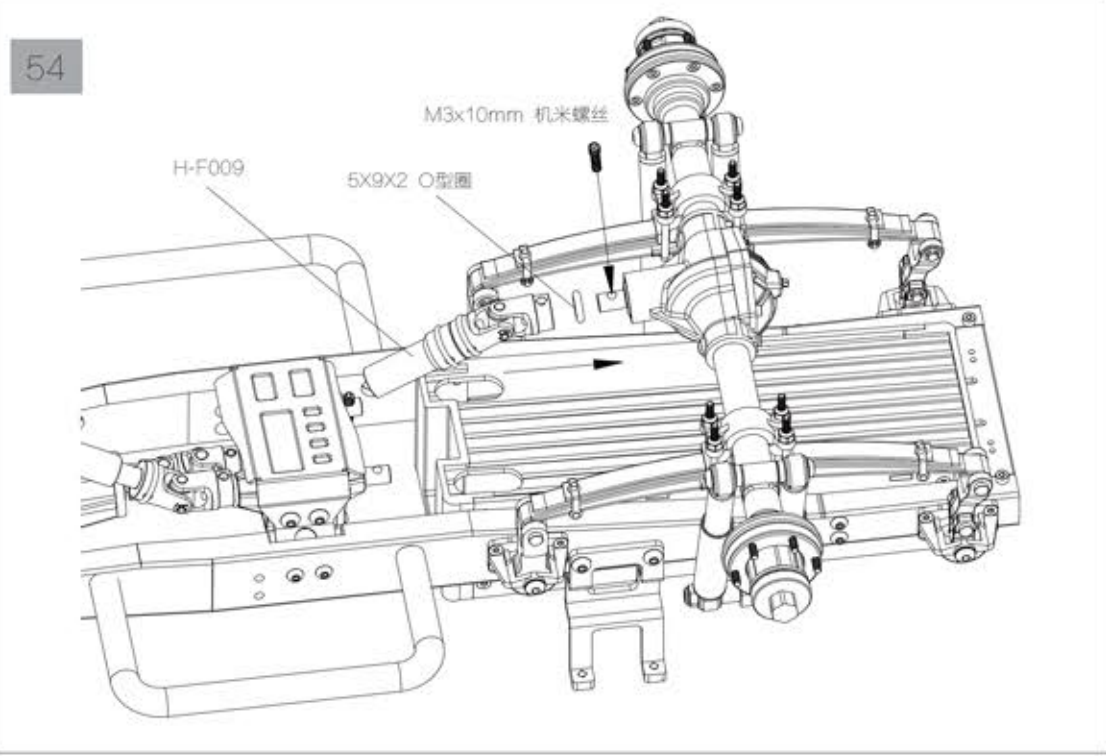


M3x10mm 机米螺丝 x 1




5X9X2 O型圈 x1

 19

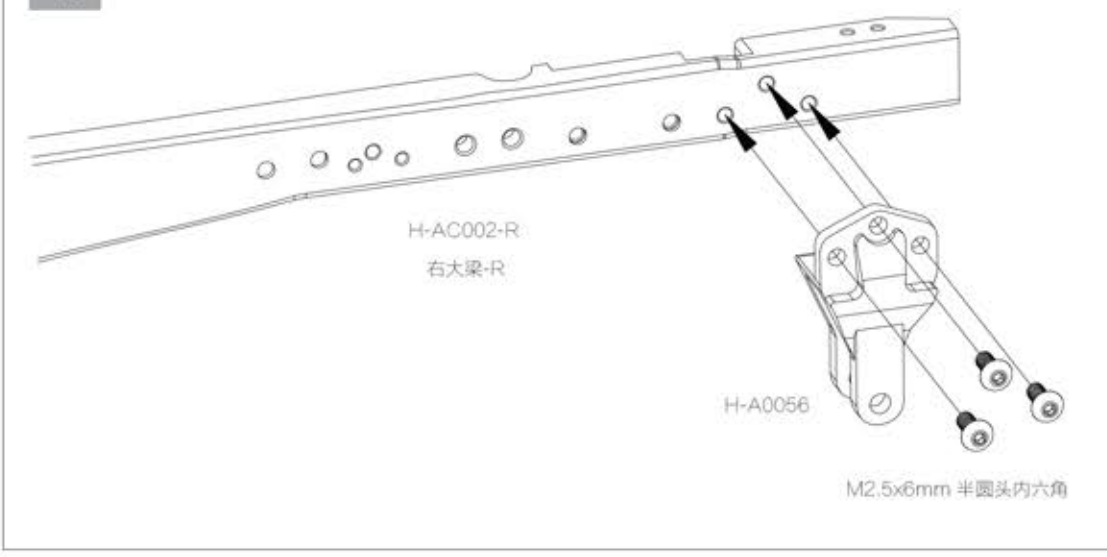

19

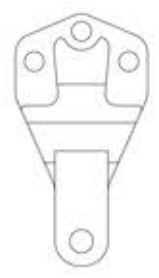 


H-A0056 x1



M2.5x6mm 半圆头内六角 x 3

 20

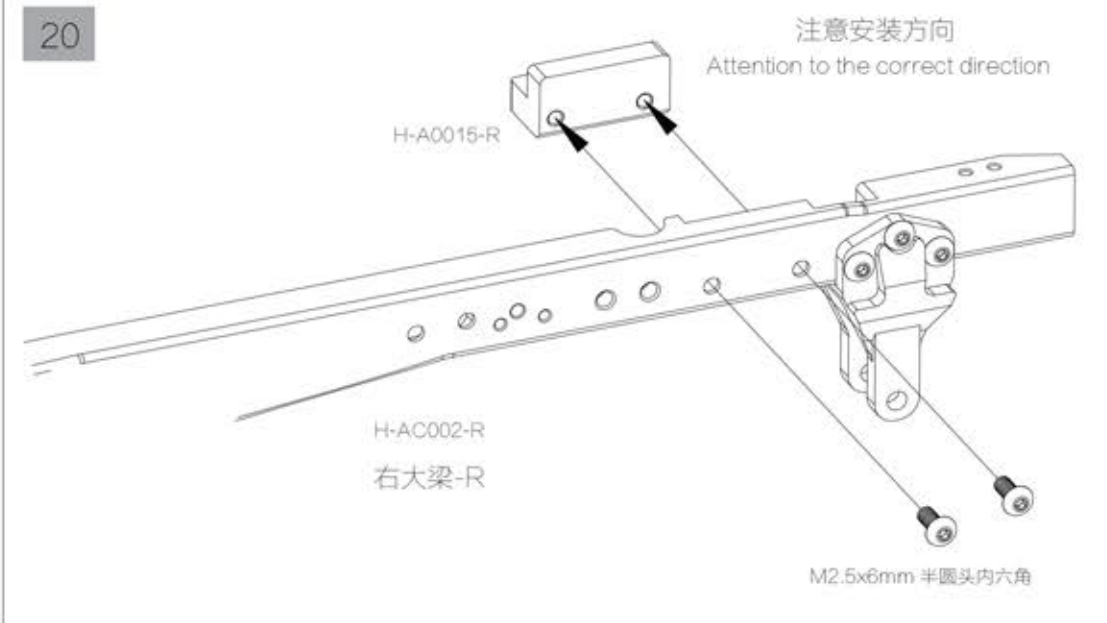

20

 


H-A0015-R Servo Fixing Part x 1




M2.5x6mm 半圆头内六角 x 2

21

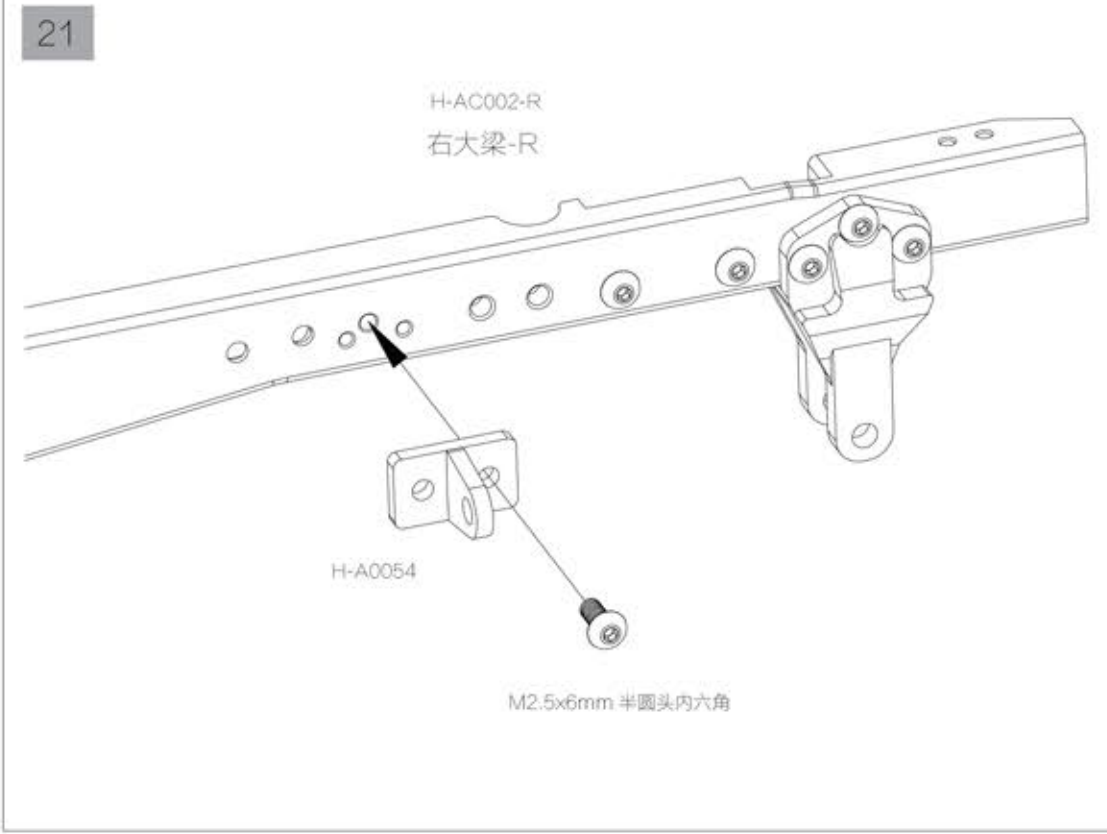

21

 

H-A0054 x1



M2.5x6mm 半圆头内六角 x 1

22



 
H-A0024 x1




H-A0023 x1




2mm 卡簧 x1

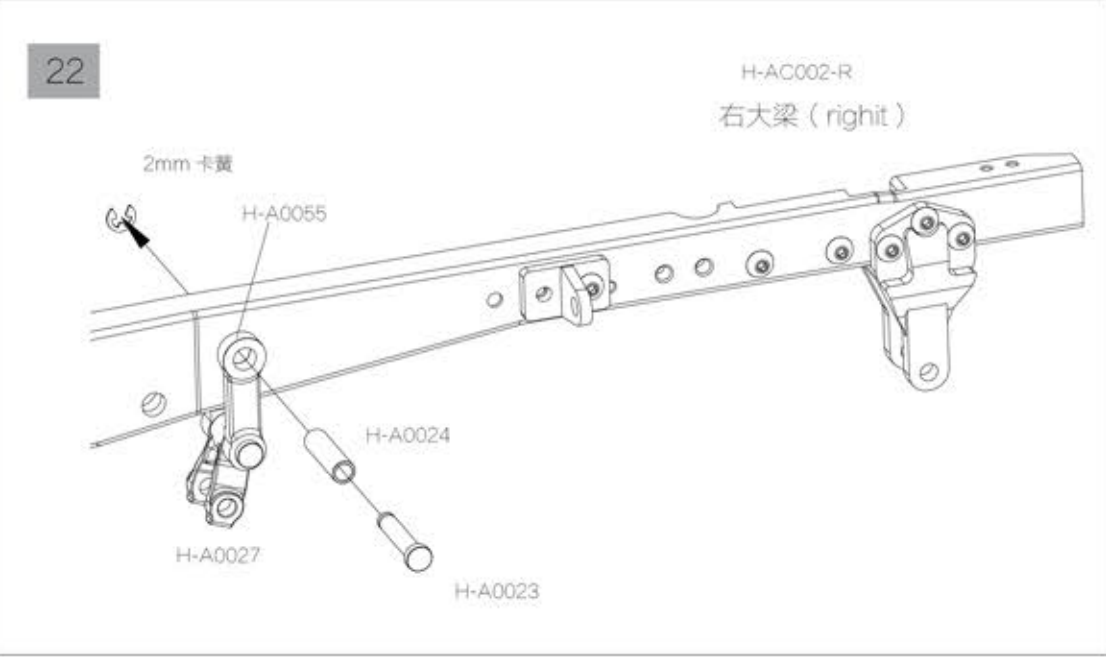

23

 


M4x8mm 杯头内六角 x2

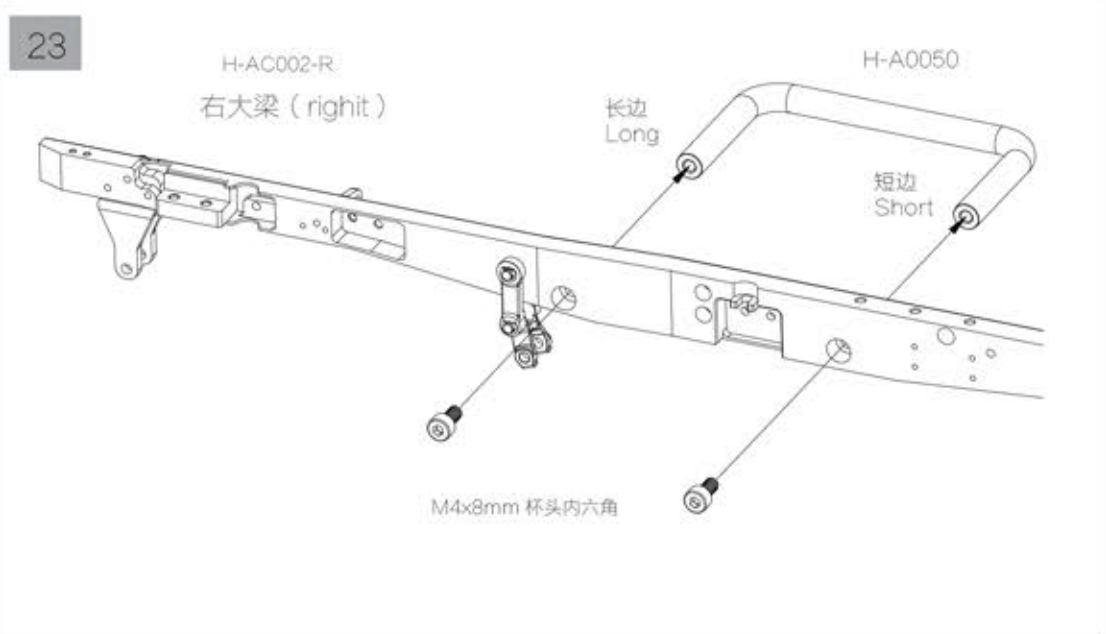 

24



 
M2x6mm 平头内六角 x4

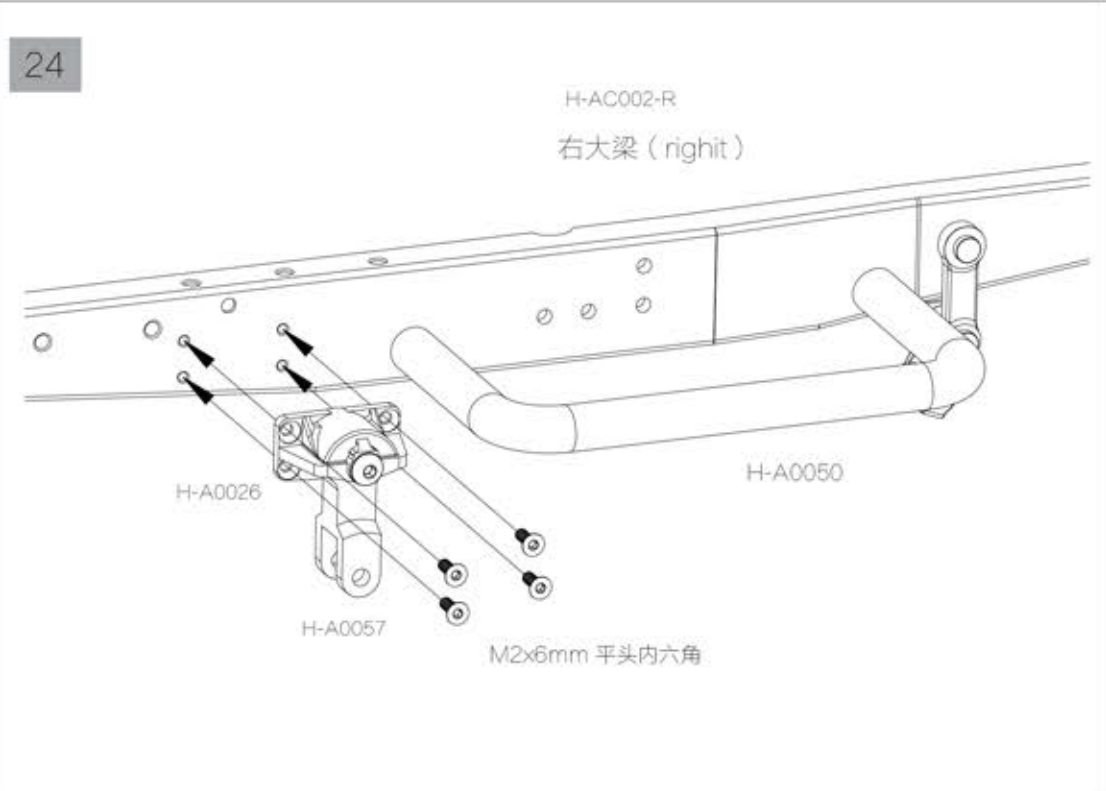

49



 
M2.5x6mm 半圆头内六角 x2

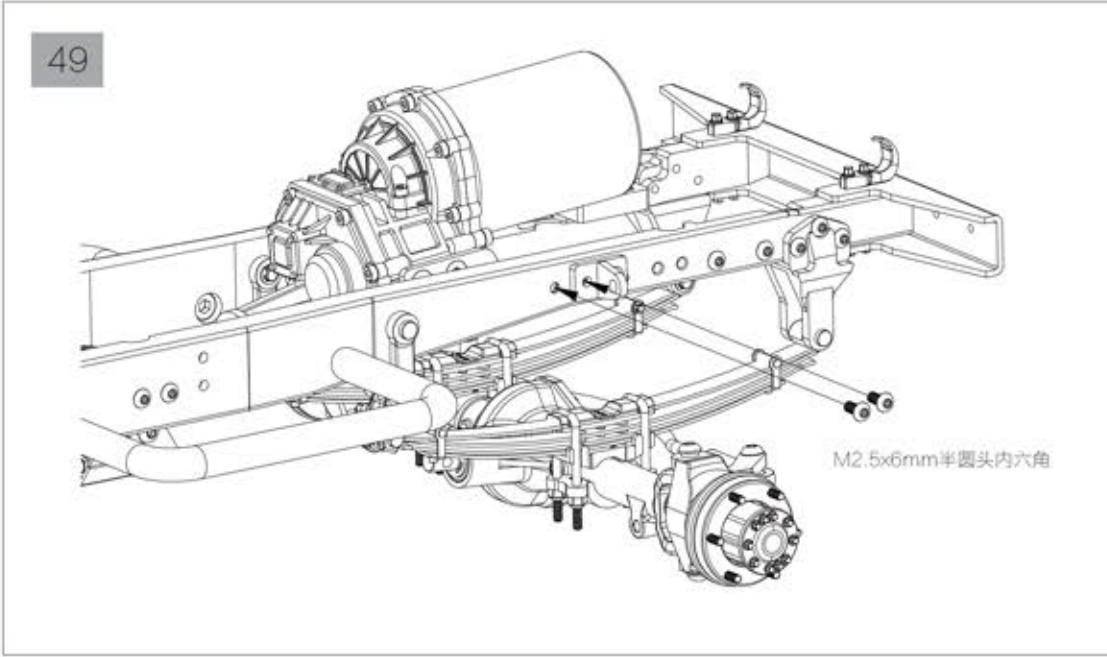

50



 
M3x6mm 半圆头内六角 x2

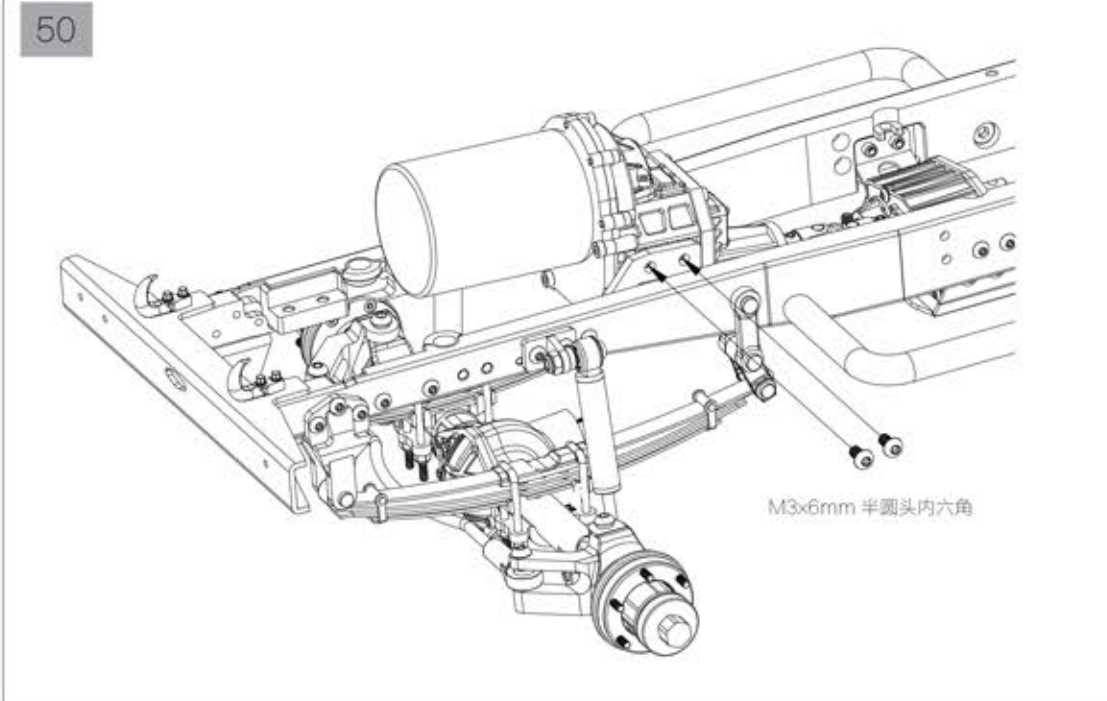

51



 M3x12mm 半圆头内六角 x1




M3x14mm 半圆头内六角 x1



6X3X2 垫片 x2



 
M3防松螺母 x1

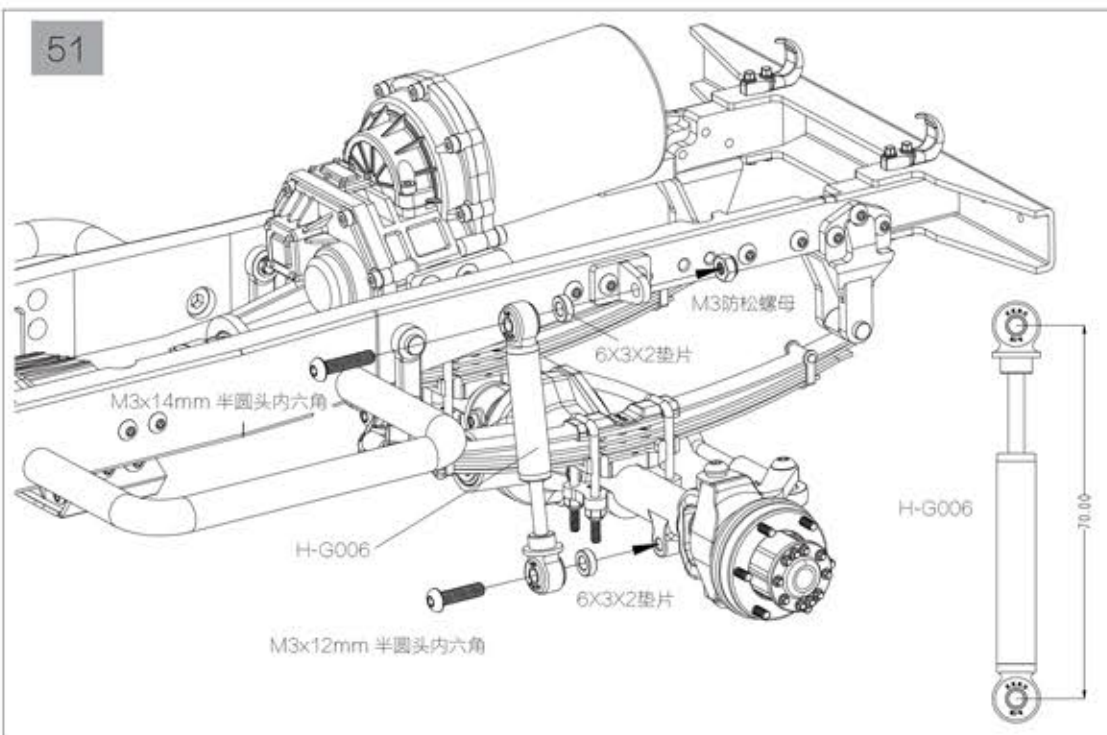

46



 
46

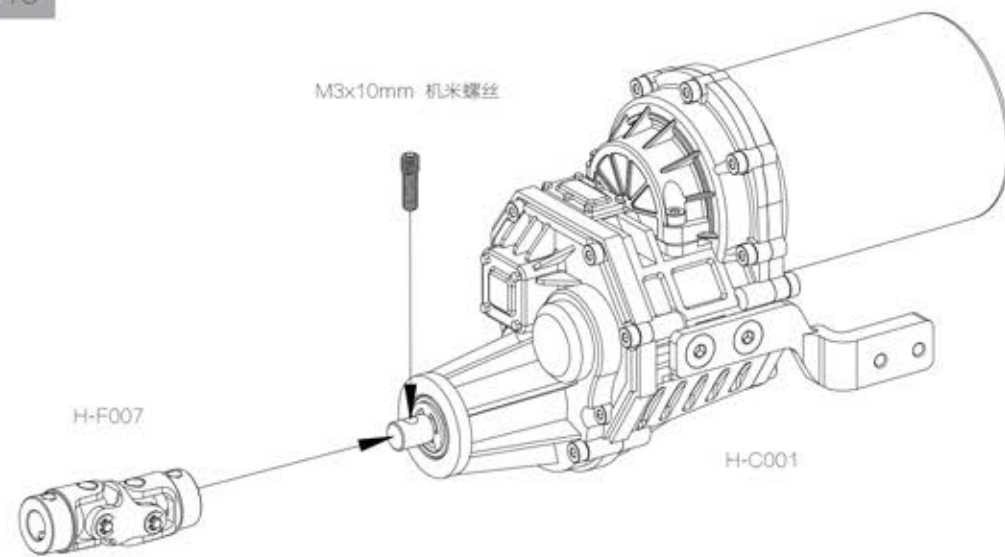


25



 25

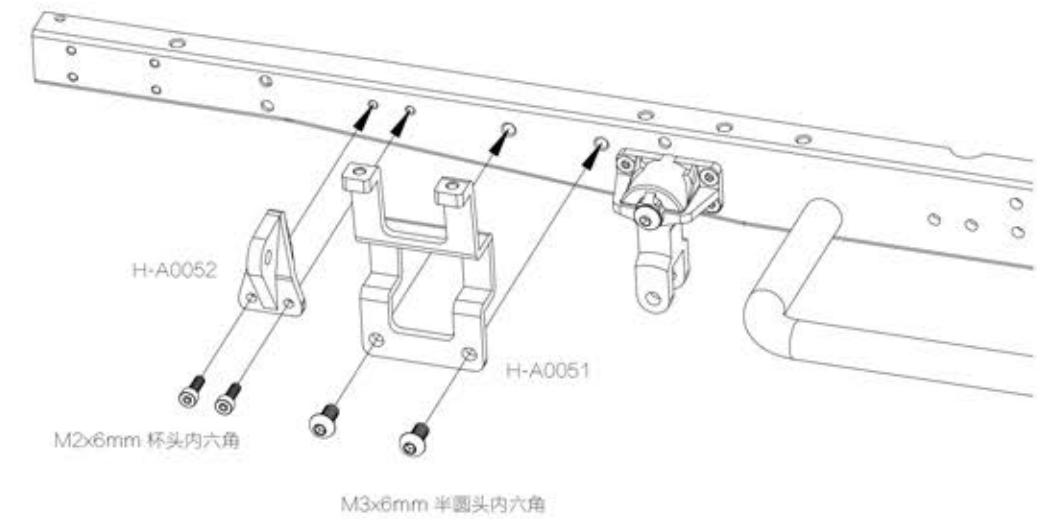


47

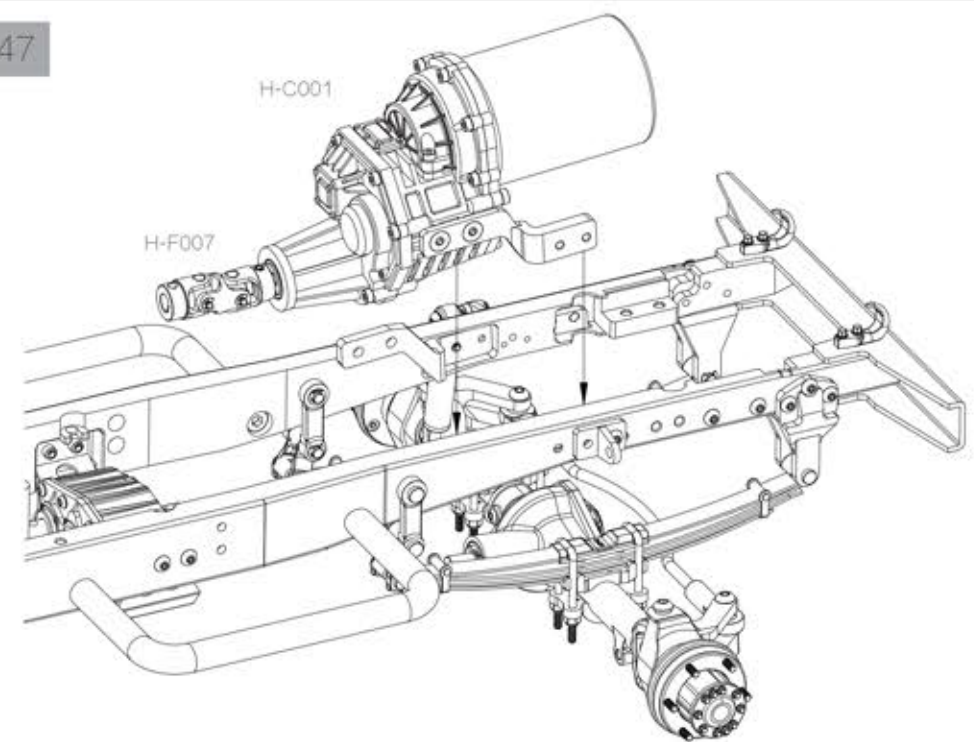 

26



 
26

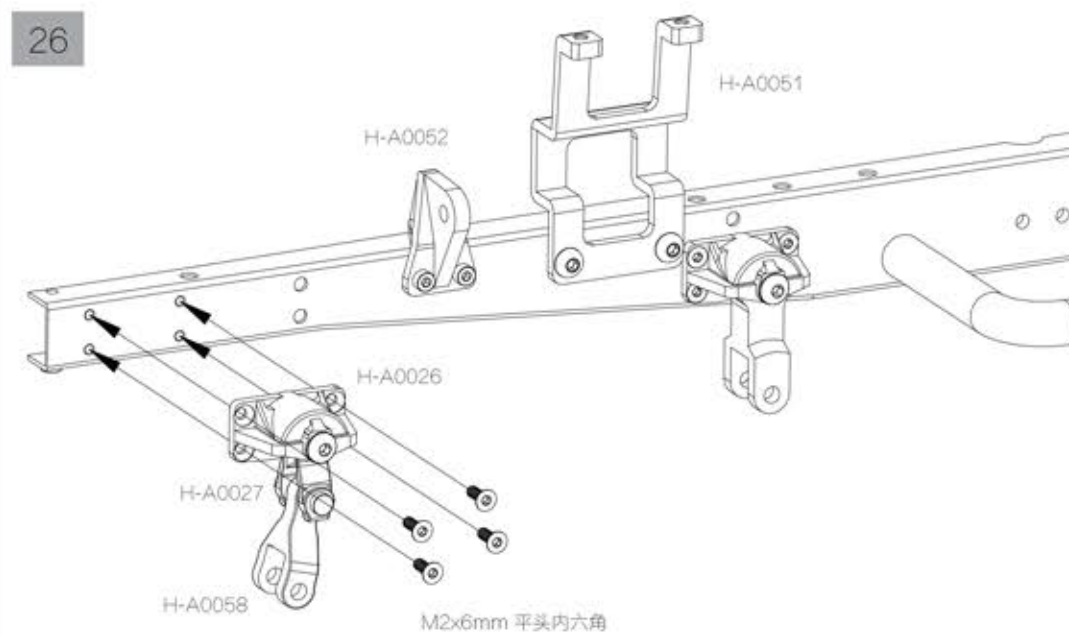

48



 
48

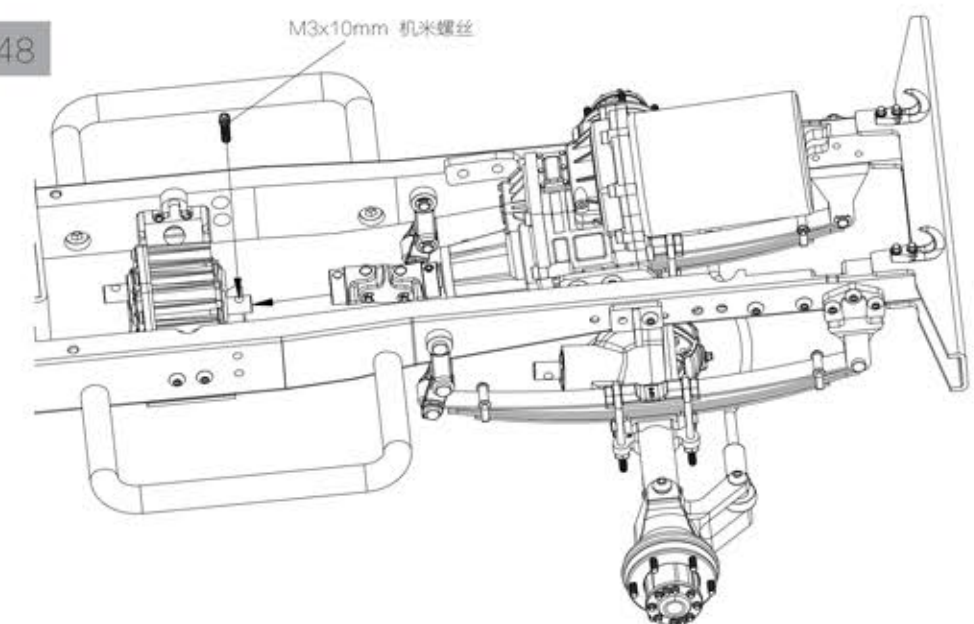

27



 
27

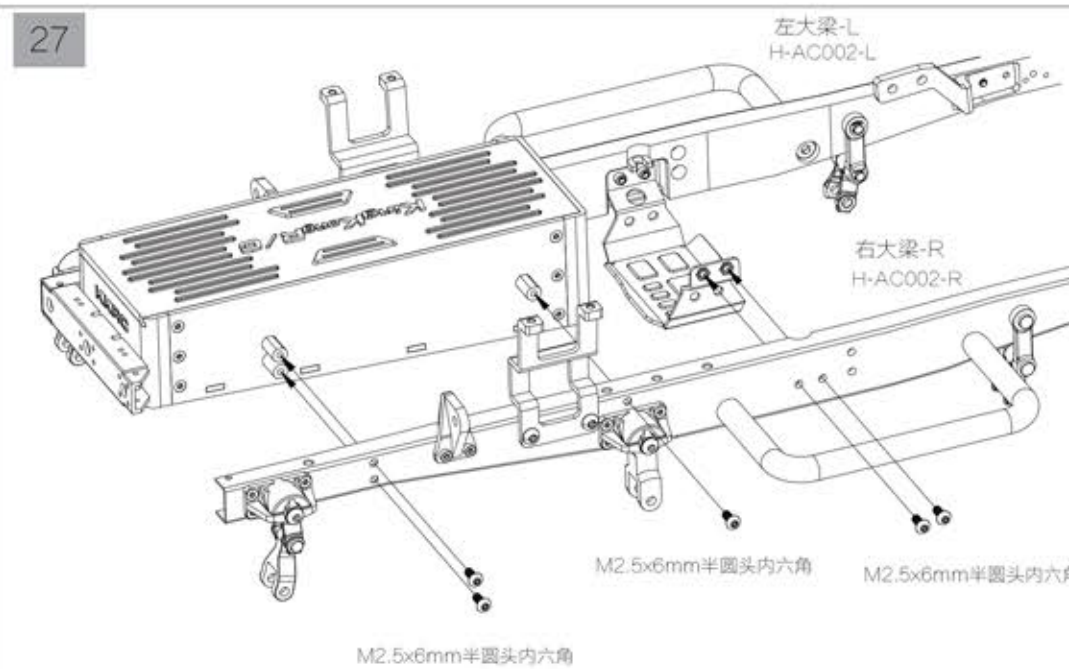

28

M2x4mm 杯头内六角 x1

 28

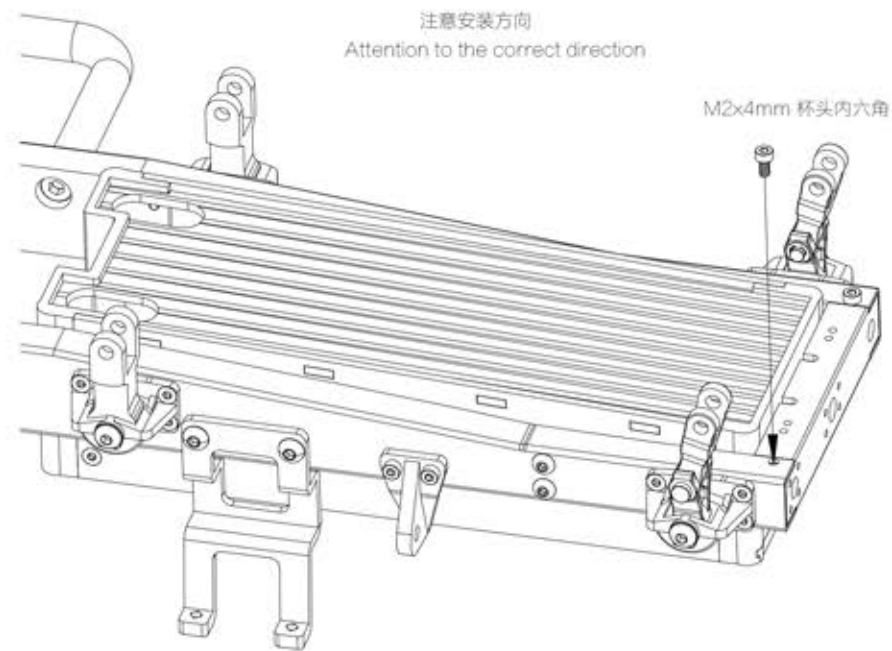


29

H-A0031 x1

M2x8mm 外六角 x2

M2x6mm 外六角 x2

 29

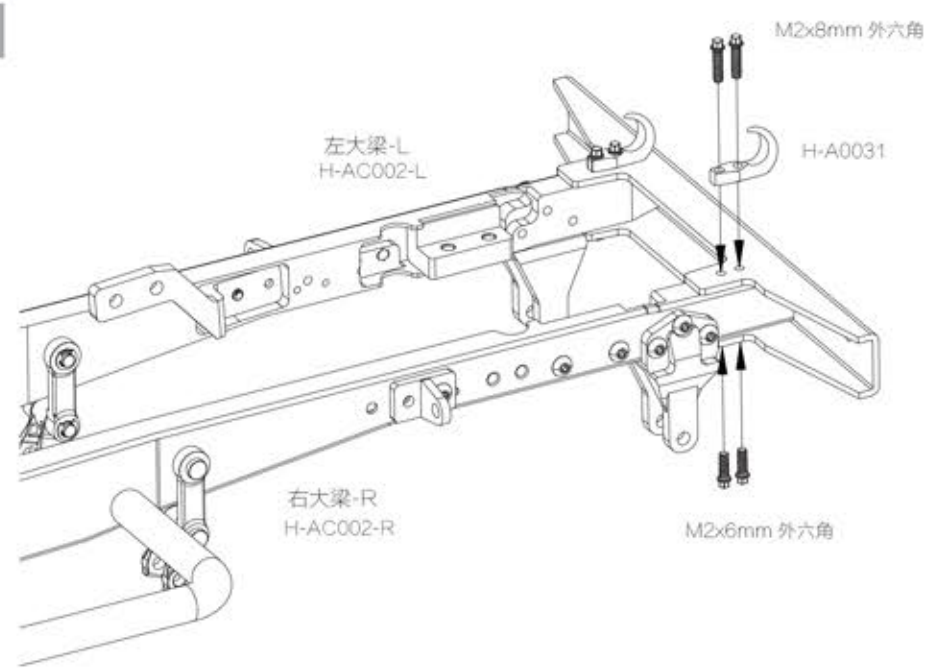


30

M2 防松螺母 x8

H-G001-001 x4

 
30

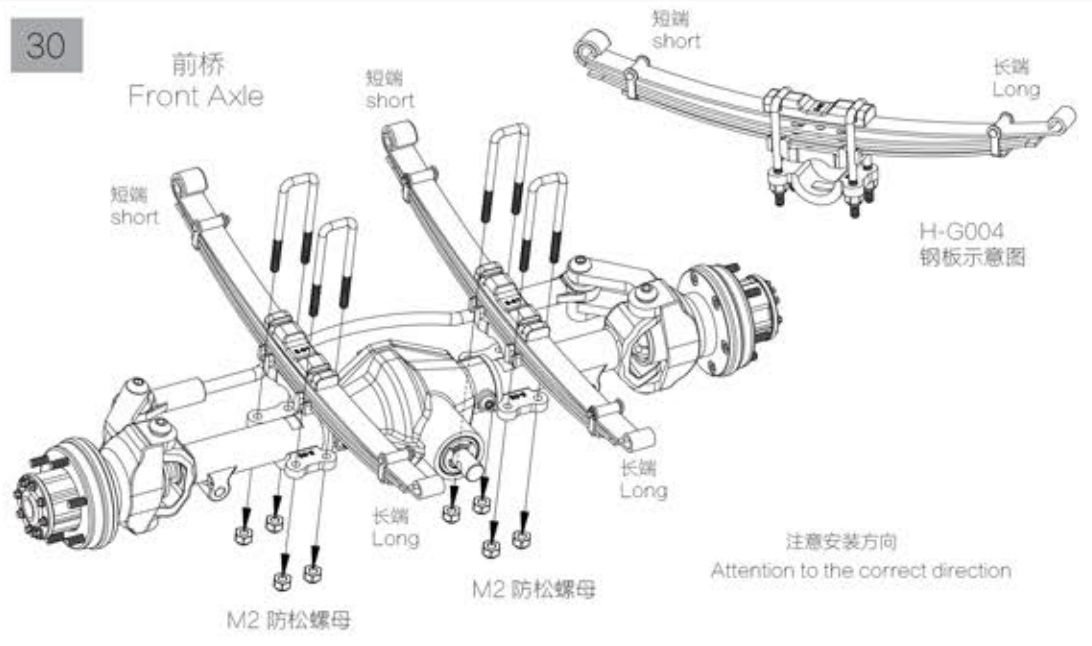

43

M3x6mm 半圆头内六角 x2

 
43

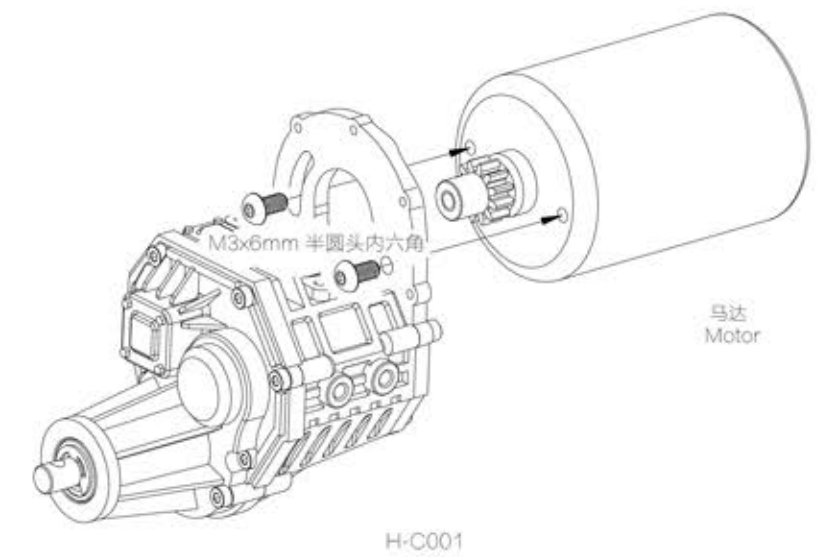

44

M2x6mm 杯头内六角 x8

 44

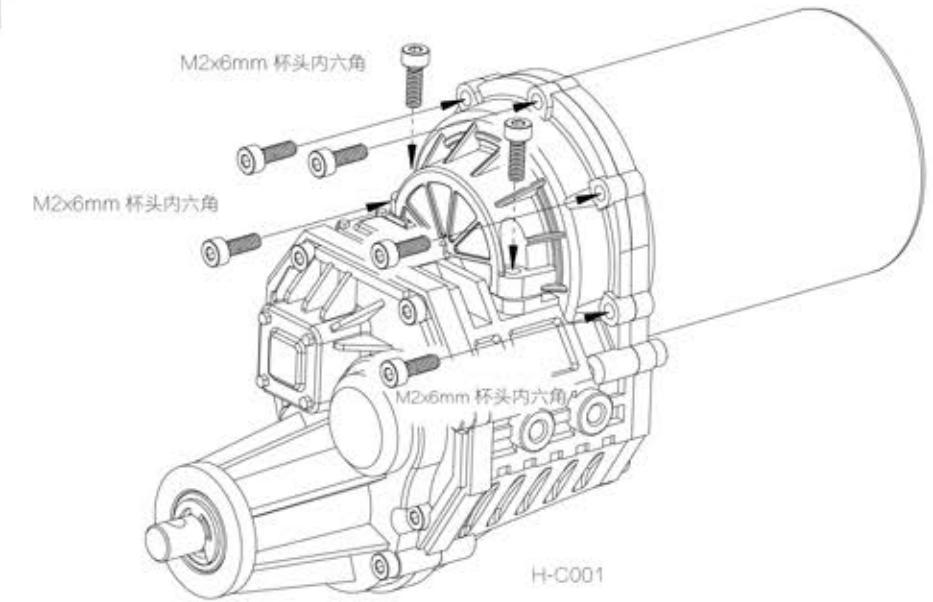


45

H-A0017 X1


M3x6mm 平头内六角 x2

 45

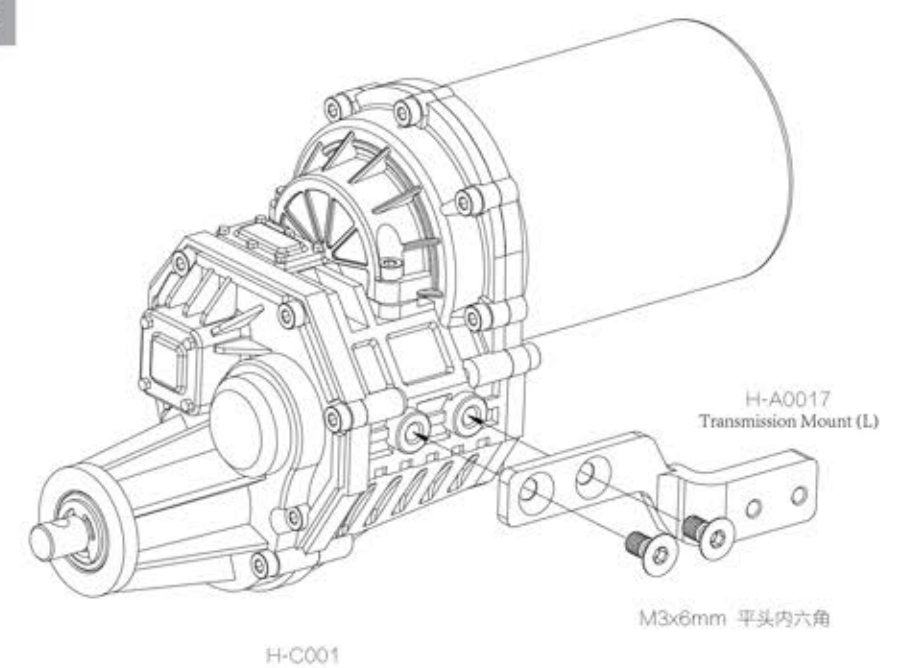


40

 分动安装示意图

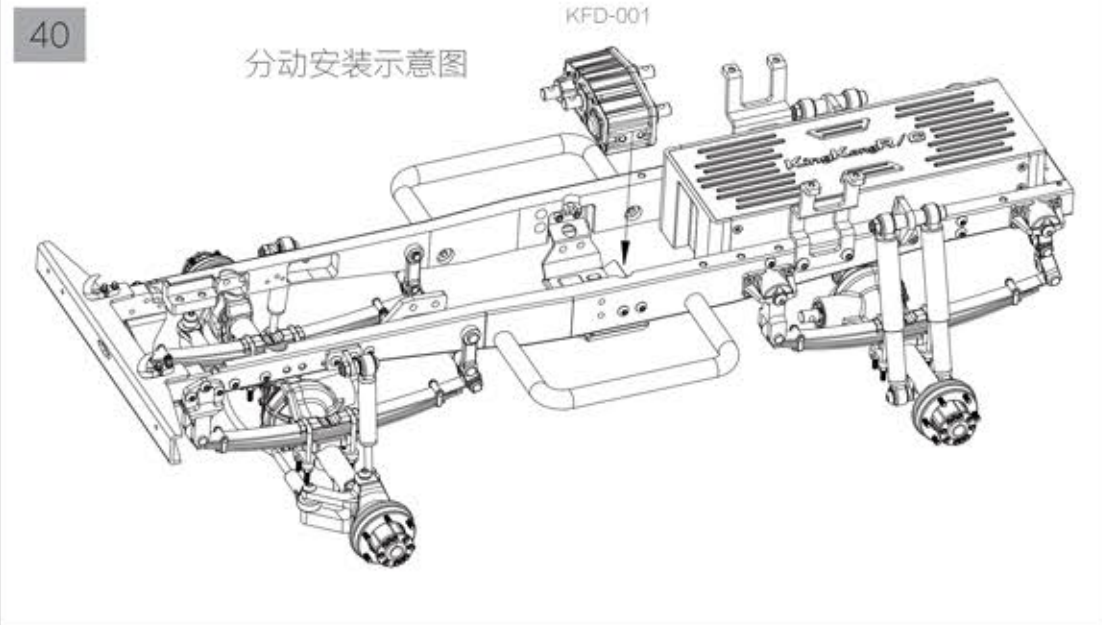

41

 
M3x4mm 半圆头内六角 x4

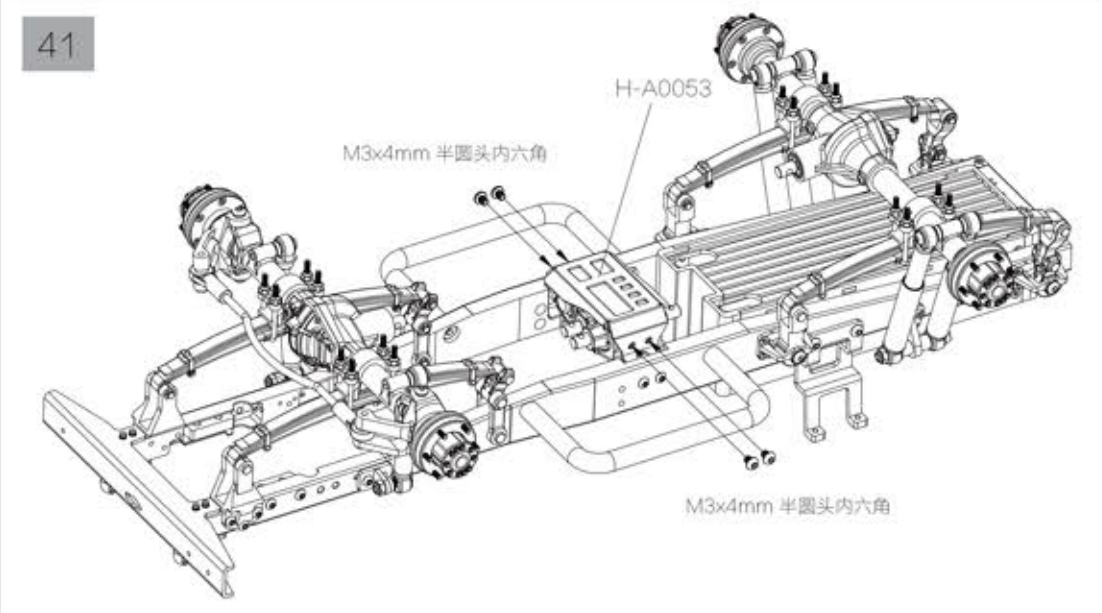

42

14T 起步齿

 M3 x3 机米螺丝 x1

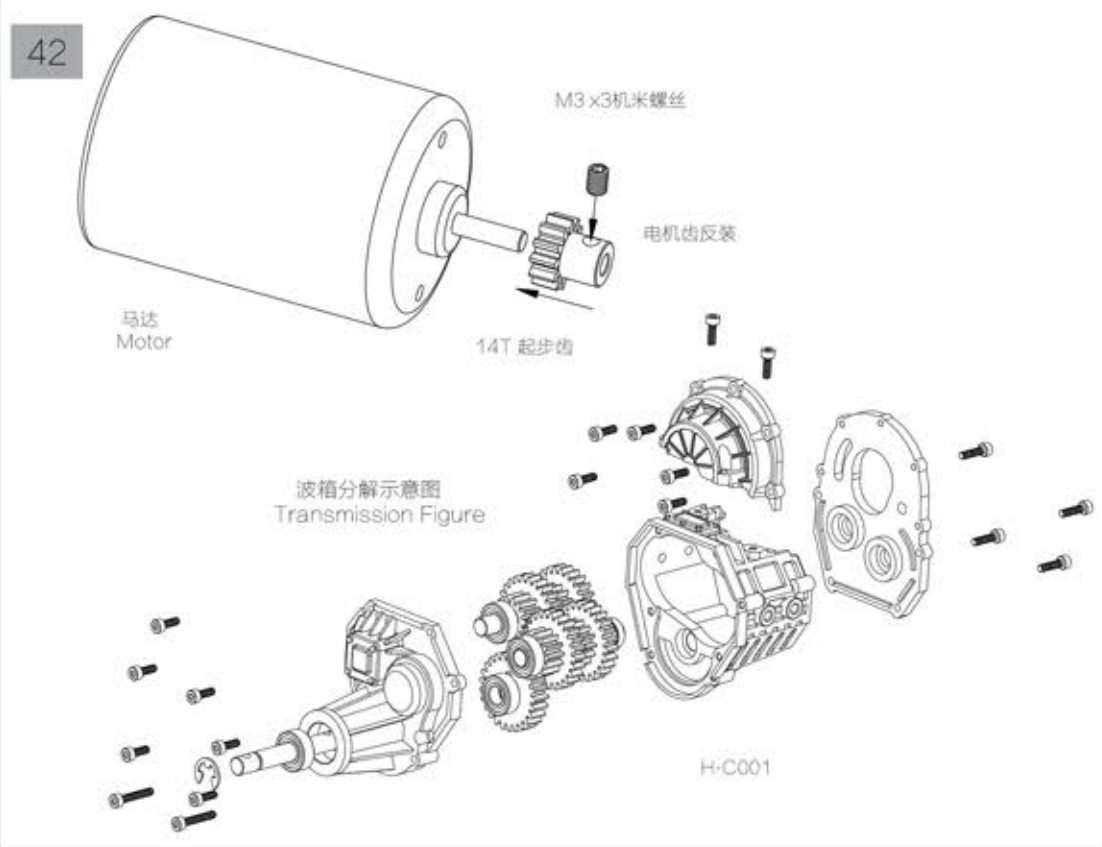

31

M2 防松螺母 x8



H-G001-001 x4

32

前桥安装位置示意图

33

 
H-A0022 x4



2mm 卡簧 x4


31

后桥 Back Axle

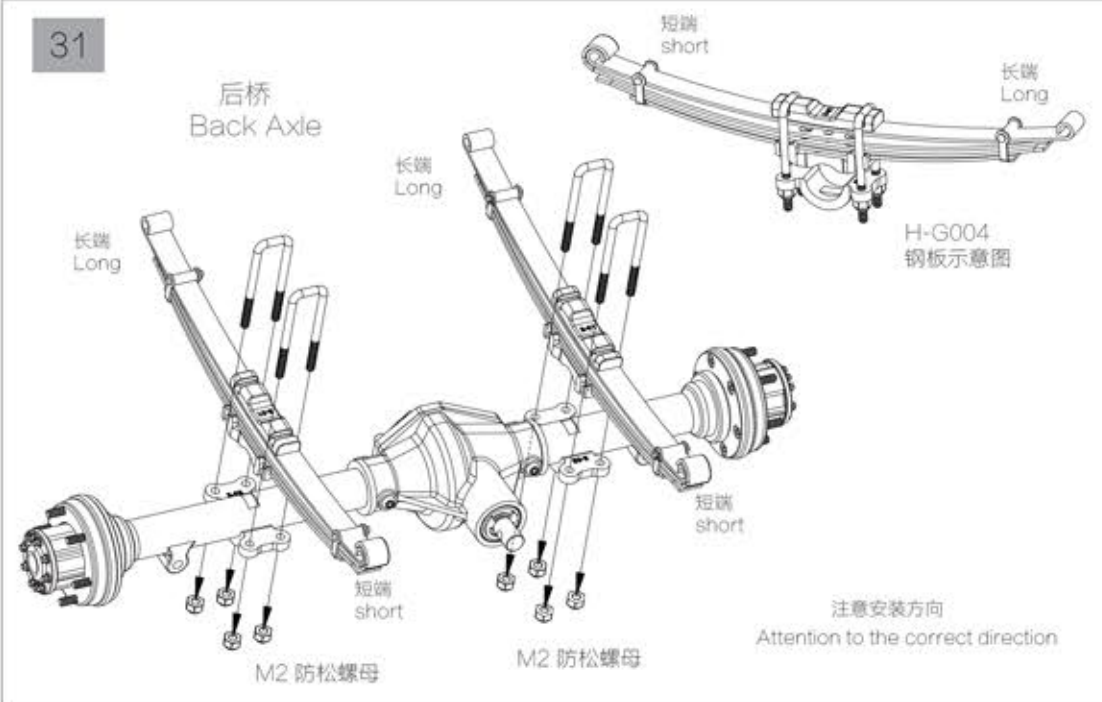


32

 前桥安装位置示意图

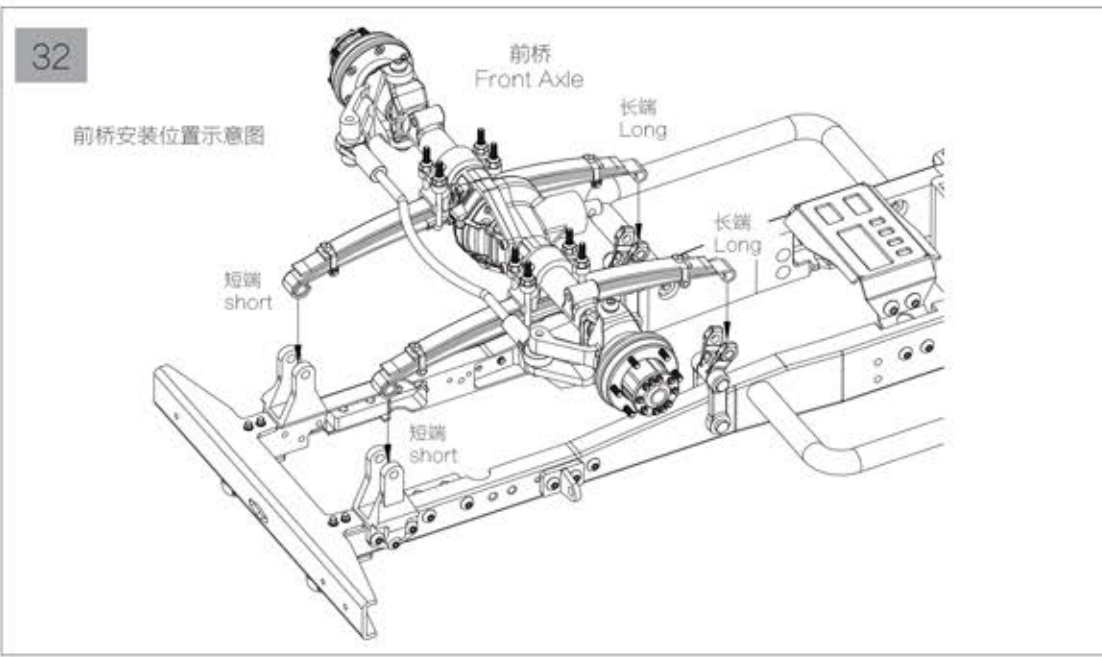

33

 前桥 Front Axle

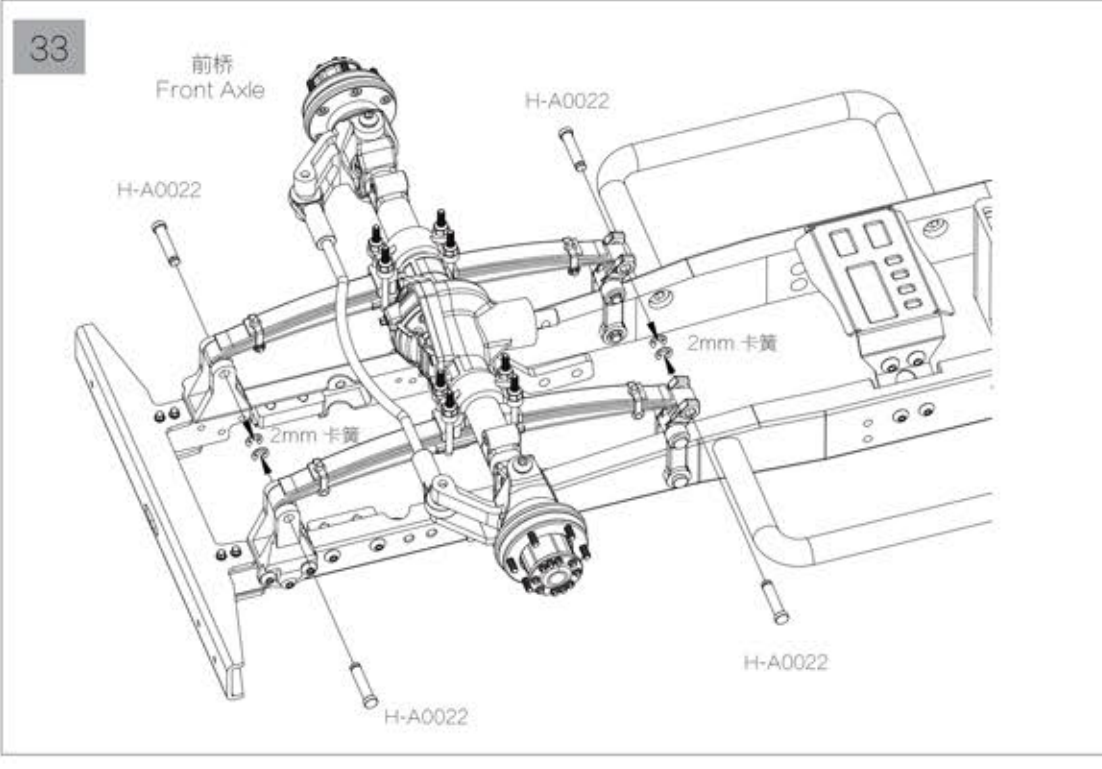


34

后桥安装位置示意图

34

 后桥安装位置示意图

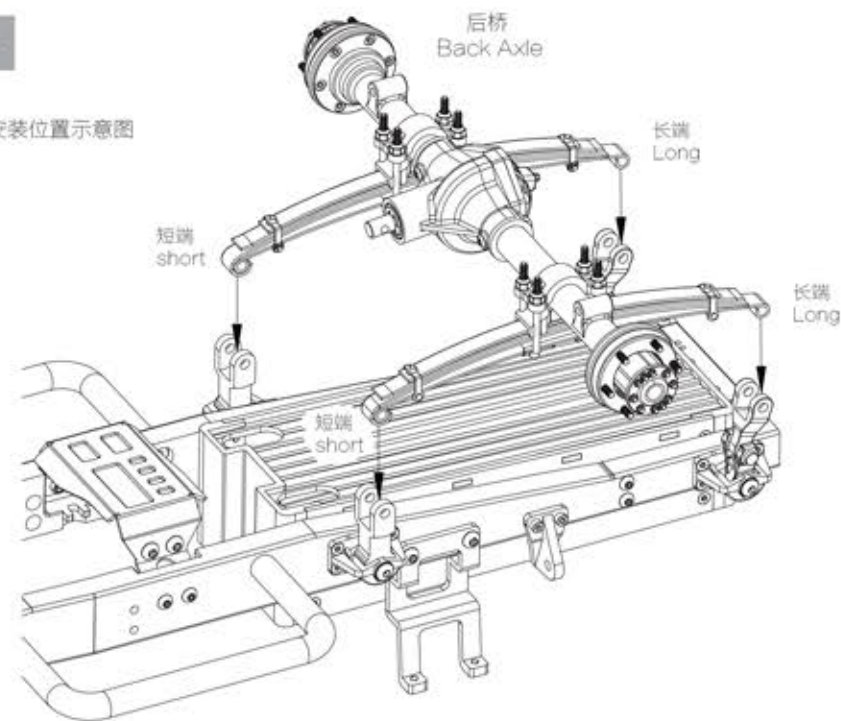

35

 


H-A0022 x 4



2mm 卡簧 x4

35

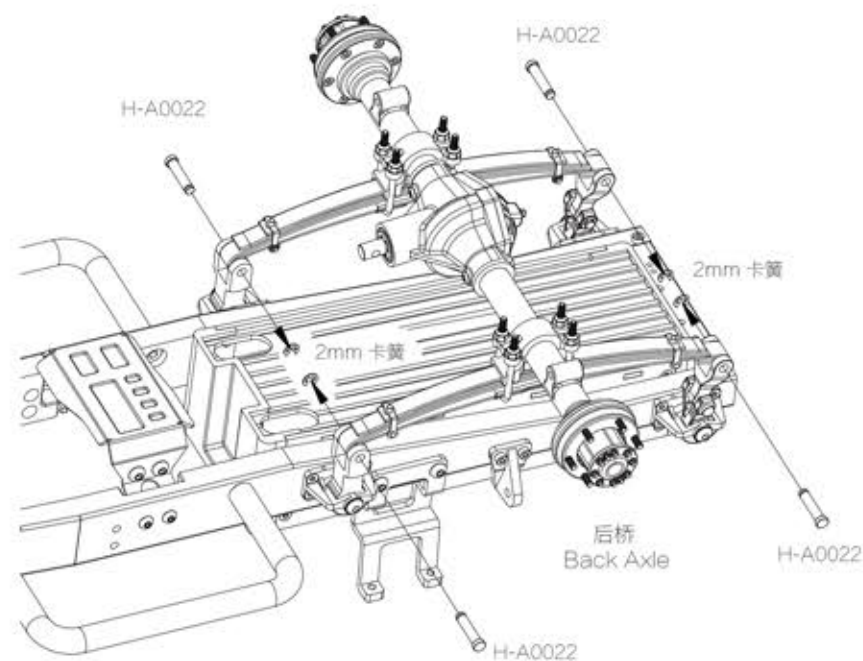

36



M3x12mm 半圆头内六角 x 1



M3x14mm 半圆头内六角 x 1

 


6X3X2 垫片 x2



M3防松螺母 x 1

36

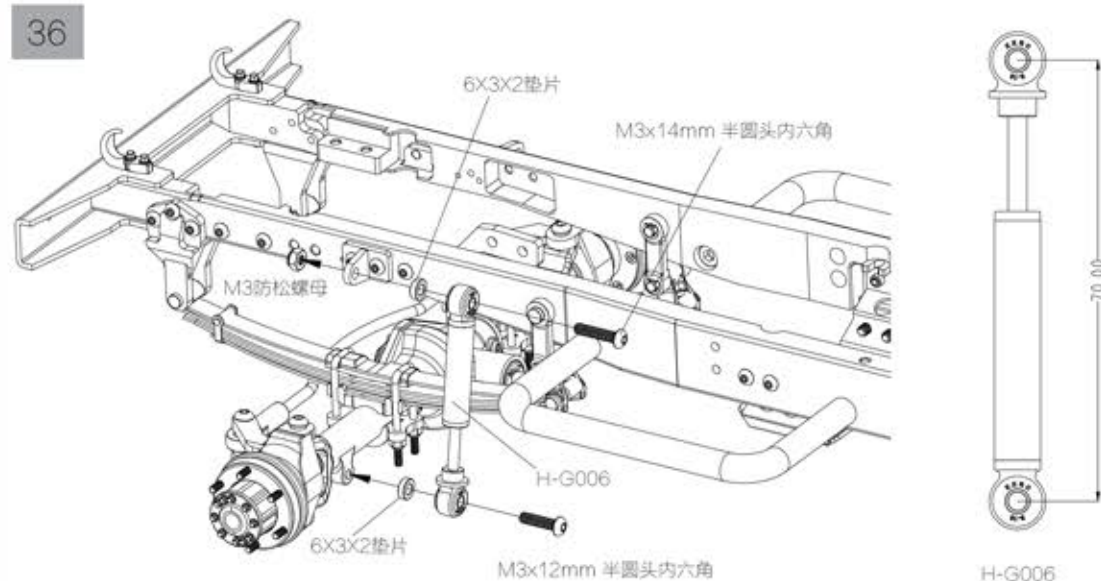

37



6X3X5.5 垫片 x2



6X3X2 垫片 x2



M3防松螺母 x 1



M3x12mm 半圆头内六角 x 2



M3x30mm 杯头内六角 x 1

38



6X3X5.5 垫片 x2



6X3X2 垫片 x2



M3防松螺母 x 1



M3x12mm 半圆头内六角 x 2

 


M3x30mm 杯头内六角 x 1


39

分动分解示意图

37

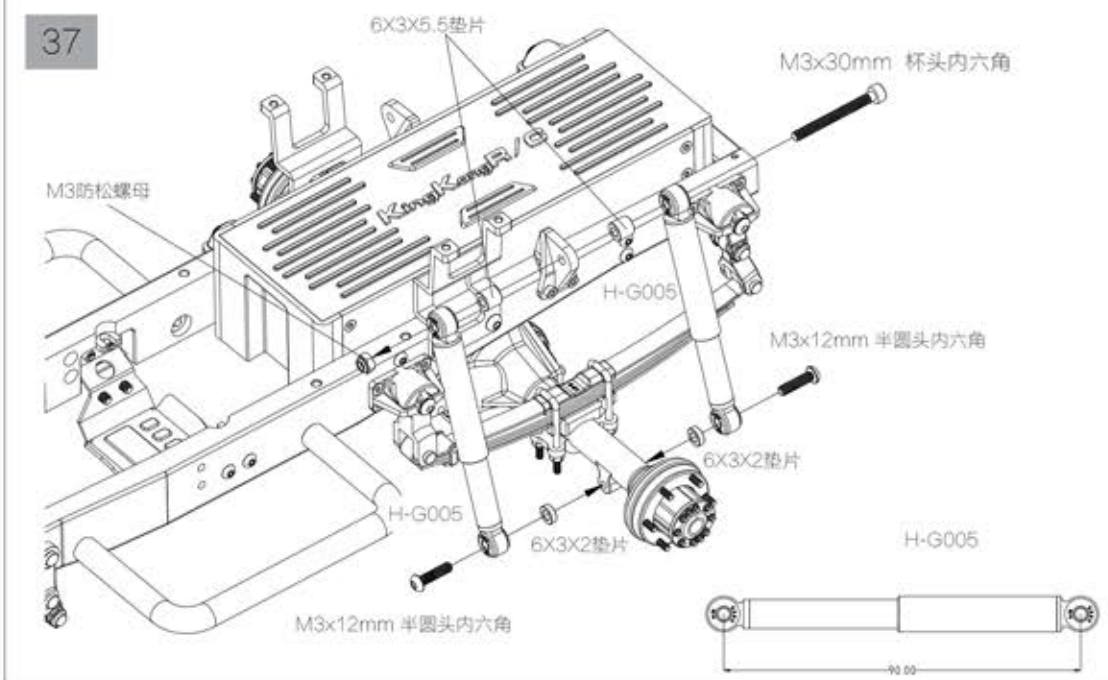

38

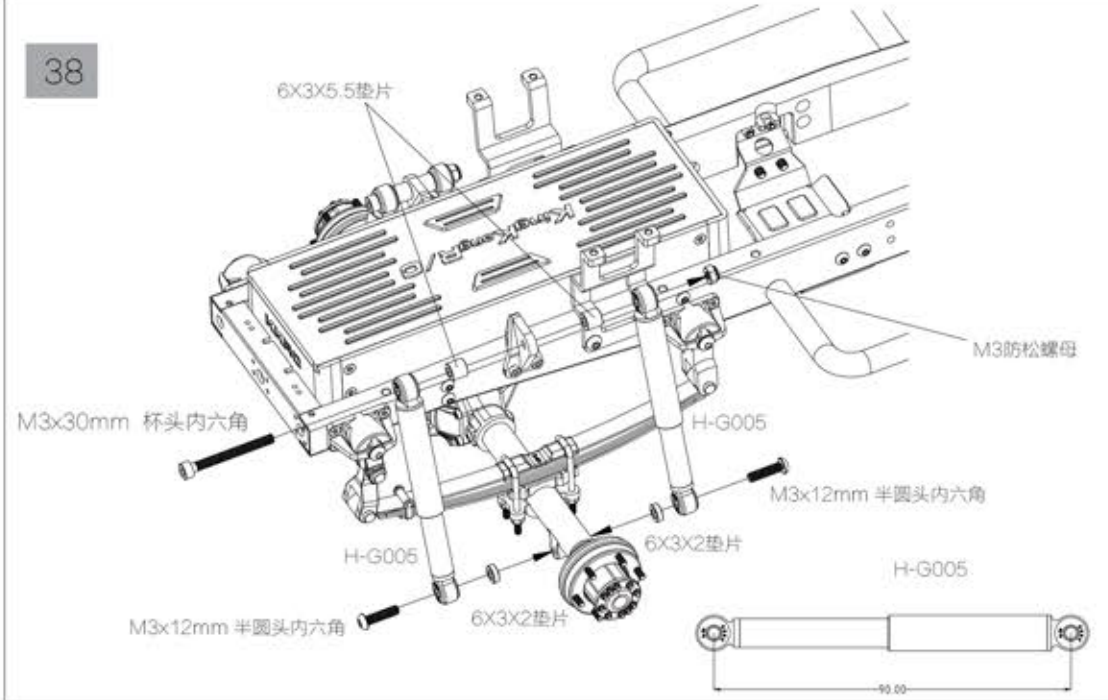 

39

分动分解示意图

