

SCALE **4WD** Series

BOLT-ON KIT
PARTIAL ASSEMBLY REQUIRED

BOOMRACING®
Your Radio Control Car Specialist

BRX02

1/10 4WD RADIO CONTROL CHASSIS KIT FOR SERIES LAND ROVER



www.EnjoyBeingABadass.com

INSTRUCTION MANUAL
VERSION 1.5

THE SCALE PERFORMANCE CONTINUES

Congratulations on your new BRX02 88 chassis!

Before you begin building, we want to express our gratitude for choosing Boom Racing products. As passionate R/C hobbyists ourselves, we strive to provide you with quality, fun-to-build, and high-performance products that we thoroughly enjoy too. We feel truly blessed to have the opportunity to design and manufacture hobby products for you. Without your support, we wouldn't be able to do what we do. So, thank you! If this is your first BRX vehicle, welcome to the Boom Racing family. Now, sit back, relax, and enjoy the build!

To start off, we'd like to introduce you to your unique license plates and VIN (vehicle identification number) system that identifies your vehicle as yours and only yours. All BRX02 88 chassis kits come with matching license plates, and all BRX chassis have unique VINs.

You can register your vehicle through our official website (<https://www.boomracing.com/vehicleregistration>). By registering your vehicle, you officially claim ownership, and no one else can claim it. As the registered owner, you become eligible to receive special promotions at any events hosted or attended by Boom Racing. Any future recalls, maintenance-related issues, and promotional offers, including priority pre-orders and giveaways, will be notified to you if you're registered. Once registered, vehicle logs will be kept for your future reference.

For a pre-owned vehicle, the new owner can view the history log of that vehicle. The vehicle ownership can be transferred from the registered owner to the new owner directly on our website to enjoy the same benefits, including our factory limited warranty.

Included with your BRX02 88 chassis kit is a set of classic UK license plates. The license plates consist of two groups of alphanumeric characters. The first three characters signify the BRX02 88 chassis. The numerical value following the first three characters, starting from 1, uniquely identifies each vehicle and matches the chassis number. Lastly, the last letter of the license plate identifies the chassis type—**S** for 88 and **L** for 109.

Track Your Adventures with Scaletra

We're excited to partner with **Scaletra Adventure**, the RC tracking app for scale trail enthusiasts. Scaletra lets you log your trail runs, build your virtual RC garage, join challenges, and connect with the community, and more!

As a BRX vehicle owner, you get exclusive benefits:

- Automatically sync your registered vehicles from your Boom Racing account to Scaletra.
- Register new BRX vehicles directly on Scaletra — they'll sync back to your Boom Racing account.
- Add an unlimited number of BRX vehicles to your Scaletra garage.
- Vehicle mileage syncs back to your Boom Racing account.

Thank you for choosing Boom Racing. Now, get out there and commit some badassery!




Scan to register your BRX02 88



FRONT 88



 REAR



A Bolt-On Kit means parts of the chassis are pre-assembled and require minor assembly for completion. The factory assembled parts offer convenience for builders eager to get started. The BRX02 kit includes factory pre-built axles and shocks. Shocks require oil to be filled (included).



The Scale 4WD Series is Boom Racing's line of scale based 4WD R/C products geared towards realistic appearance.



⚠ NOT RECOMMENDED FOR CHILDREN UNDER 14 ⚠

THIS CHASSIS KIT IS NOT A TOY. FIRST-TIME BUILDERS SHOULD SEEK ADVICE FROM PEOPLE HAVING BUILDING EXPERIENCE IN ORDER TO ASSEMBLE THE MODEL CORRECTLY. ASSEMBLE THIS KIT ONLY IN PLACES OUT OF CHILDREN'S REACH.



BEFORE YOU PROCEED

Congratulations! Owning the BRX02 88 is a truly special experience.

Carefully read and follow all instructions to prevent serious damage to your model. Failure to follow these instructions will be considered abuse and/or neglect.

Study the instructions thoroughly before assembly.

There are many small screws, nuts and similar parts. Assemble them carefully referring to the drawings. Follow the steps exactly as shown to build the vehicle correctly without issues.

If you decide to return the BRX02 88, do not begin assembly. Your hobby dealer will not accept a model for return or exchange after you have started assembly.

Boom Racing offers Spare Parts & Upgrade Options for improved performance. Visit our website (<https://www.boomracing.com>) or your local Boom Racing dealer for assistance. Please note that specifications, availability and price are subject to change without notice.

SAFETY PRECAUTIONS

All of us here at Boom Racing want you to enjoy your new vehicle. Operate your BRX02 88 sensibly and with care, and it will be exciting, safe and fun for you and those around you. Failure to operate your BRX02 88 in a safe and responsible manner may cause damage and injury and void your warranty.

Follow these outlined rules for safe radio control operation

- Read carefully and fully understand the instructions before assembly.
- **This model is not intended for use by children (minors) under 14 years of age without the supervision of a responsible and knowledgeable adult who should also read the instructions.**
- When assembling this kit, extra care should be taken to avoid personal injury. Keep out of reach of small children.
- Avoid running the vehicle in crowded areas and near small children.
- BRX02 88 can be very fast and quiet. It could cause injury to those unaware of its presence.

Inspect Your BRX02 88 Before and After Operation

- Make sure that all screws and nuts are properly tightened.
- Use thread lock on screws for any metal on metal surface.
- Adjust steering servo and trim so that the BRX02-88 runs straight with transmitter in neutral.
- Disconnect/remove all batteries after operation.
- Replace any batteries that have been dented, are bloated, or have frayed wires, short circuits can cause fire.
- Completely remove sand, mud, dirt etc after use to prolong the life of the BRX02-88.
- Maintain bearings by cleaning or replacing them regularly.

WARRANTY

Boom Racing's One (1) Year Factory Limited Warranty – A Peace Of Mind Right From The Start

WHO IS COVERED

This warranty is extended to the original end-user that registers it online (<https://www.boomracing.com/vehicleregistration>) only, whether purchased or received as a gift.

FACTORY LIMITED WARRANTY

What Is Covered and For How Long

Boom Racing warrants that all new products are free from defects in manufacturing, materials and workmanship for a period of one (1) year from date of retail purchase. The receipt or invoice at the time of purchase is your proof of purchase and is required for Boom Racing to honor any warranty.

What Is Not Covered

It does not cover defects or malfunction caused by user error of assembly, damages due to normal wear and tear, failure to follow operating instructions, misuse or abuse, users' failure to perform routine maintenance, or use with products with which is not intended to be used. It also does not cover damages caused by unauthorized alteration, modification or repair. It does not cover cosmetic or incidental damages. Boom Racing does not warrant or provide service or support for any third party products.

The JX mini servo warranty will be void if it is disassembled.

What We Will Do

We will, at our discretion, repair or replace any product free of charge that is incorrectly made or proves to be defective in material or workmanship during the warranty period. If your product is no longer being manufactured or is out of stock, we may replace your product with a comparable or improved product at our option.

What We Will Not Do

We will not pay for shipping, insurance or transportation charges from you to us, or any import fees, duties and taxes.

What To Do To Obtain Warranty Service

To obtain warranty service for products purchased from a third-party, retail or directly from Boom Racing you must return the product with proof of purchase using the following procedures:

1. Contact Boom Racing Customer Support for specific warranty instructions via our website, by email, telephone, or our social media accounts:

- Online @: <https://www.boomracing.com/contact-us>
- Email: sales@boomracing.com
- Telephone: 1-209-676-8880

You may be asked to complete a warranty service request form. A copy of your purchase receipt may be required.


2. Our Customer Support may ask you to return and ship the defective product back to us. Label and ship the product, freight prepaid, to the address provided by Boom Racing; and
3. Place any necessary return authorization number prominently on the outside of the return packaging. Return packaging not bearing a return authorization number where required may be refused.

Boom Racing reserves the right to final decision, change or modify this warranty without notice.


Equipment Required




3CH Radio

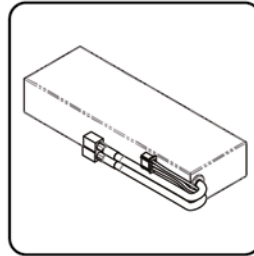


Battery

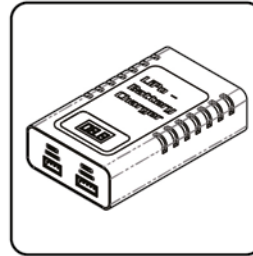


Charger

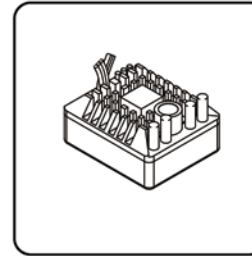

ESC

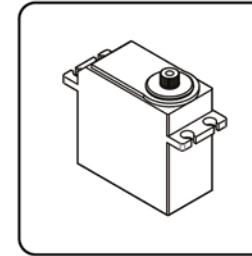

Steering Servo

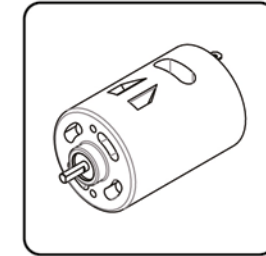

540/550 Motor


Tools Recommended




KUDU™ Allen Hex Wrench Set
#BRKT10020




Shock Slime Grease 5g
#BRGRS09-5GB

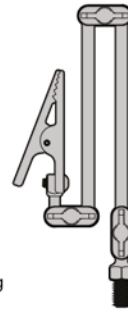

Multifunctional Soldering Jig
#BRT10058

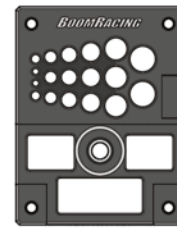

Multipurpose Shock Pliers
#BRT10065

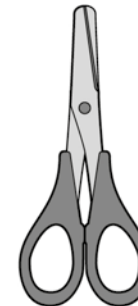


Scissors



Hobby Knife



Slot Screwdriver

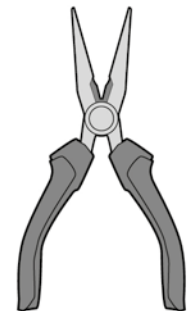

Long Nose Pliers

Icon Legend

These icons indicate safety warnings, required materials, and build tips used throughout this manual.



Thread Lock
Apply thread lock to places shown by this mark.
Apply thread lock first, then assemble.
(Do Not Use Red Loctite)



Black Graphite Grease
Lubricate all gears.
Apply grease to the places shown by this mark.
Apply grease first, then assemble.



Silicone Grease
Lubricate all moving parts including joints and bearings.
Apply grease to the places shown by this mark.
Apply grease first, then assemble.



Shock Oil
Apply shock oil to the places shown by this mark.



Apply Double Side Tape



Oil Leak Resistant




Item not included.




Pay attention to note on page.

4

1

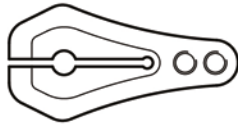
 Servo Horn A - 25T x 1
 #BR955014BK

 3


 KUDU™ 80mm Scale Shock Absorber x 4
 #BRSH0080


2


 Shock End Pivot x 8
 #BRW750310

 Joint Retainer x 10
 #BRSHJR

4

#BRX0290011

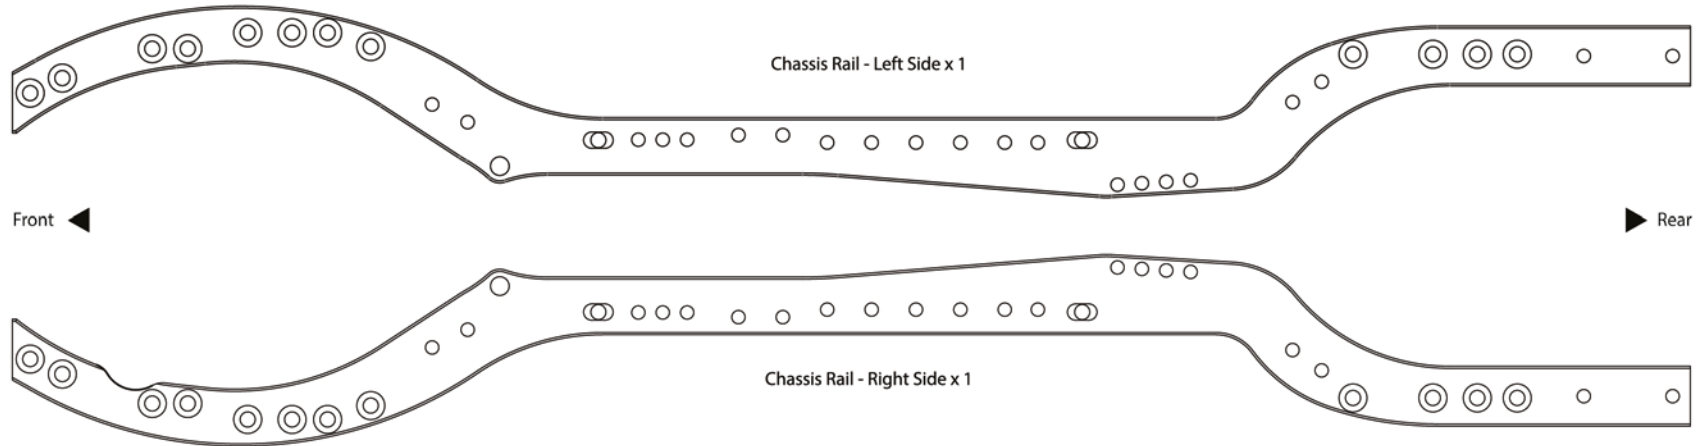

5



 Front Anti-Wrap Bar x 2
 #BRX020027

6


 Brass Washer x 4
 #BRX020030

7

#BRLC7064A

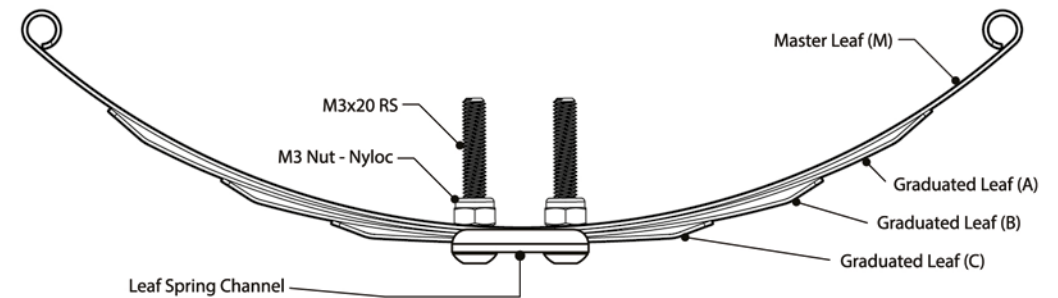



8


 Stainless Steel M4x40 Anti-Wrap Bar x 2
 #BRLC7064C


4 sets

9

#BRX020064B

  Front Leaf Retainer
- Left x 1Front Leaf Retainer
- Right x 1

 10


Leaf Spring Shackle Type-B x 4
#BRX020064A

11

#BRLC7064F




Rear Leaf Retainer - Outside x 2

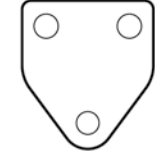


Rear Leaf Retainer - Inside x 2


12

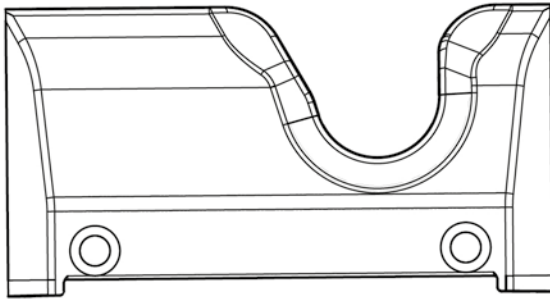Front Center Skid Slider x 1
#BRX0290107F






13

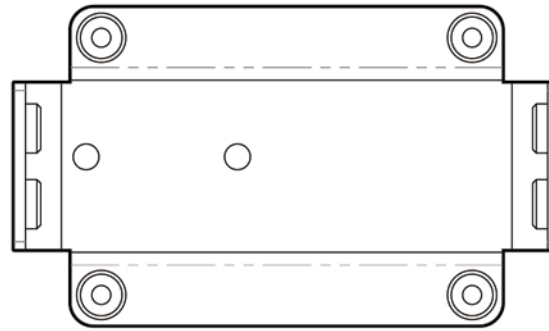Center Skid Plate x 1
#BRX020020LF


14

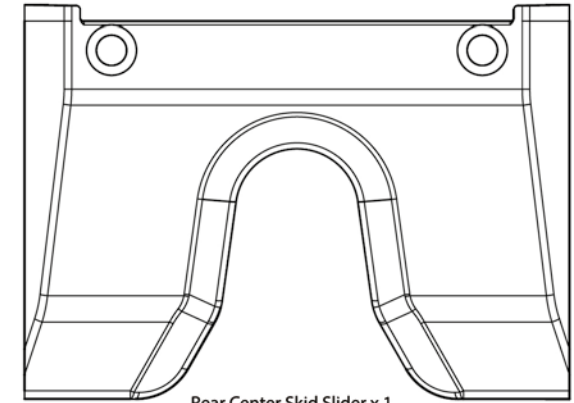Rear Center Skid Slider x 1
#BRX0290107R

     
13

KUDU™ Nylon Rod End
(Straight 18.5mm) x 4
#BRW750306AKUDU™ Nylon Rod End
(Straight 21.8mm) x 2
#BRW750309BKUDU™ Nylon Rod End
(Sideways) x 1
#BRW750308CKUDU™ Nylon Rod End
(Upwards 20.0mm) x 1
#BRW750307DBADASS™ Stainless
Steel Pivot Ball x 8
#BRW750310D2 Ball & Rod End x 1
#BRQ9035115 **B** LEAFS / SHOCKSM3x24 RS x 3
#BRASBH3024M3x16 RS x 8
#BRASBH3016M3x14 RS x 1
#BRASBH3014M3x10 RS x 1
#BRASBH3010M4x16 SS x 2
#BRASST40163x6x3
Tapper Spacer x 8
#BRLC7041D4x7x1
Stainless Steel Spacer x 2
#BRASSP471D6x1.5 O-Ring x 2
#BRSDRD6-15M3 Nut - Nyloc x 1
#BRASNUTM315 **C** LEAF SPRINGSM3x22 RS x 2
#BRASBH3022M3x12 RS x 4
#BRASBH3012M3 Nut - Nyloc x 20
#BRASNUTM3M2.5 Nut x 2
#BRASNUTM25M3x8 RS x 2
#BRASBH3008M2.5x14 RS x 2
#BRASBH2514D6x1.5 O-Ring x 8
#BRSDRD6-153x6x3
Tapper Spacer x 2
#BRLC7041M3x14 Bolt x 12
#BRLC7064ED4x7x1 Nylon Spacer x 4
#BRASSPD471/N15 **A** CHASSISM3x14 RS x 4
#BRASBH3014/STM3x12 RS x 8
#BRASBH3012M3x10 RS x 9
#BRASBH3010M3x8 RS x 4
#BRASBH3008M3x6 RS x 2
#BRASBH3006M2.5x4 RS x 8
#BRASBH2504M3x10 CSS x 28
#BRASFH3010M3x6 CSS x 4
#BRASFH3006M2x4 SC x 4
#BRASCH2004M3x4 SS x 2
#BRASST3004M3x3 SS x 4
#BRASST3003M3 Nut - Nyloc x 4
#BRASNUTM3M3x5 Hex Cap Screw x 2
#BRASHS300515 **D** WHEELSM4 Nuts - Nyloc x 4
#BRASNUTM4D4x7x2
Steel Spacer x 4
#BRASSP472D2x10 Pin x 4
#BRASPIN210

 
16


 Stainless Steel Tie Rod x 1
 #BRD8022A

 17


 Fine Tunable Link - 55mm x 1
 #BRLC7050



18

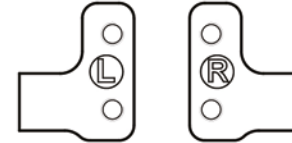
 Steering Servo Mount x 2
 #BRX020108

19



 Body Latch Pin x 4
 #BRX020034

 20

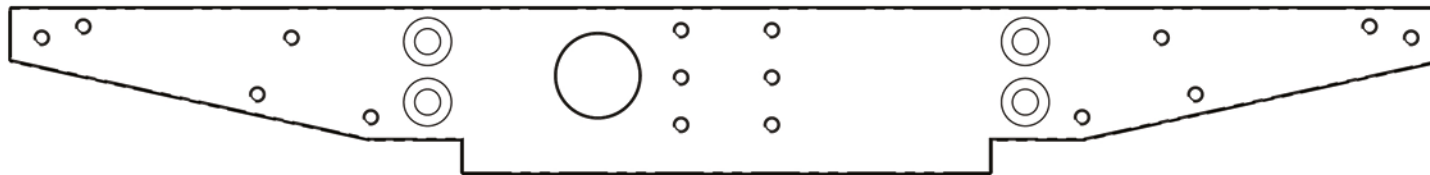

 Front Bumper x 1
 #BRX020109F

 Rear Bumper x 1
 #BRX020109R

21
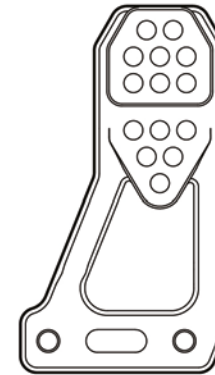
#BRX020018F

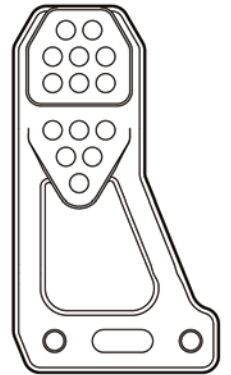


Front Shock Mount - Left x 1




Front Shock Mount - Right x 1

22

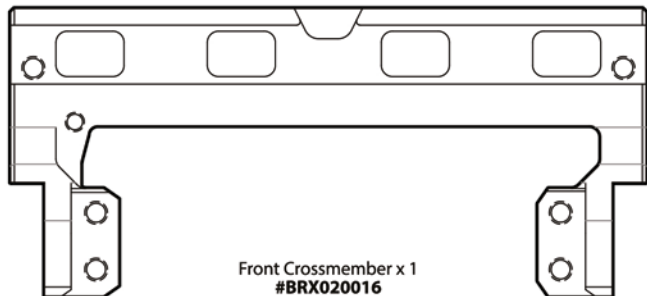
 Front Crossmember x 1
 #BRX020016

23

#BRX020110

 
 Side Gearbox Mount
 - Left x 1

 Side Gearbox Mount
 - Right x 1

 
24


 D3x6x9 Spacer x 2
 #BRX0290016

25



 Mini Servo Mount x 1
 #BRX0290012

26




KUDU™ HD CVD Front Center Drive Shaft x 1
#BRX029043

 28




KUDU™ HD CVD Rear Center Drive Shaft x 1
#BRX029043

27

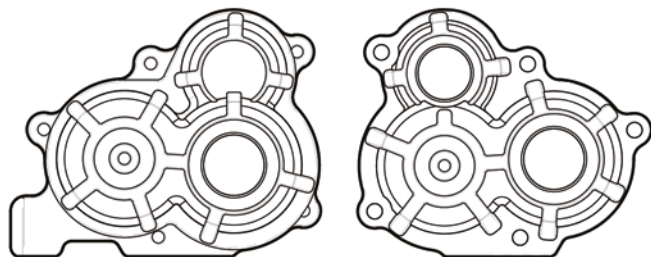


B2X™ Transfer Case Housing x 1
#BRX020111

29

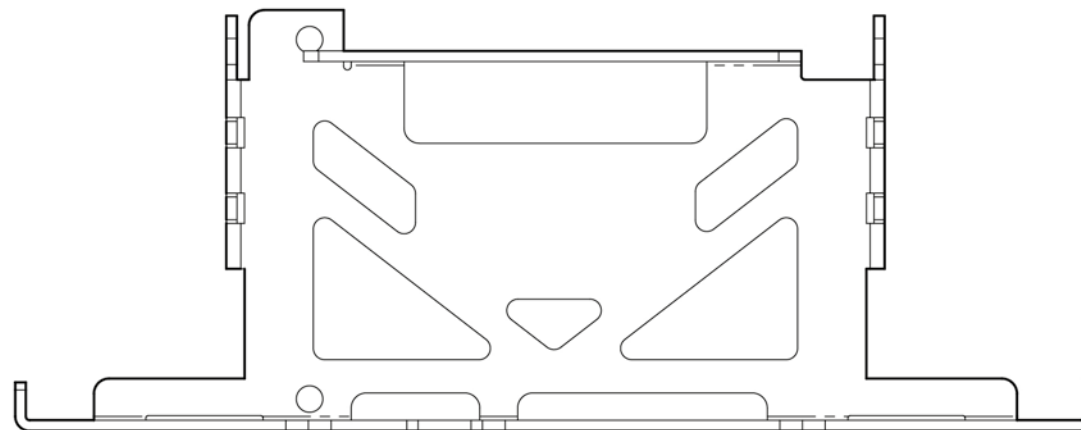

Battery Tray x 1
#BRX029021

31

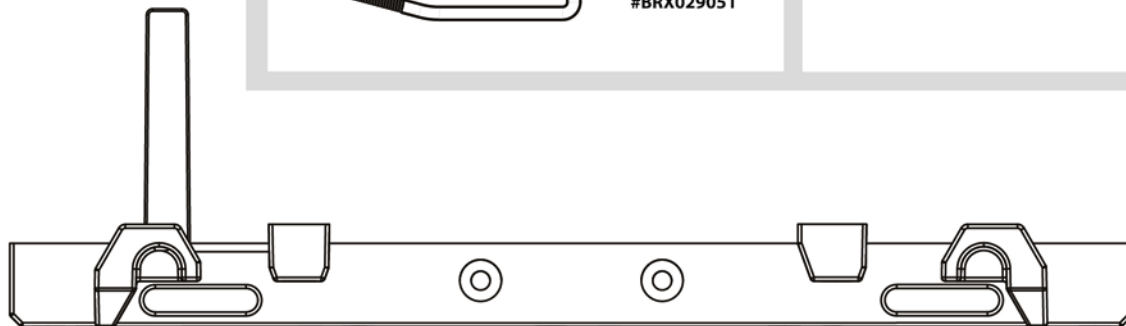

Aluminum Body Brace
⚠ (Provided with Series Land Rover Body Kit)

30



Shift Rod x 1
#BRX029051

#BRX020112

34

#BRX020113



Rear Bumper Guard x 2

32



Body Post x 4
#BRX020039

33



Quick Release Body Latch x 2
#BRX020061

35





Mid Crossmember x 1
#BRX020014

36




39

#BRX029019

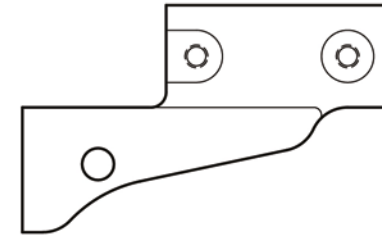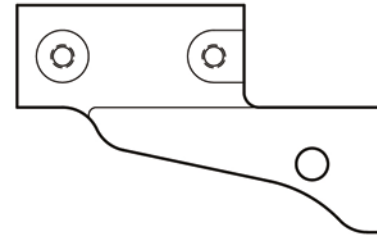


37

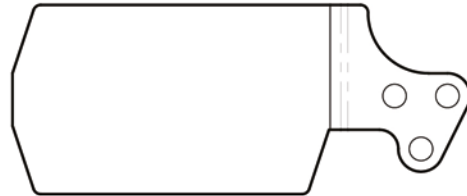


40

#BRLC7033

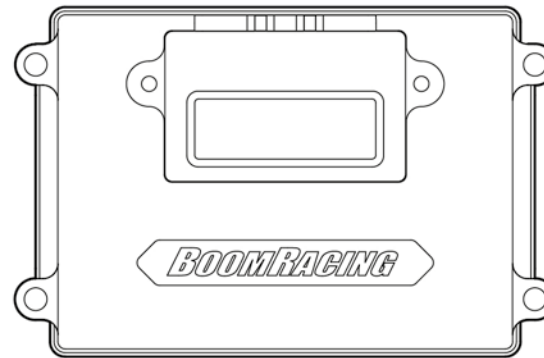




ESC Mount Bracket
#BRX020106

#BRLC7033A

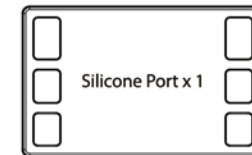


38

#BRX020018R

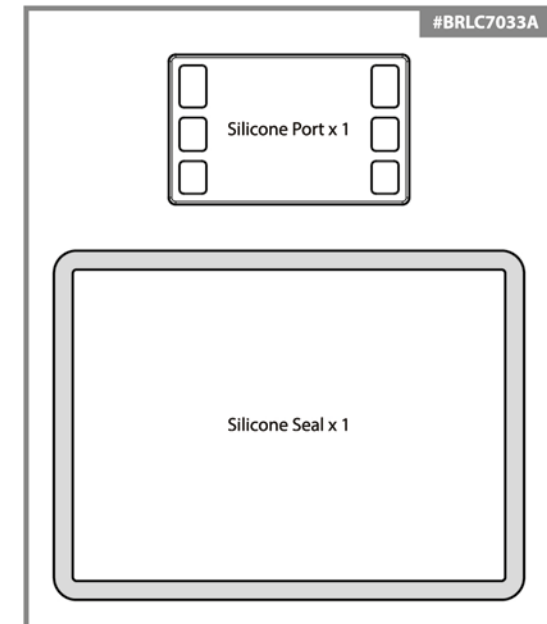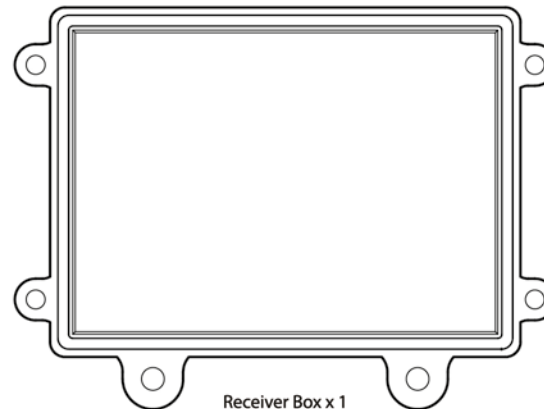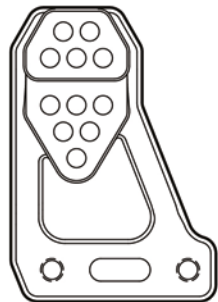

41

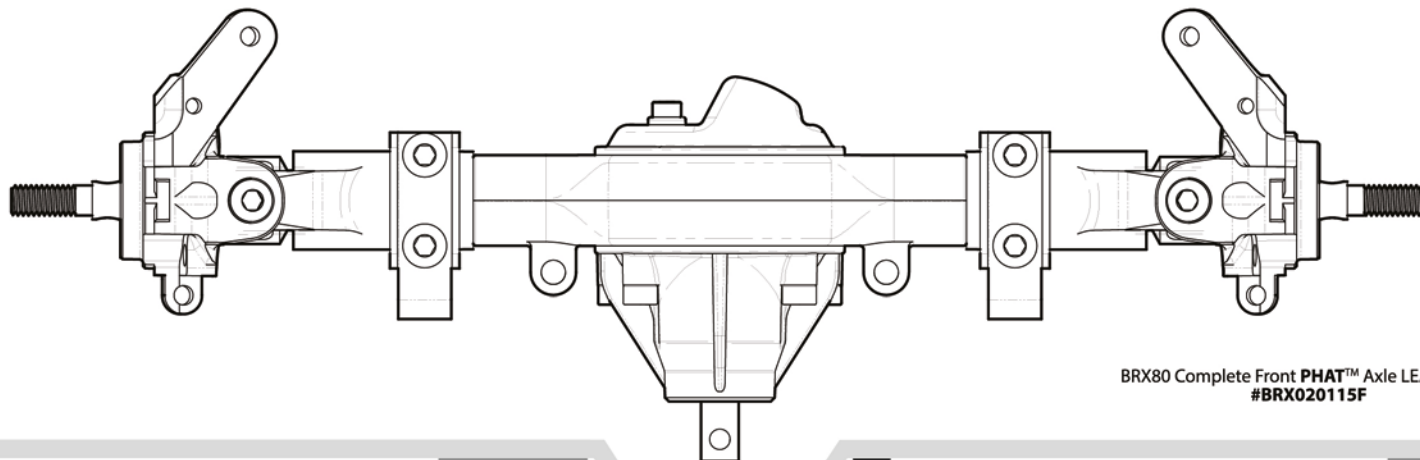


BRX80 Complete Front **PHAT™** Axle LEAF Ver. x 1
#BRX020115F


42

BCF2™ Gearbox Housing (2pcs)

#BRX020029

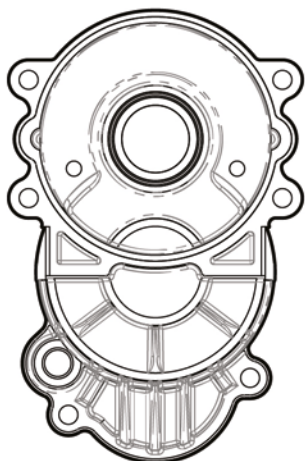


Gearbox Housing A

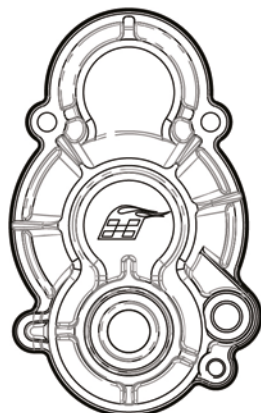


Gearbox Housing B

43

#BRLC7027V2

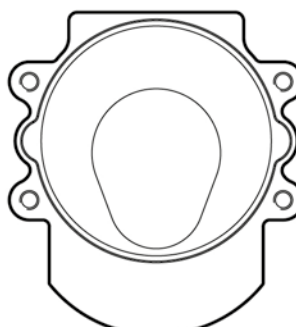


Gearbox Adapter x 1

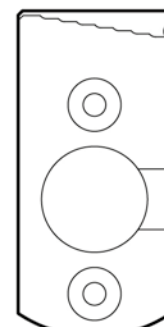

Motor Mount x 1


44

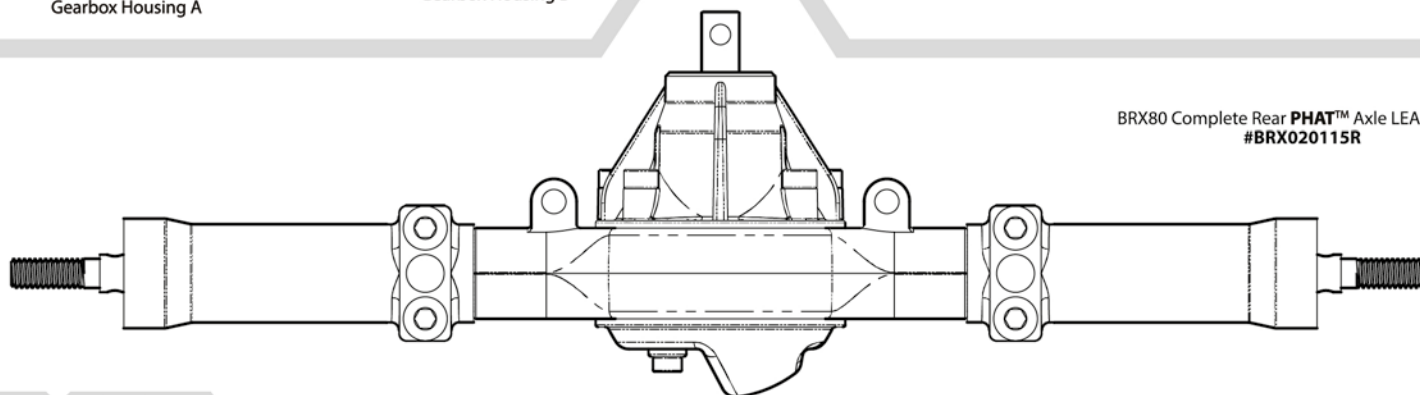

BRX80 Complete Rear **PHAT™** Axle LEAF Ver. x 1
#BRX020115R

45

#BRW780944

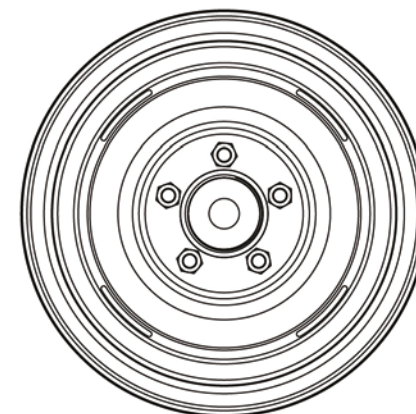

SLR™ 1.9 Classic Steel Wheel x 4
w/ Cap and Scale Hardware




Wheel Caps installation Tool x 1
#BRW780944D




Nylon Wheel Caps x 4
#BRW780944C

BRX02

45

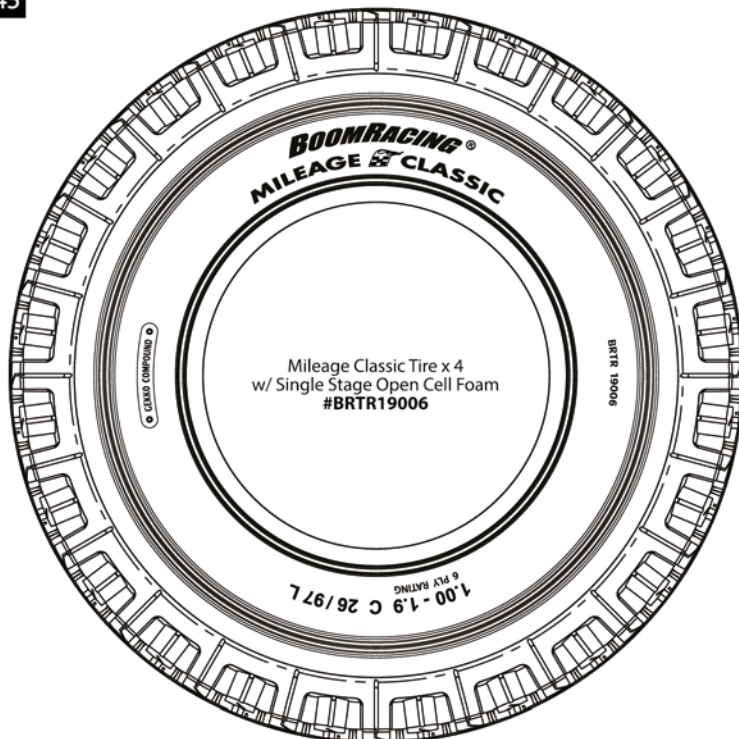


46

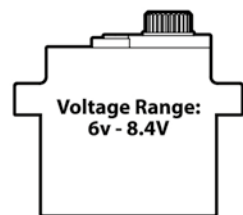

JX Waterproof HV Mini Servo x 1
#JX/PDI-HV1151MG


47

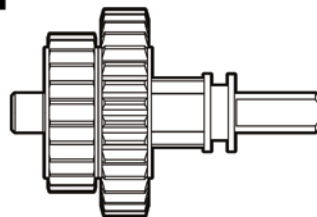

2-Speed Gear Unit x 1
#BRLC7044E



Spur Gear Mount x 1
#BRLC7030

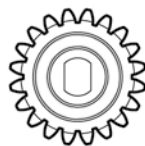


Spur Gear 20T x 2
#BRLC7029-20T




Bearing Holder x 1
#BRX020029A


47 E GEARBOX / TRANSFER CASE

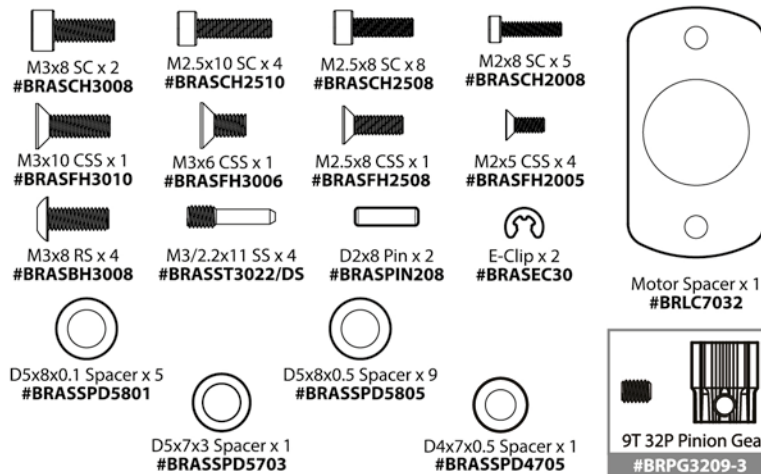



47 F RECEIVER BOX

 


47 G BODY MOUNTS

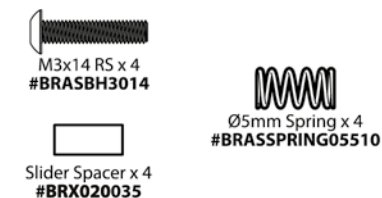


47 H SERVOS

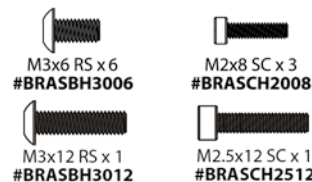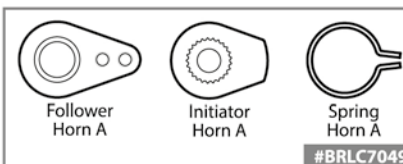

47 I GEARS, SHAFTS & BEARINGS - TRANSFER CASE

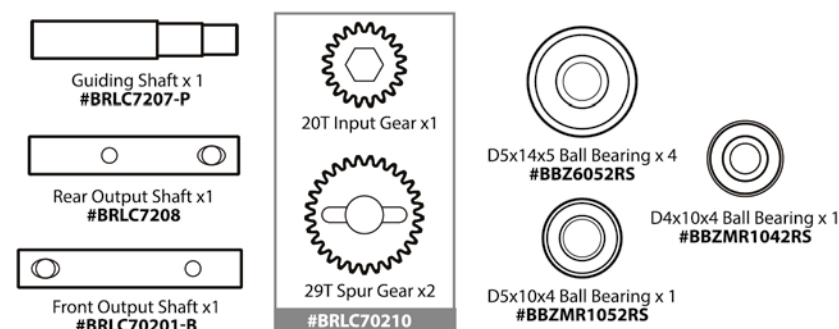

47 J GEARS, SHAFTS & BEARINGS - GEAR BOX

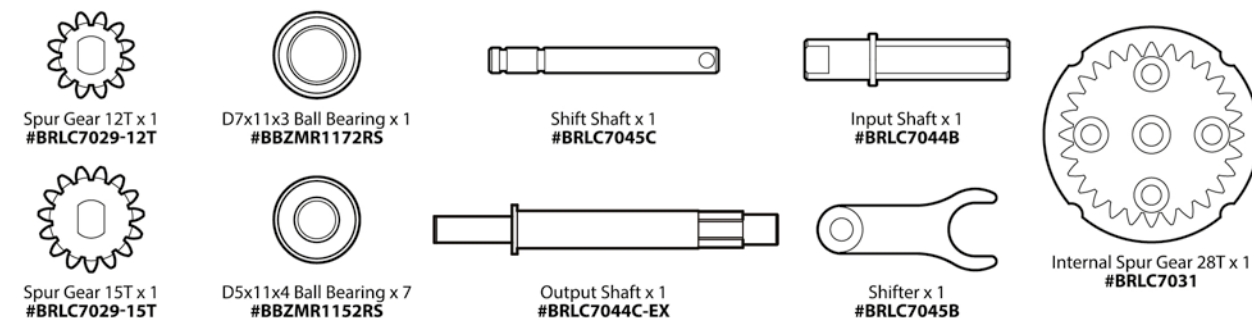

47



Extension Cable x 2
#BRLC7059


47



10 x 1.5cm Double Side Tape x 1




47

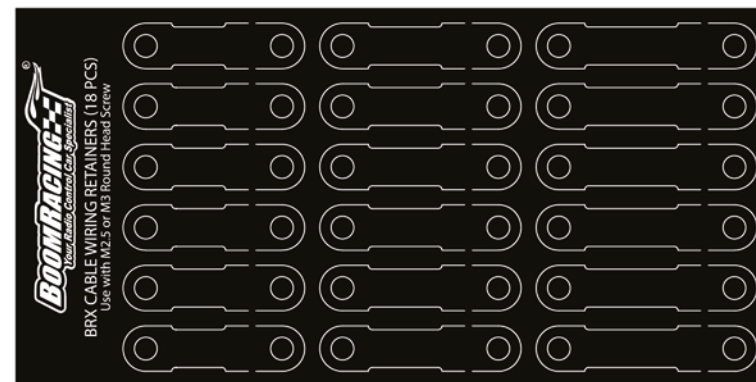

Cable Wiring Retainers
#BRT10037

47

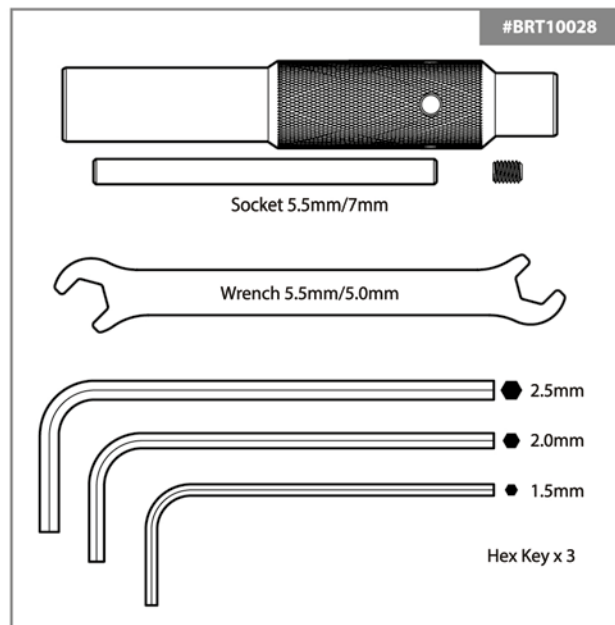

#BRT10028

Socket 5.5mm/7mm


Wrench 5.5mm/5.0mm

2.5mm

2.0mm

1.5mm


Hex Key x 3

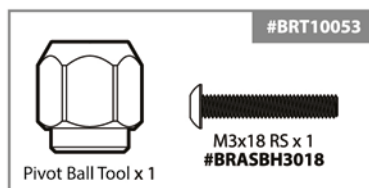

#BRT10053

Pivot Ball Tool x 1

M3x18 RS x 1
#BRASBH3018

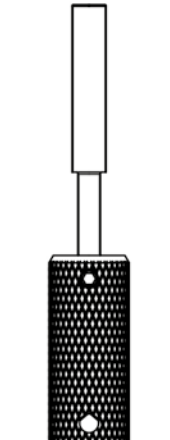

3.0mm Scale Socket
Thumb Driver x 1
#BRPROB-17

47




2.0mm Socket Driver Bit X 1



M2x9 Scale Hex Bolt x 4
#BRPROB-06BK

47

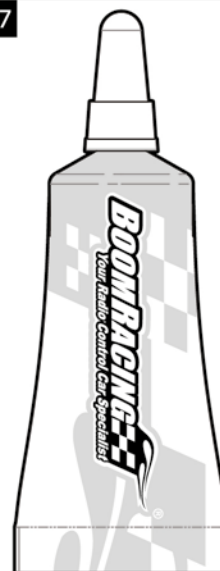

Black Graphite Grease 10g x 1
#BRGRS1055-10



Silicone Grease 10g x 1
#BRGRS10274-10



30WT Shock Oil 15ml x 1
(Available separately in 60ml)
#BRSHK030



242 Thread Lock 2g x 1
(Available separately in 10g)
#BRGRS242



1 - CHASSIS RAIL


Parts Needed:



Body Latch Pin x 4
#BRX020034




Body Post x 4
#BRX020039

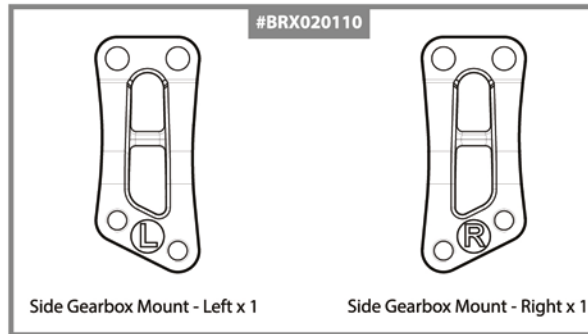


Side Gearbox Mount - Left x 1

Side Gearbox Mount - Right x 1

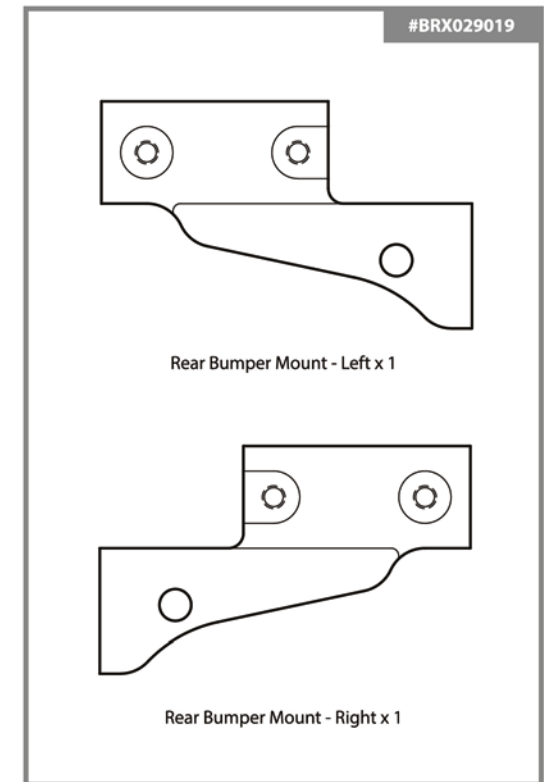


Rear Bumper Mount - Left x 1

Rear Bumper Mount - Right x 1

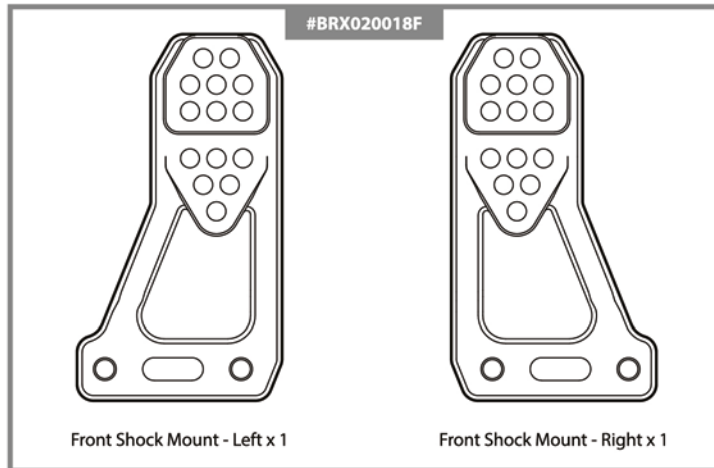


Front Shock Mount - Left x 1

Front Shock Mount - Right x 1

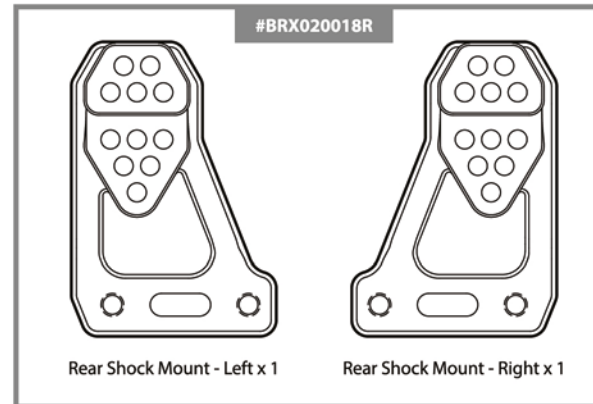

Rear Shock Mount - Left x 1

Rear Shock Mount - Right x 1

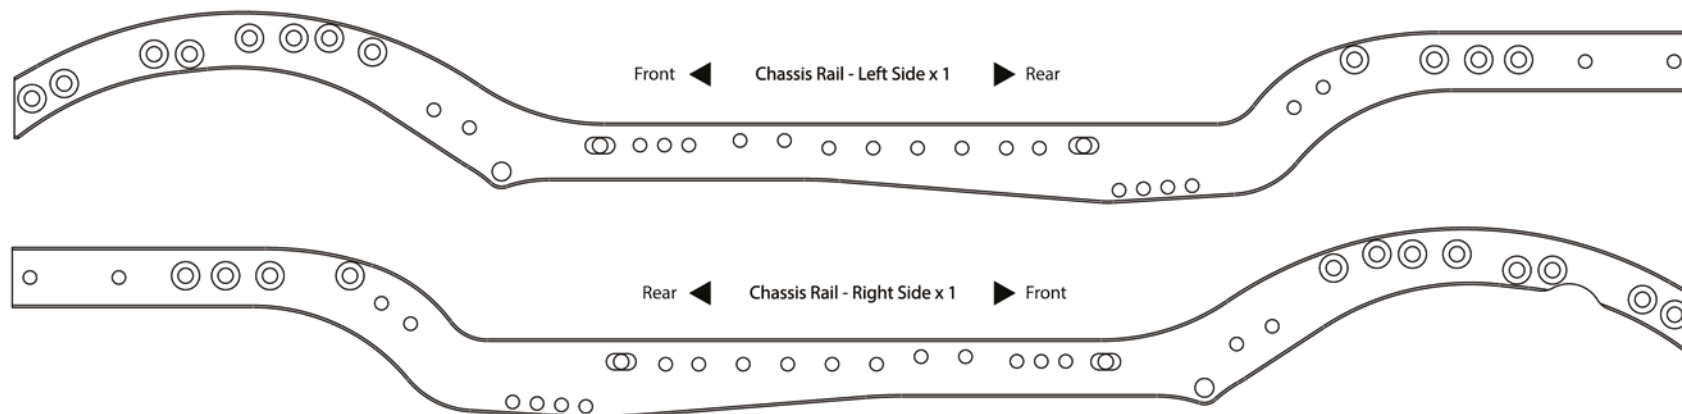

#BRX0290011

A CHASSIS

M3x10 RS x 4
#BRASBH3010

M3x8 RS x 4
#BRASBH3008

M3x10 CSS x 12
#BRASFH3010


M3x3 SS x 4
#BRASST3003



242 Thread Lock 2g x 1
(Available separately in 10g)
#BRGRS242




Apply 242 Thread Lock to all screws.
(Do Not Use Red Thread Lock)

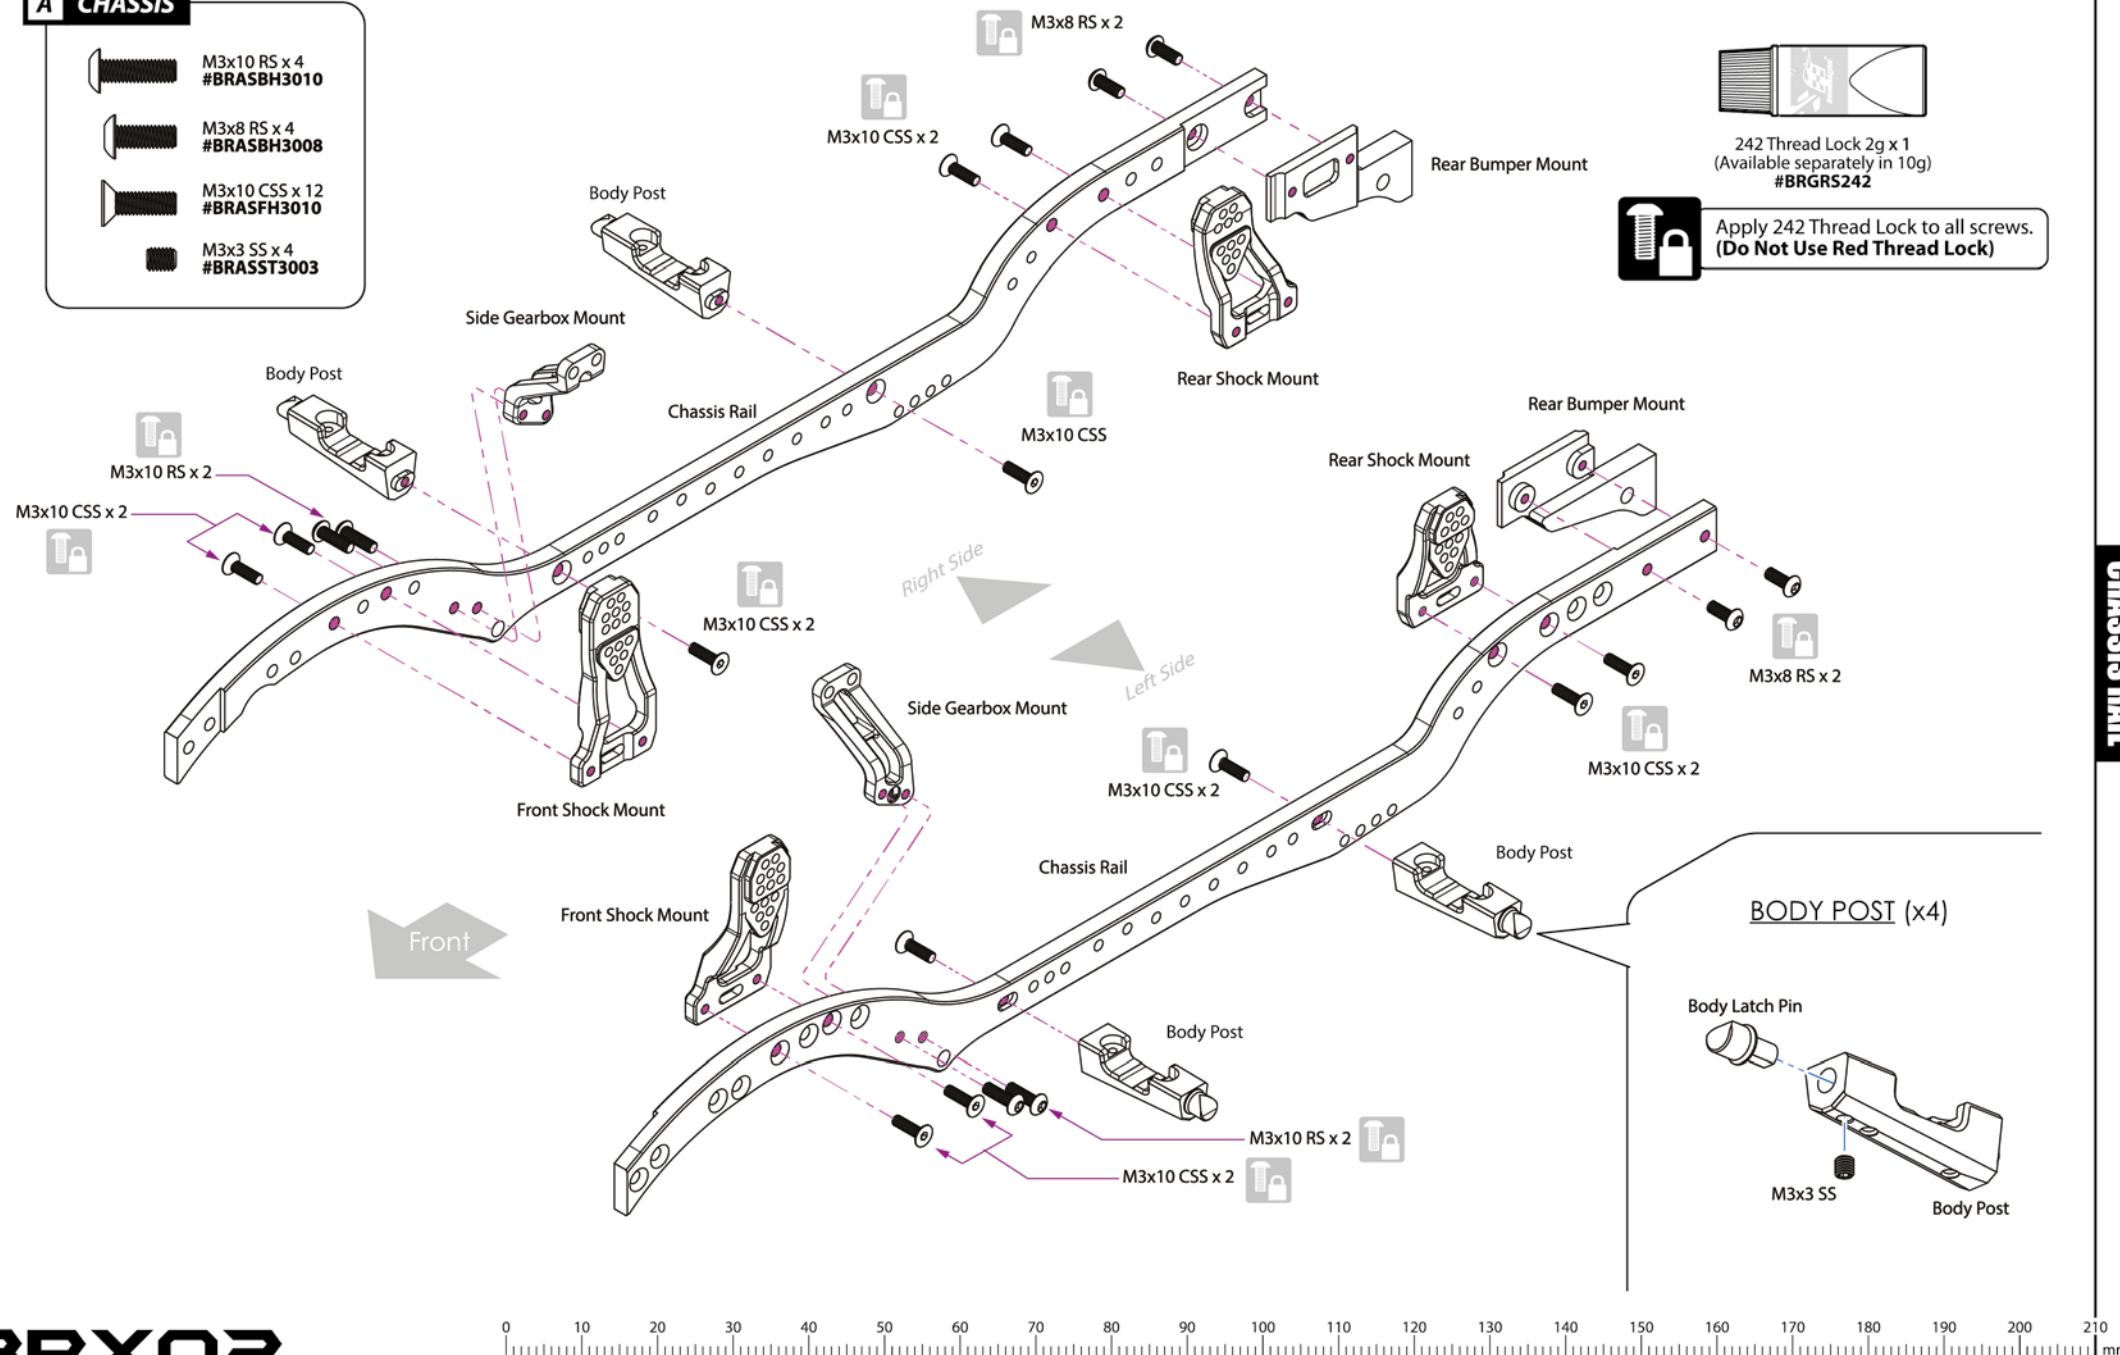
**BRX02**

2 - CHASSIS

Parts Needed:

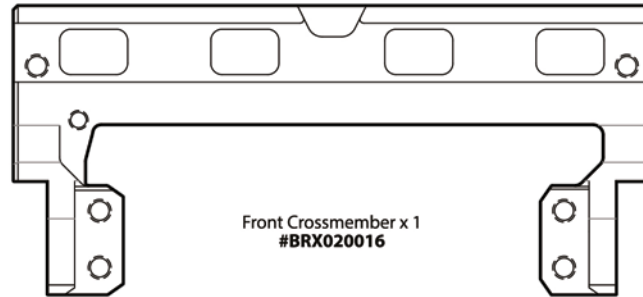


Front Crossmember x 1
#BRX020016

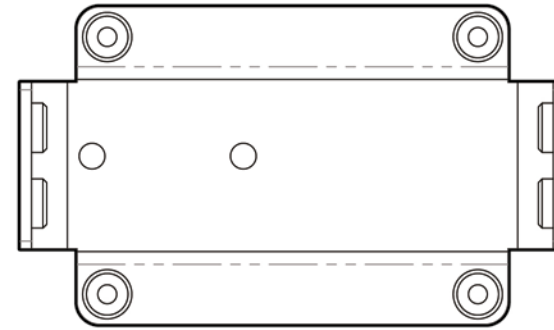


Center Skid Plate x 1
#BRX020020LF



Mid Crossmember x 1
#BRX020014

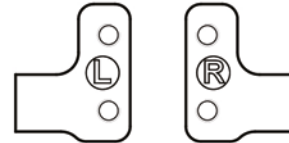


Steering Servo Mount x 2
#BRX020108

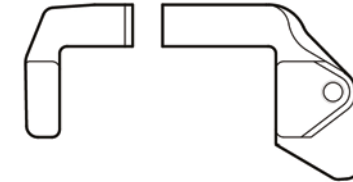

Mini servo Mount x 1
#BRX0290012



Rear Crossmember x 1
#BRX020012

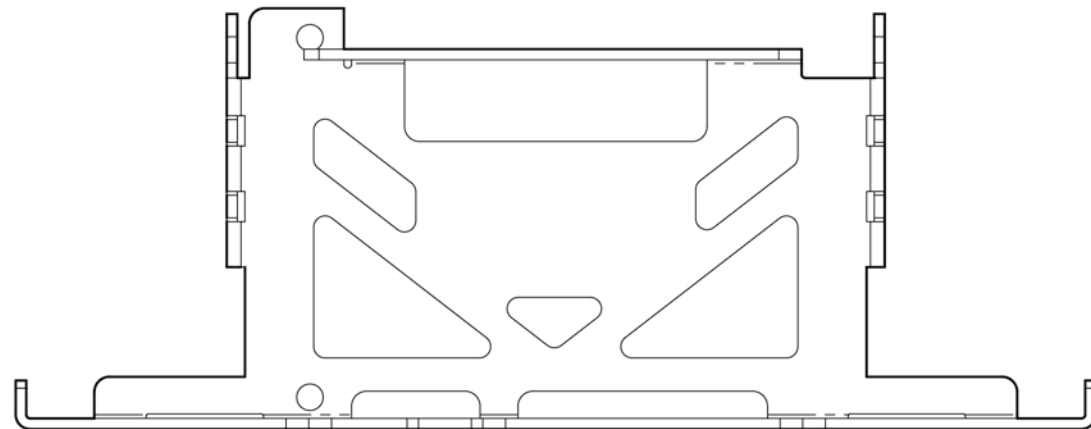


Battery Tray x 1
#BRX029021

A CHASSIS

 M3x12 RS x 4
#BRASBH3012

 M3x10 RS x 4
#BRASBH3010

 M3x10 CSS x 8
#BRASFH3010

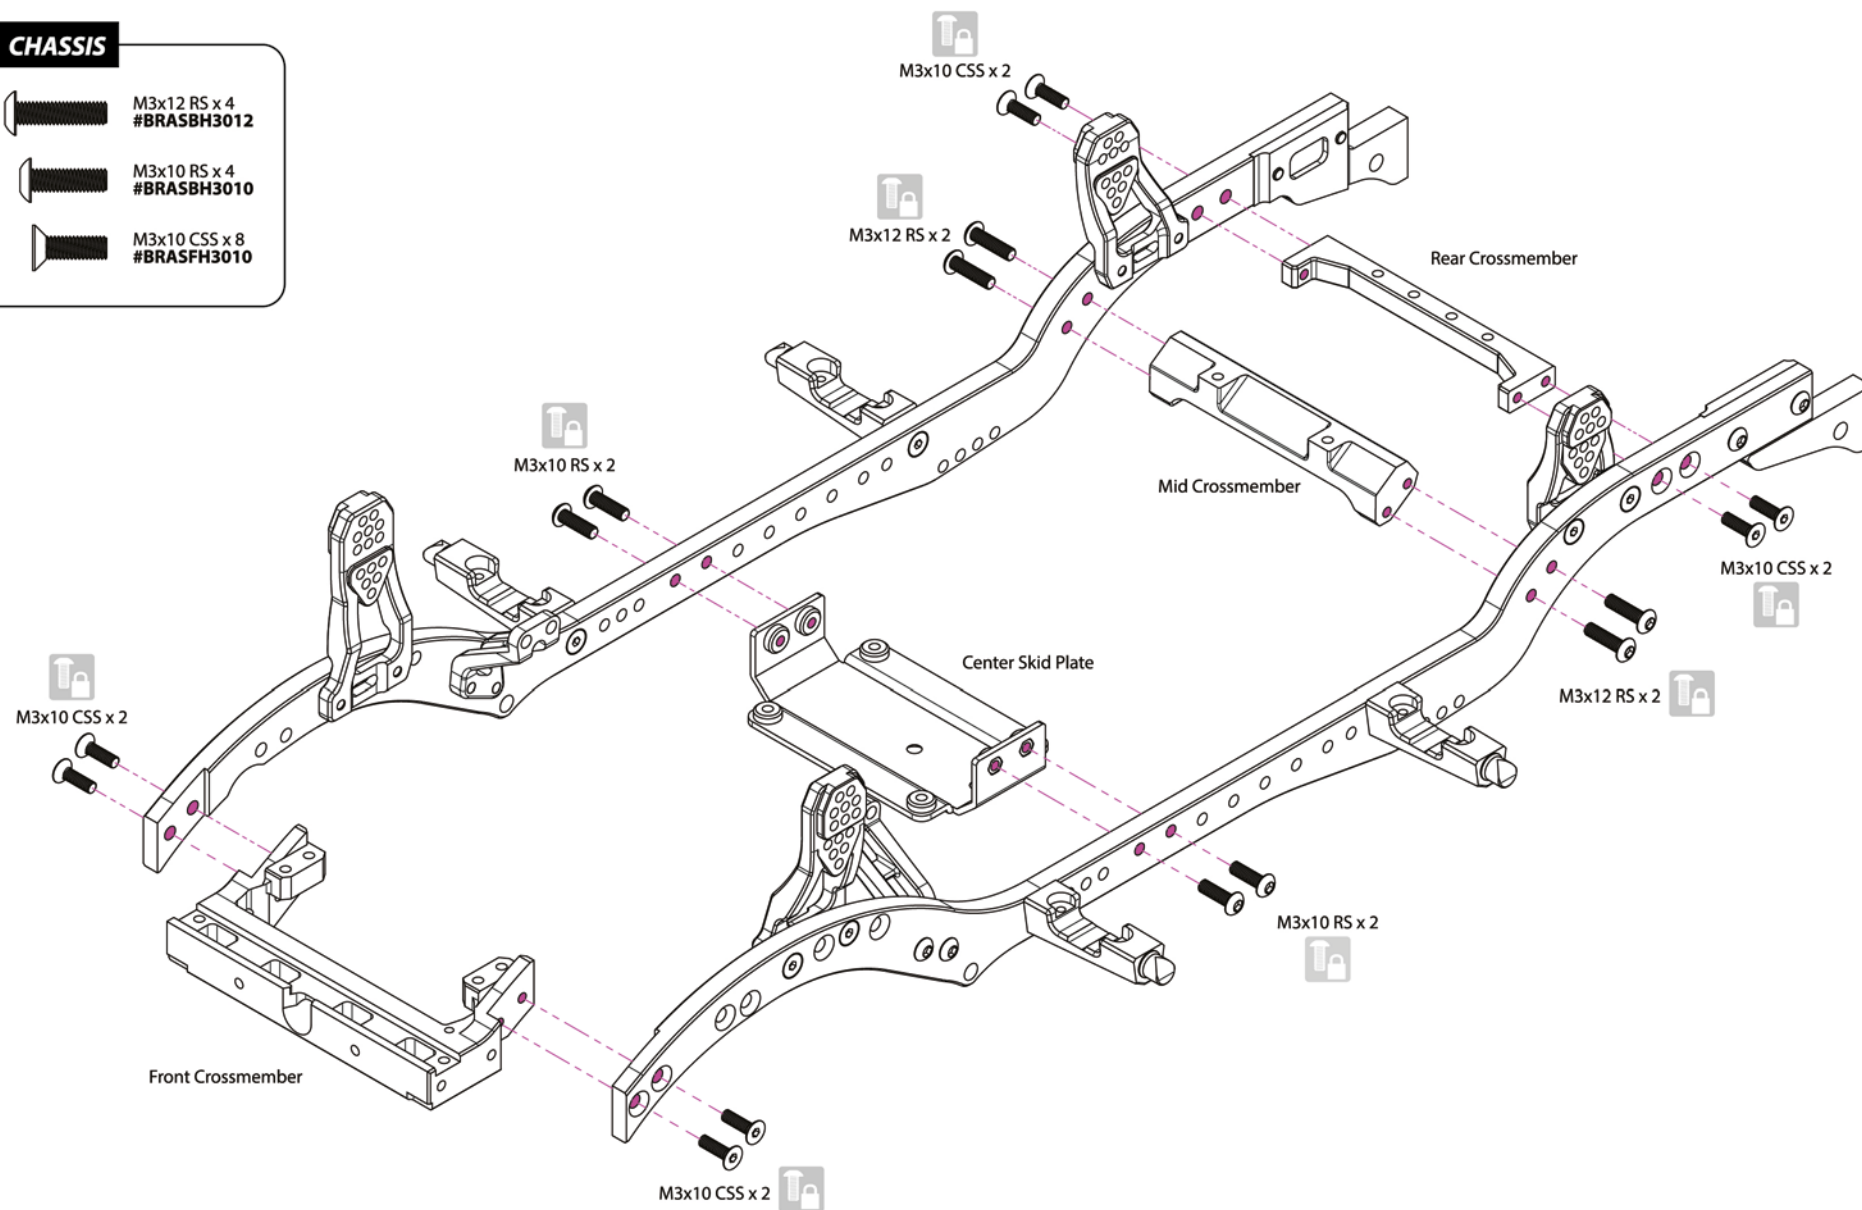

A CHASSIS

-  M3x10 CSS x 4
#BRASFH3010
-  M3x12 RS x 2
#BRASBH3012
-  M3 Nut - Nyloc x 2
#BRASNUTM3



Hard case battery with size 139x47x25mm is ideal for the battery tray. We recommend using self-adhesive velcro tape for the battery pack.



M3x12 RS x 2

M3 Nut x 2

M3x10 CSS x 4

Servo Mount x 2



Bend both tabs as shown to install the optional winch mount.


The battery tray is designed to fit a standard size servo winch if you wish to install one. A smaller sized battery pack is required to provide enough space to do so (maximum 95x47x25mm).

3 - BUMPERS

Parts Needed:



Front Bumper x 1
#BRX020109F

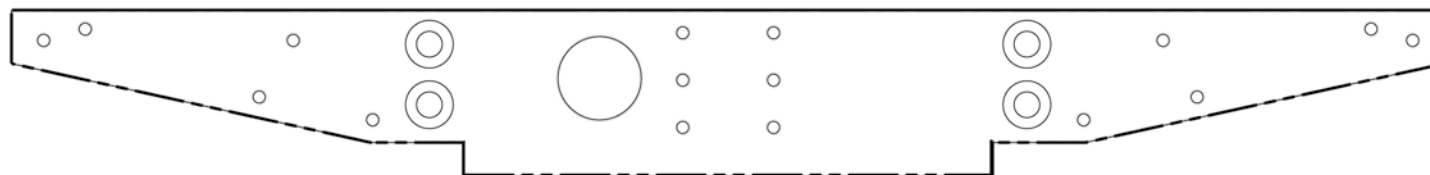

Rear Bumper x 1
#BRX020109R


A CHASSIS

M3x10 CSS x 4
#BRASFH3010


M3x4 SS x 2

M3x5 Hex Cap Screw x 2
#BRASH53005

FRONT BUMPER

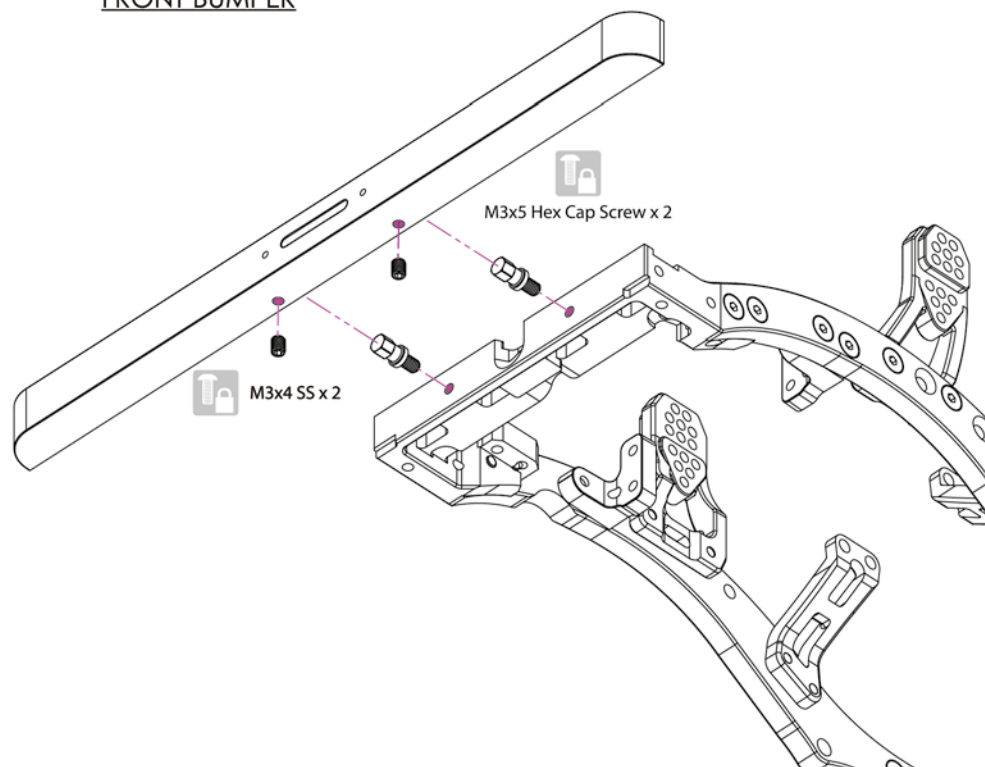

REAR BUMPER


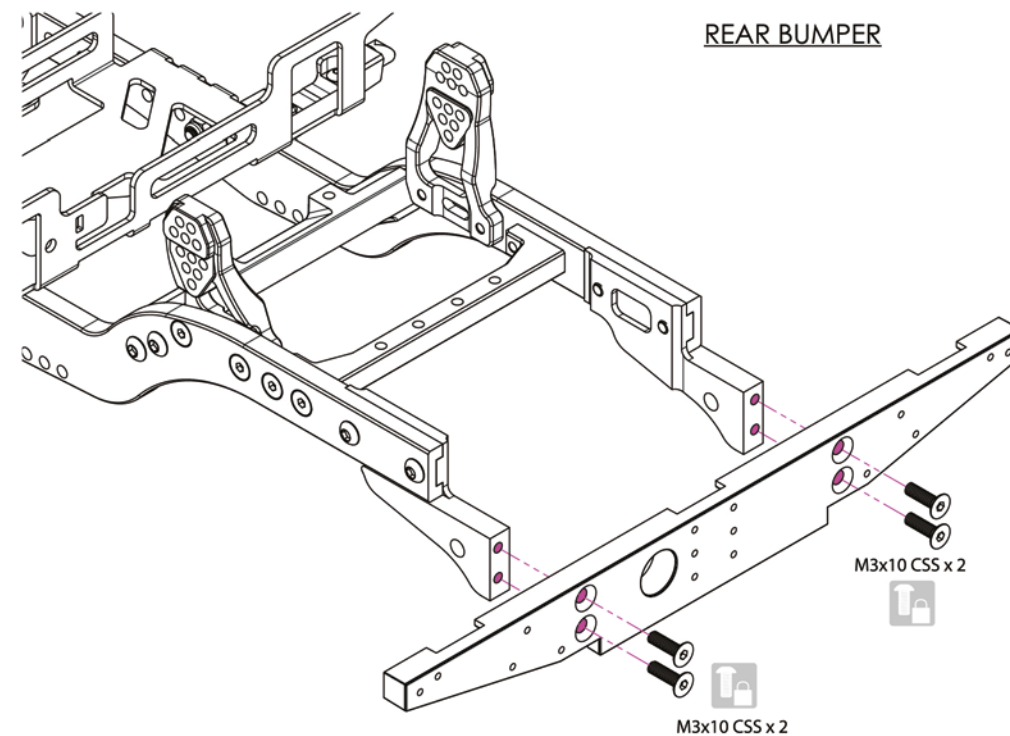


BUMPERS

BUMPERS


4 - GEARBOX / TRANSFER CASE

Parts Needed:

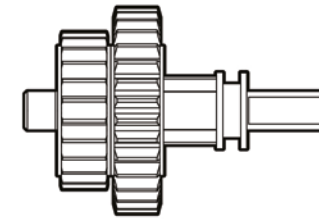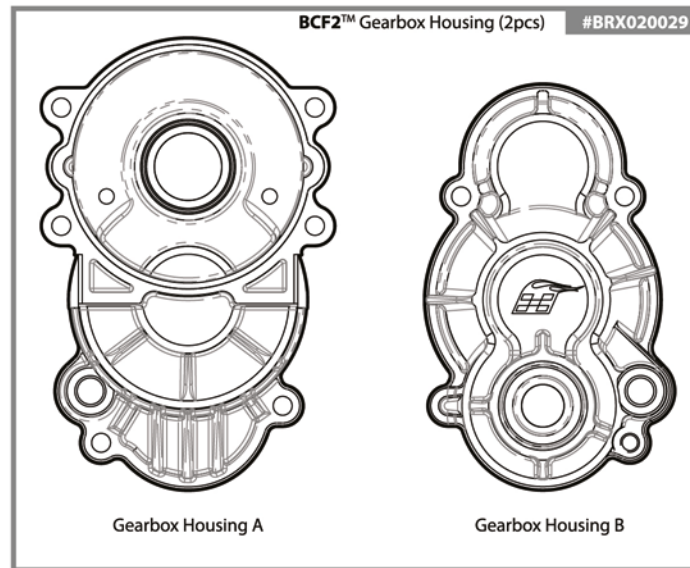

2-Speed Gear Unit x 1
#BRLC7044E

J GEARS, SHAFTS & BEARINGS - GEAR BOX

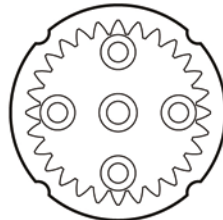


Internal Spur Gear 28T x 1
#BRLC7031




Spur Gear Mount x 1
#BRLC7030



 Spur Gear 12T x 1
#BRLC7029-12T



Spur Gear 15T x 1
#BRLC7029-15T

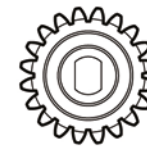


Spur Gear 20T x 2
#BRLC7029-20T




D5x11x4 Ball Bearing x 7
#BBZMR1152RS



 D7x11x3 Ball Bearing x 1
#BBZMR1172RS




Shift Shaft x 1
#BRLC7045C

 

Shifter x 1
#BRLC7045B



 Input Shaft x 1
#BRLC7044B



Output Shaft x 1
#BRLC7044C-EX




Bearing Holder x 1
#BRX020029A

4.1


E GEARBOX / TRANSFER CASE

-  M2.5x8 CSS x 1
#BRASFH2508
-  M2x5 CSS x 4
#BRASFH2005


 Fit the Spur Gear Mount onto the Spur Gear by tightening M2x5 countersunk screws.

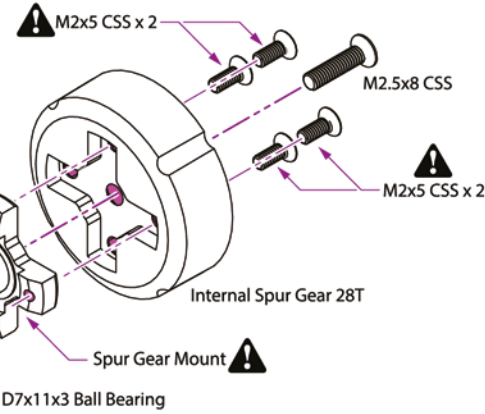


To install or remove the spur gear from the gearbox, align the spur gear as pictured and temporarily insert two M3 screws** to act as stoppers.

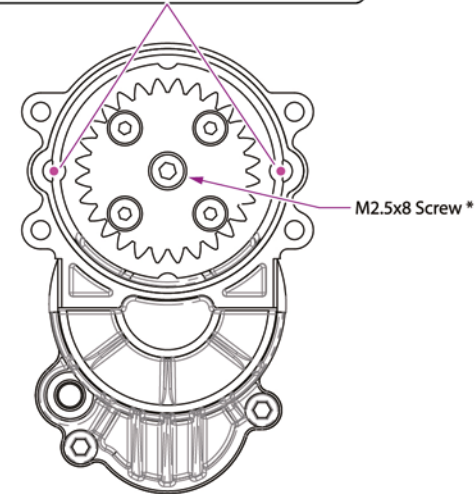


* To install the spur gear, install the four M2x5 screws, then the center M2.5x8 screw.
* To remove the spur gear, remove the M2.5x8 screw, then remove the four M2x5 screws.
** If the spur gear can't be removed, place two long M3 screws and torque them both until the gear is released.

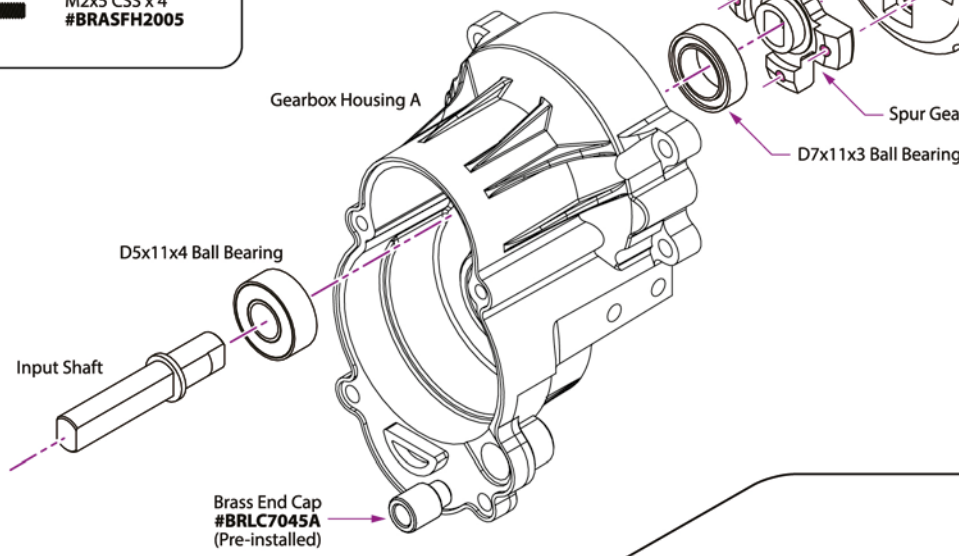


4.2

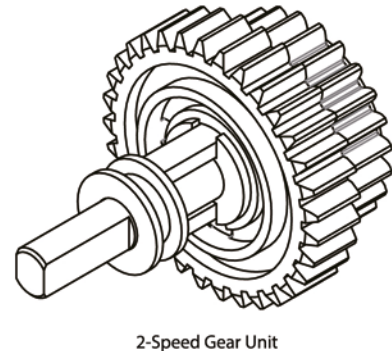

2-Speed Gear Unit





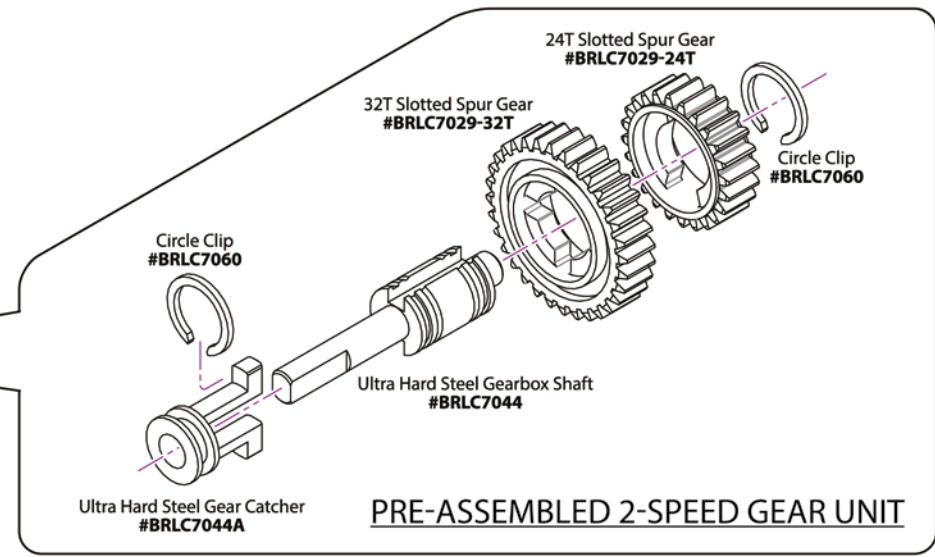


PRE-ASSEMBLED 2-SPEED GEAR UNIT

 

4.3


GEARBOX

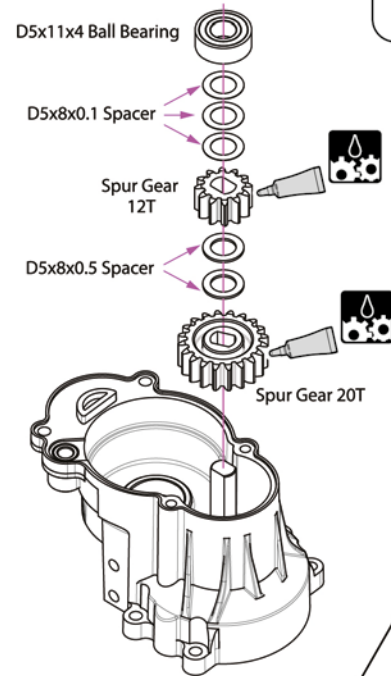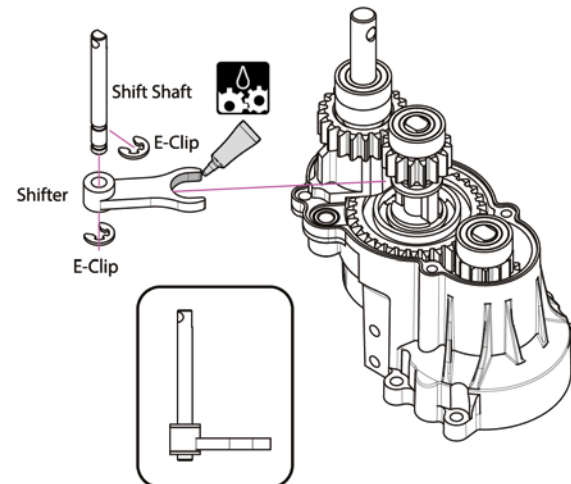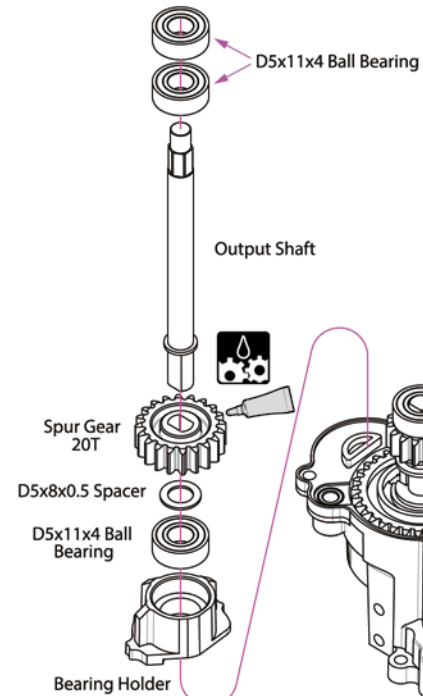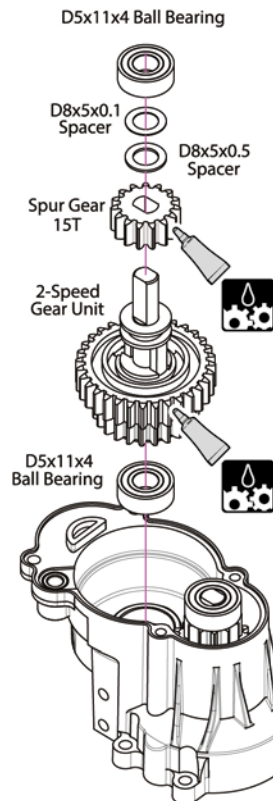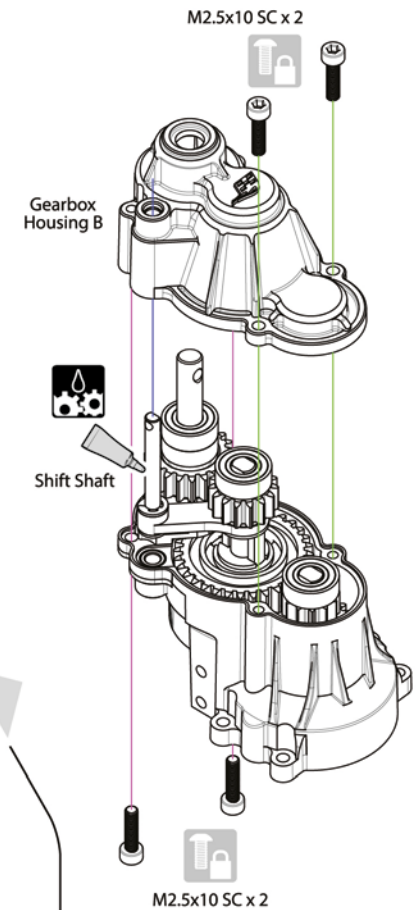E GEARBOX / TRANSFER CASED5x8x0.5 Spacer x 4
#BRASSPD5805M3 E-Clip x 2
#BRASEC30D5x8x0.1 Spacer x 4
#BRASSPD5801Black Graphite Grease 10g x 1
#BGRS1055-10**E GEARBOX / TRANSFER CASE**M2.5x10 SC x 4
#BRASCH2510

GEARBOX

5 - TRANSFER CASE

Parts Needed:


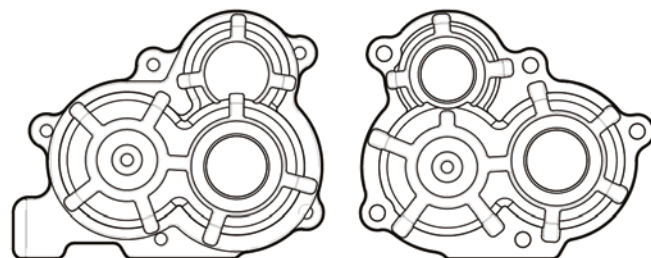


B2X™ Transfer Case Housing
#BRX020111


E GEARBOX / TRANSFER CASE



I GEARS, SHAFTS & BEARINGS - TRANSFER CASE

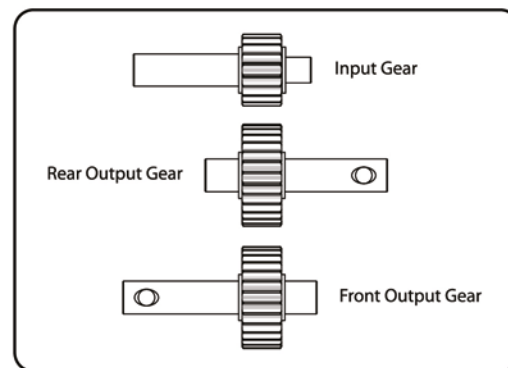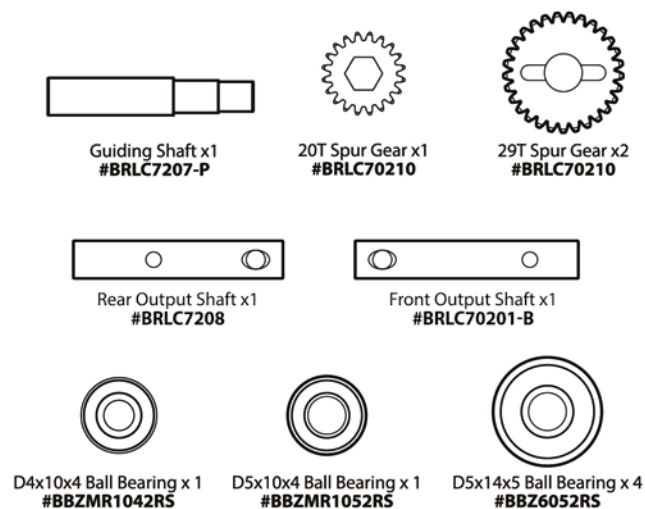


!
Apply black grease on the teeth and both sides of the input gear to avoid spacers misaligned when connecting to the gearbox.

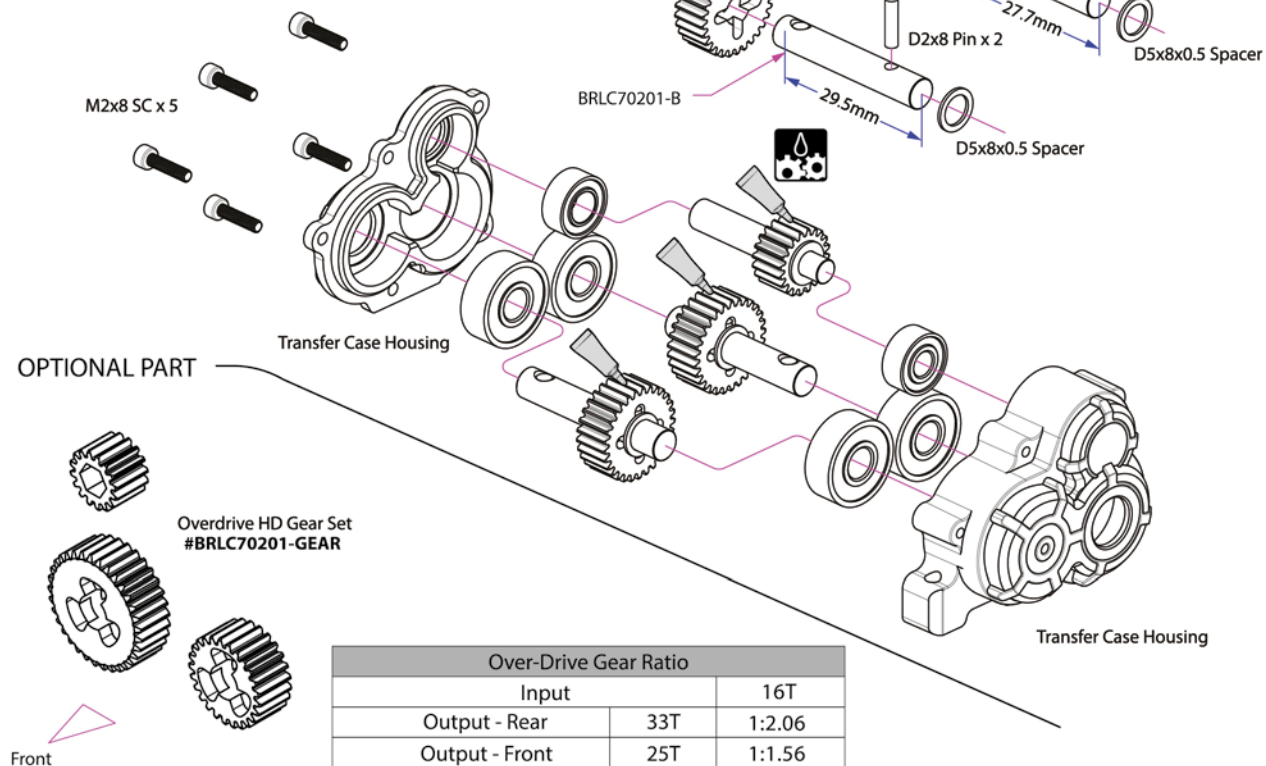


Over-Drive Gear Ratio		
Input	16T	
Output - Rear	33T	1:2.06
Output - Front	25T	1:1.56
Rear to Front output speed ratio		1:1.32

5 - TRANSFER CASE


Parts Needed:

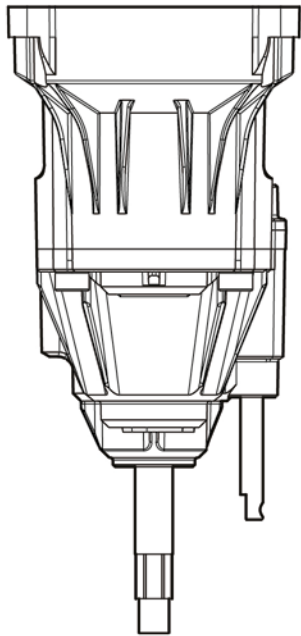

Complete **BCF2™** Gearbox

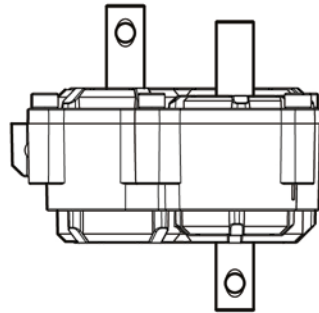

Complete **B2X™** Transfer Case

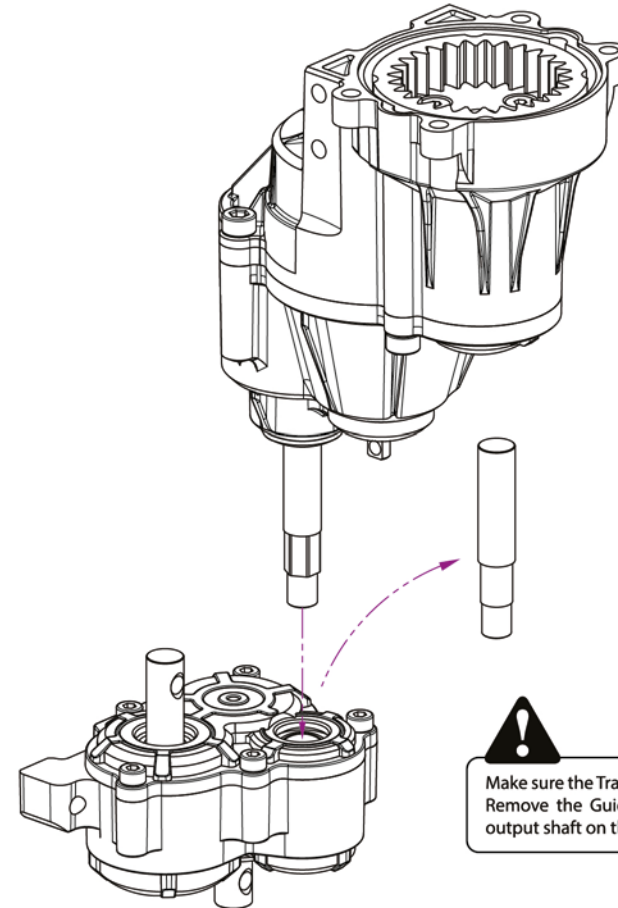

Make sure the Transfer Case is kept in the upwards position. Remove the Guiding Shaft carefully and then insert the output shaft on the Gearbox into the Transfer Case.

6 - TRANSMISSION

E GEARBOX / TRANSFER CASE

M3x8 RS x 4
#BRASBH3008

M3x10 CSS x 1
#BRASFH3010

M3x6 CSS x 1
#BRASFH3006

Complete BCF2™ Gearbox

Complete OD Ready
Transfer Case

M3x8 RS x 4

M3x10 CSS


M3x6 CSS

BRX02




7 - FRONT AXLE & LEAF SPRING

Parts Needed:

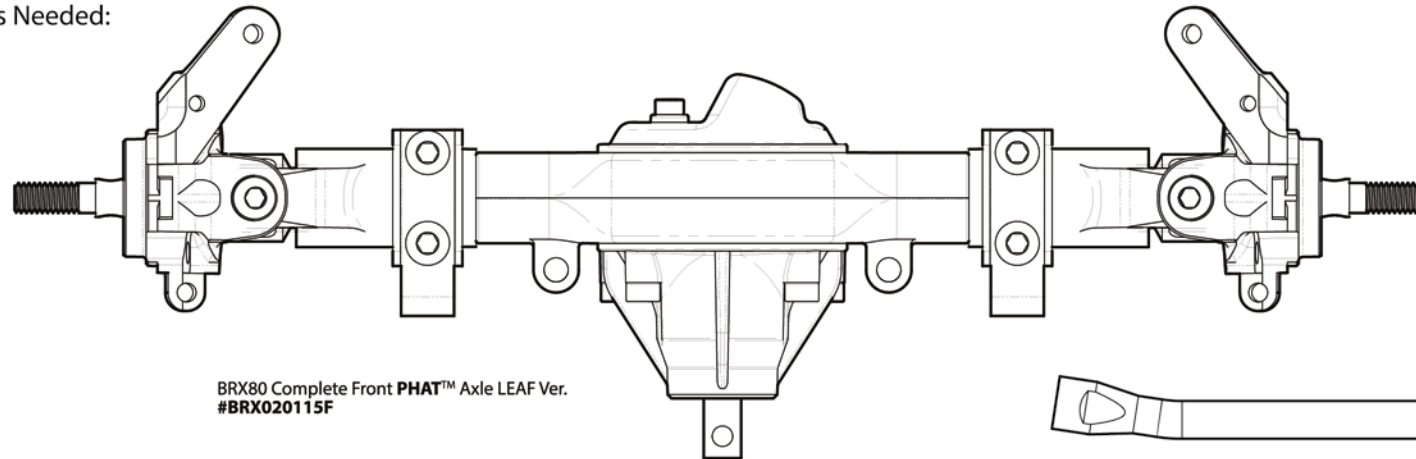

 
BRX80 Complete Front PHAT™ Axle LEAF Ver.
#BRX020115F



KUDU™
Nylon Rod End
(Straight 18.5mm) x 2
#BRW750306A



 BADASS™
Stainless Steel Pivot Ball x 2
#BRW750310




Stainless Steel Tie Rod x 1
#BRD8022A

PIVOT BALL INSTALLATION & REMOVAL

Pivot Ball Tool (included)

Direction facing pivot ball when installing

Direction facing pivot ball when removing

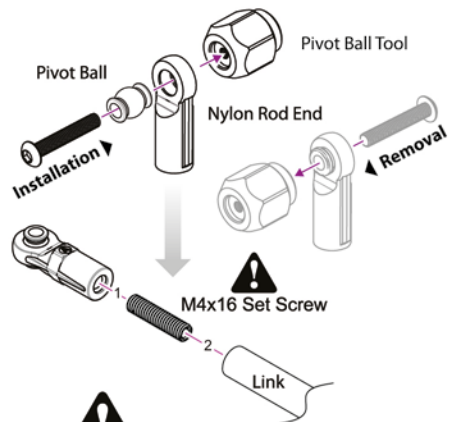

- Install the set screw into the rod end before inserting into the link.
- Tip: Use a 2.0 Hex Driver to torque the set screw into the rod end.


B LEAFS / SHOCKS

M4x16 SS x 2
#BRASST4016


D4x7x1 Stainless Steel
Spacer x 2
#BRASSP471

D6x1.5 O-Ring x 2
#BRSORD6-15

#BRLC7064A (2 sets)

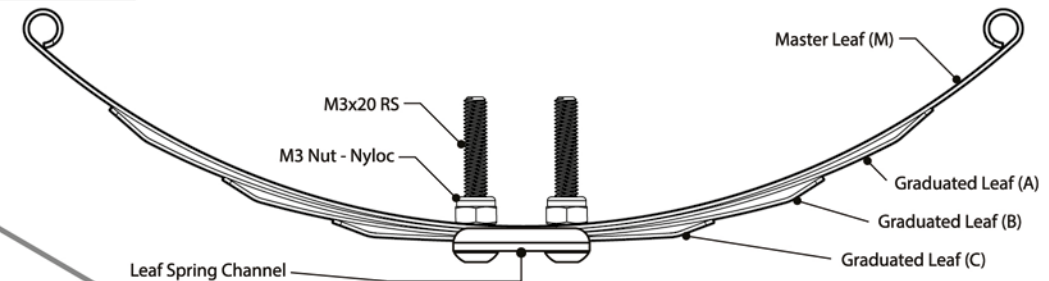

! D6x1.5 O-Ring

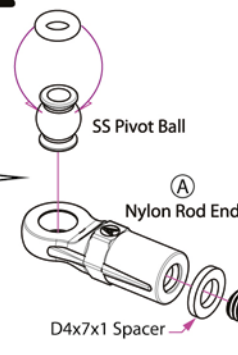



! O-ring helps reduce tie rod from wobbling.

TIE ROD

M4x16 Set Screw

! D6x1.5 O-Ring

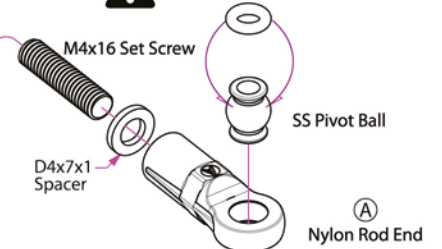

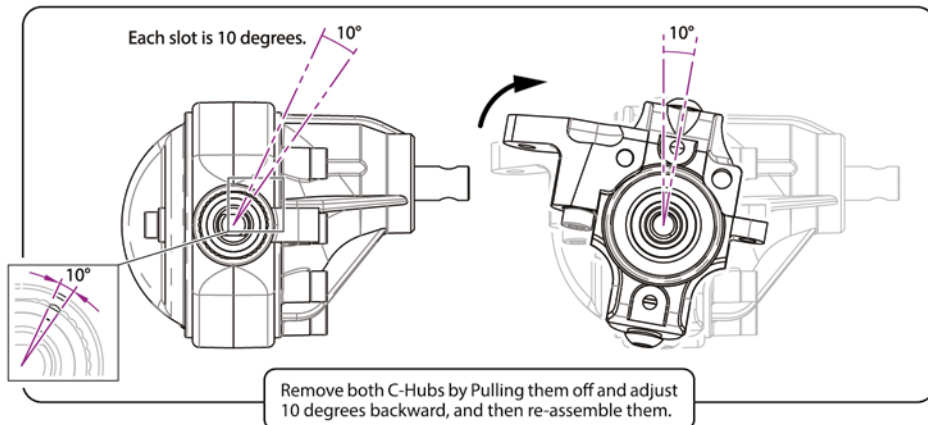


LEAF SPRING LOAD SETUP

Weight	# of Leafs	Lightest	Light	Heavy	Heaviest
Heaviest	4				(M)+(A)+(B)+(C)
Heavy	3		(M)+(B)+(C)	(M)+(A)+(C)	(M)+(A)+(B)
Light	2		(M)+(C)	(M)+(B)	(M)+(A)
Lightest	1	(M)			

 Recommended stock setup (Front).

LEAF SPRING CHANNELS

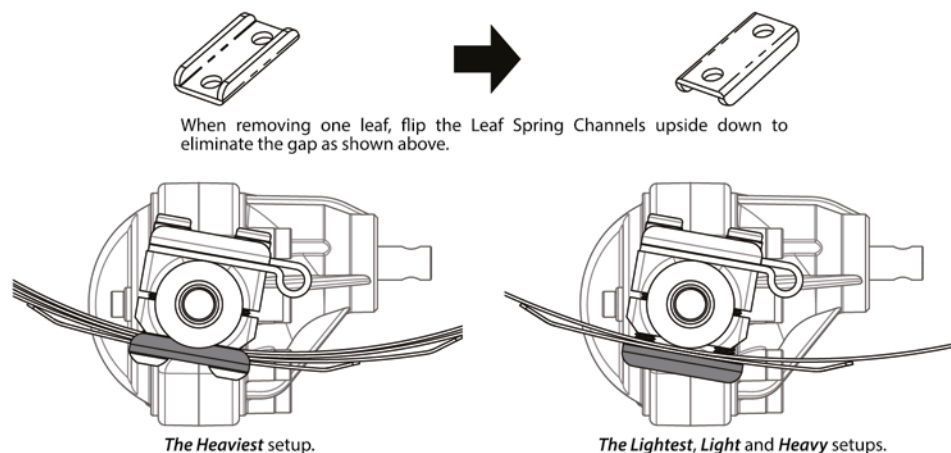

Make sure the Leaf Spring Channels are parallel to the axle mount.

 1 Add thread lock to screws on moving parts.

M3 Nut x 2
(Pre-installed on Leaf Spring Set)

Remove pre-installed screws

 1 Front Axle


M3 Nut x 2
(Pre-installed on Leaf Spring Set)

B LEAFS / SHOCKS

M3x24 RS x 1
#BRASBH3024

M3x14 RS x 1
#BRASBH3014


3x6x3
Tapper Spacer x 2
#BRLC7041

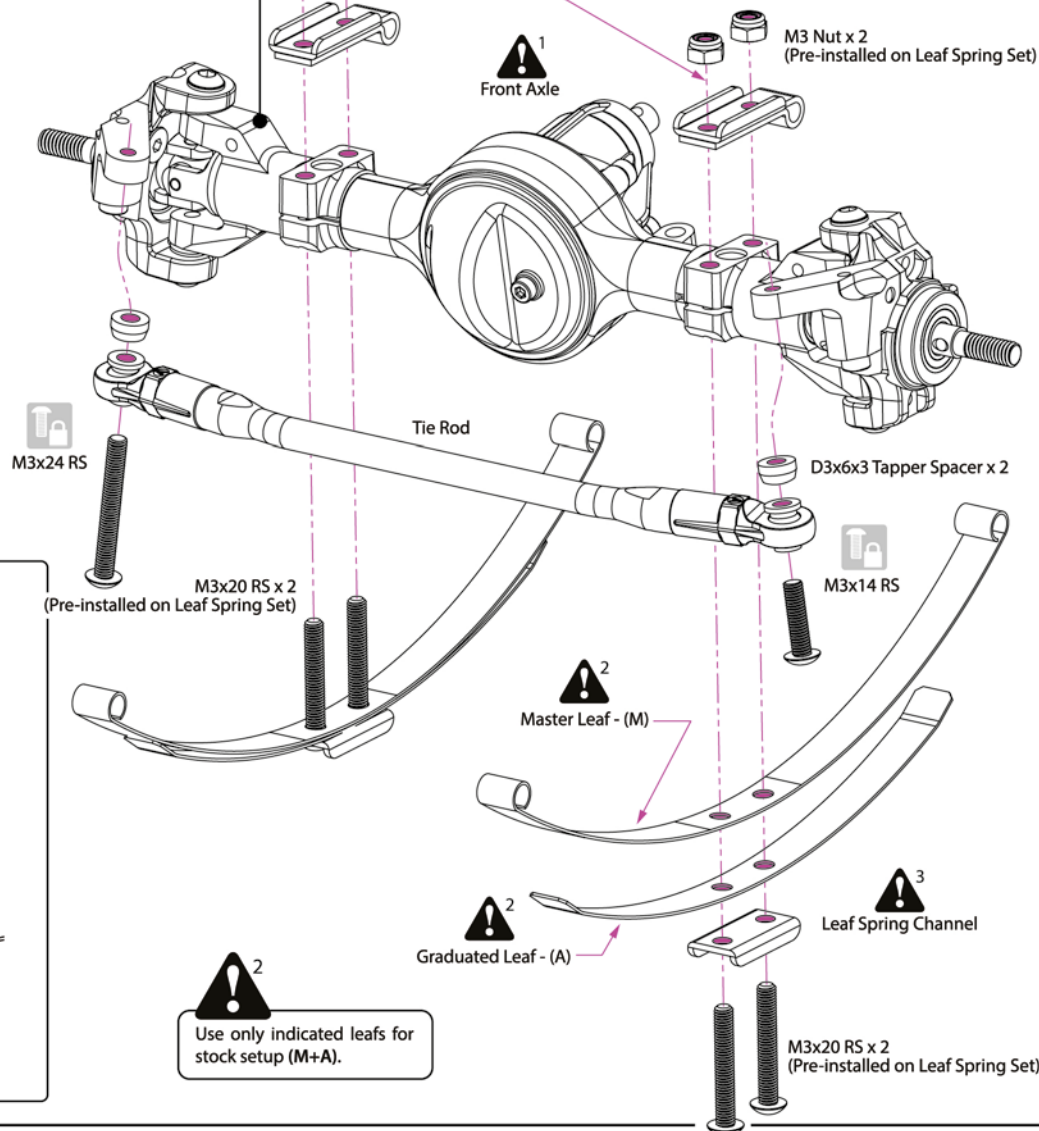


 2 Use only indicated leaves for stock setup (M+A).


8 - REAR AXLE & LEAF SPRING

Parts Needed:

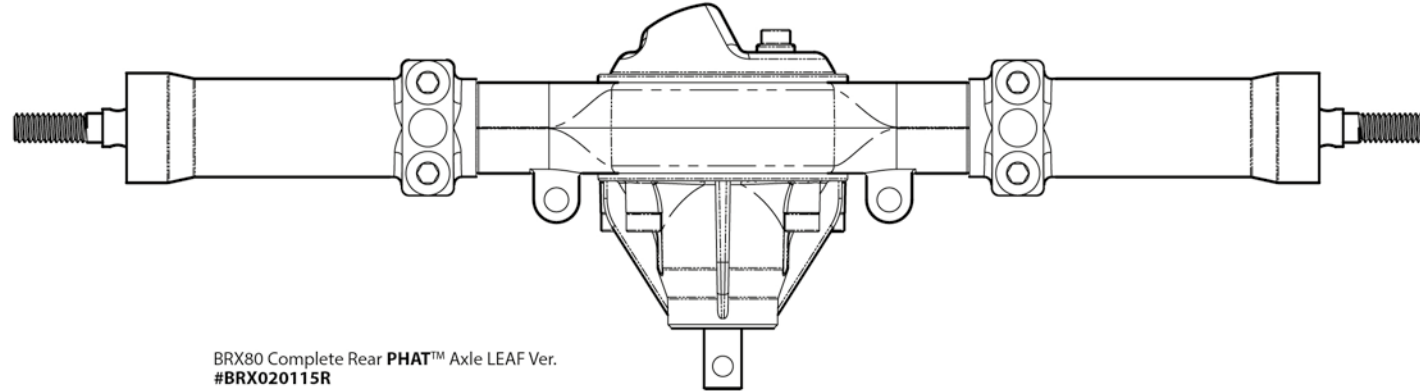

BRX80 Complete Rear **PHAT™** Axle LEAF Ver.
 #BRX020115R

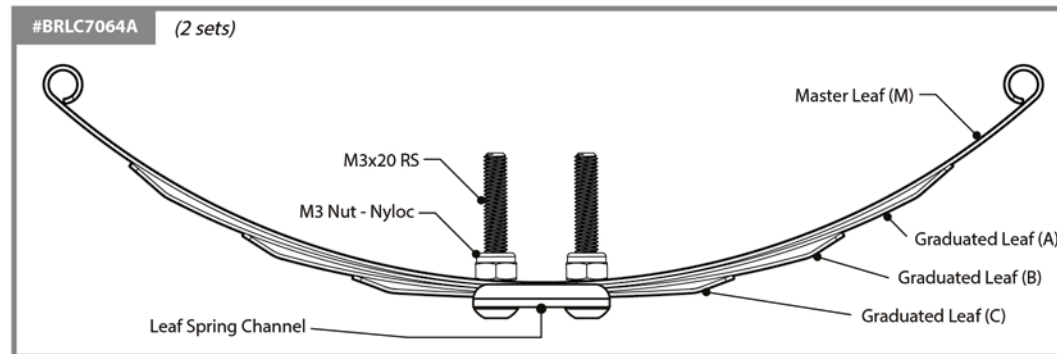


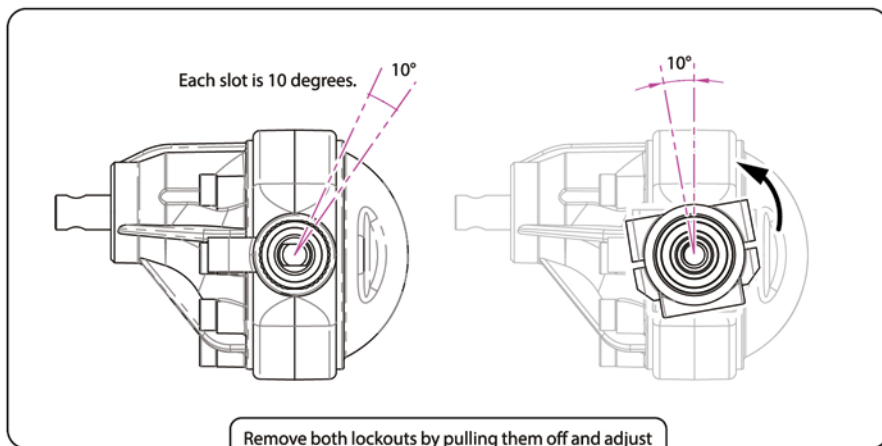

LEAF SPRING LOAD SETUP





Weight	# of Leafs	Lightest	Light	Heavy	Heaviest
Heaviest	4				(M)+(A)+(B)+(C)
Heavy	3		(M)+(B)+(C)	(M)+(A)+(C)	(M)+(A)+(B)
Light	2		(M)+(C)	(M)+(B)	(M)+(A)
Lightest	1	(M)			

■ Recommended stock setup (Rear).

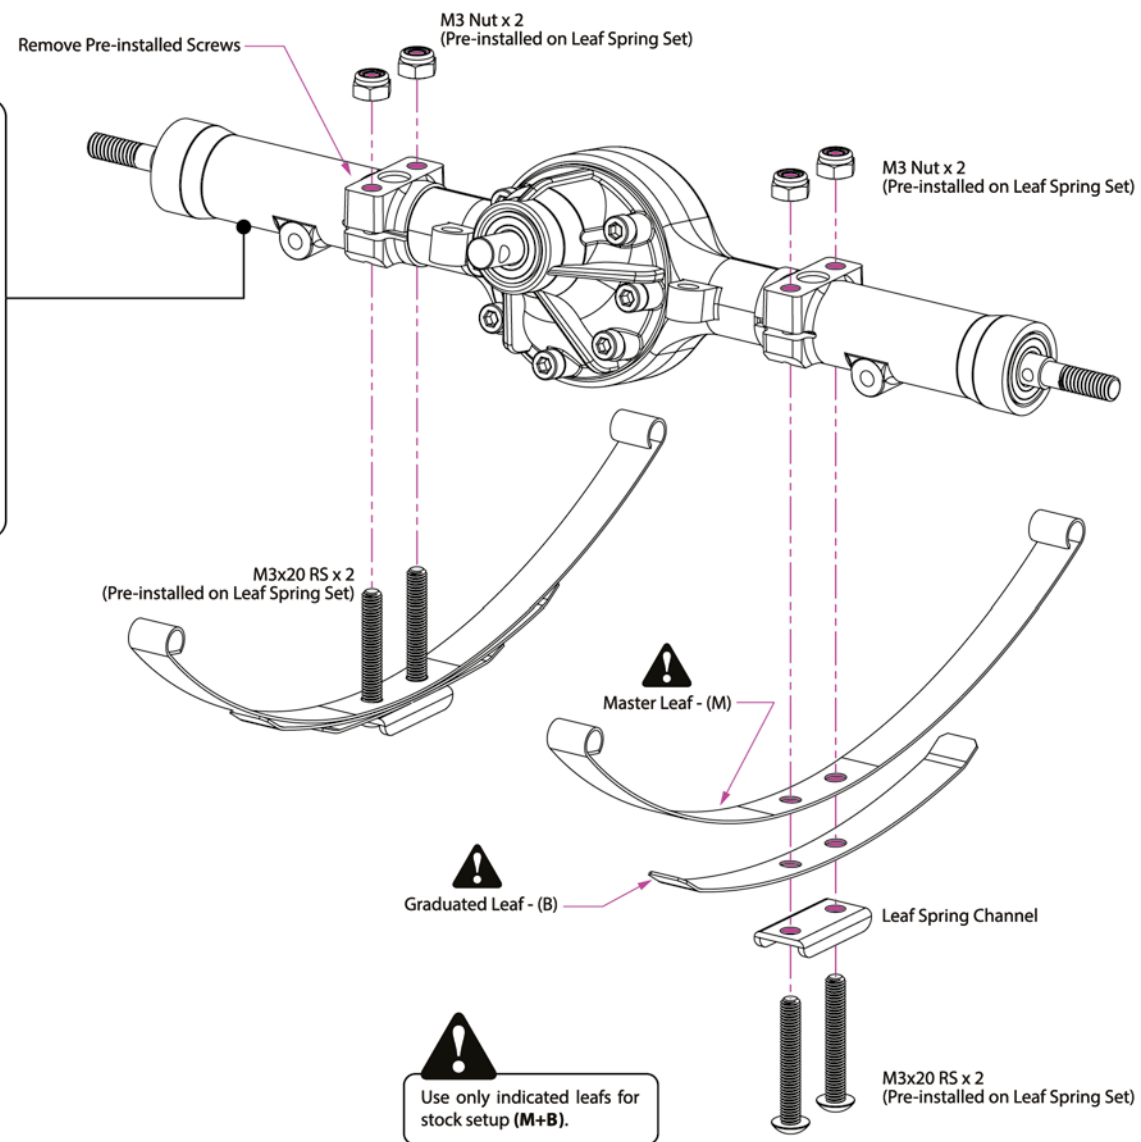


9 - LEAF SPRING SYSTEM

 Parts Needed:

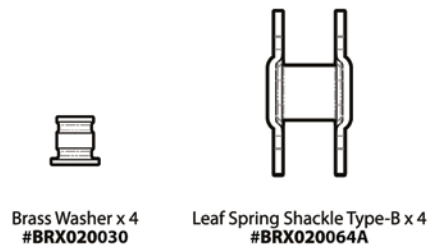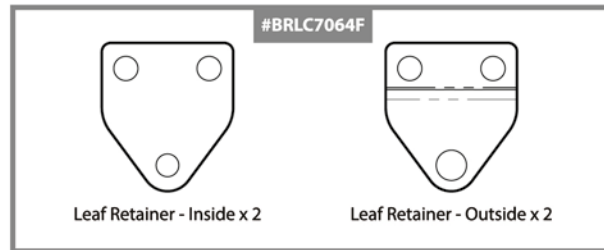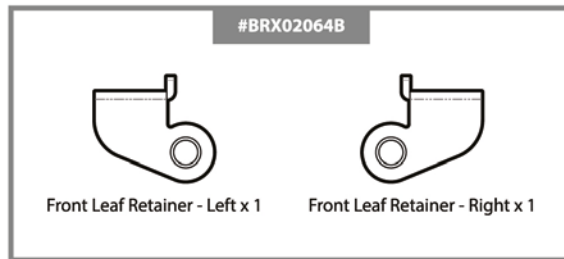

REAR ANTI-WRAP BARS (LEFT & RIGHT)

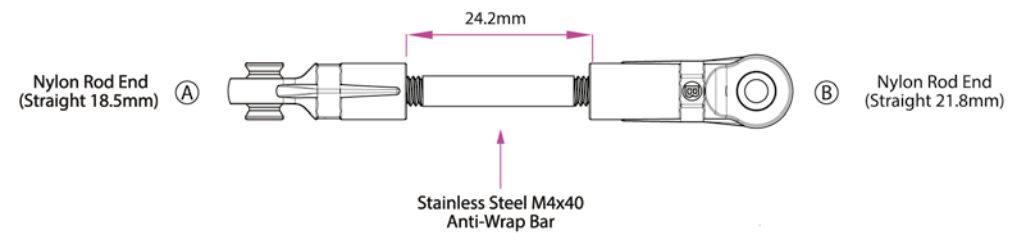

C LEAF SPRINGS

M3x22 RS x 2
#BRASBH3022

M3x12 RS x 2
#BRASBH3012

M3x8 RS x 2
#BRASBH3008


M3x14 Bolt x 4
#BRLC7064E

M3 Nut - Nyloc x 8
#BRASNUTM3

3x6x3
Tapper Spacer x 2
#BRLC7041

D4x7x1
Nylon Spacer x 4
#BRASSPD471/N

! Ø 4mm holes face inwards.

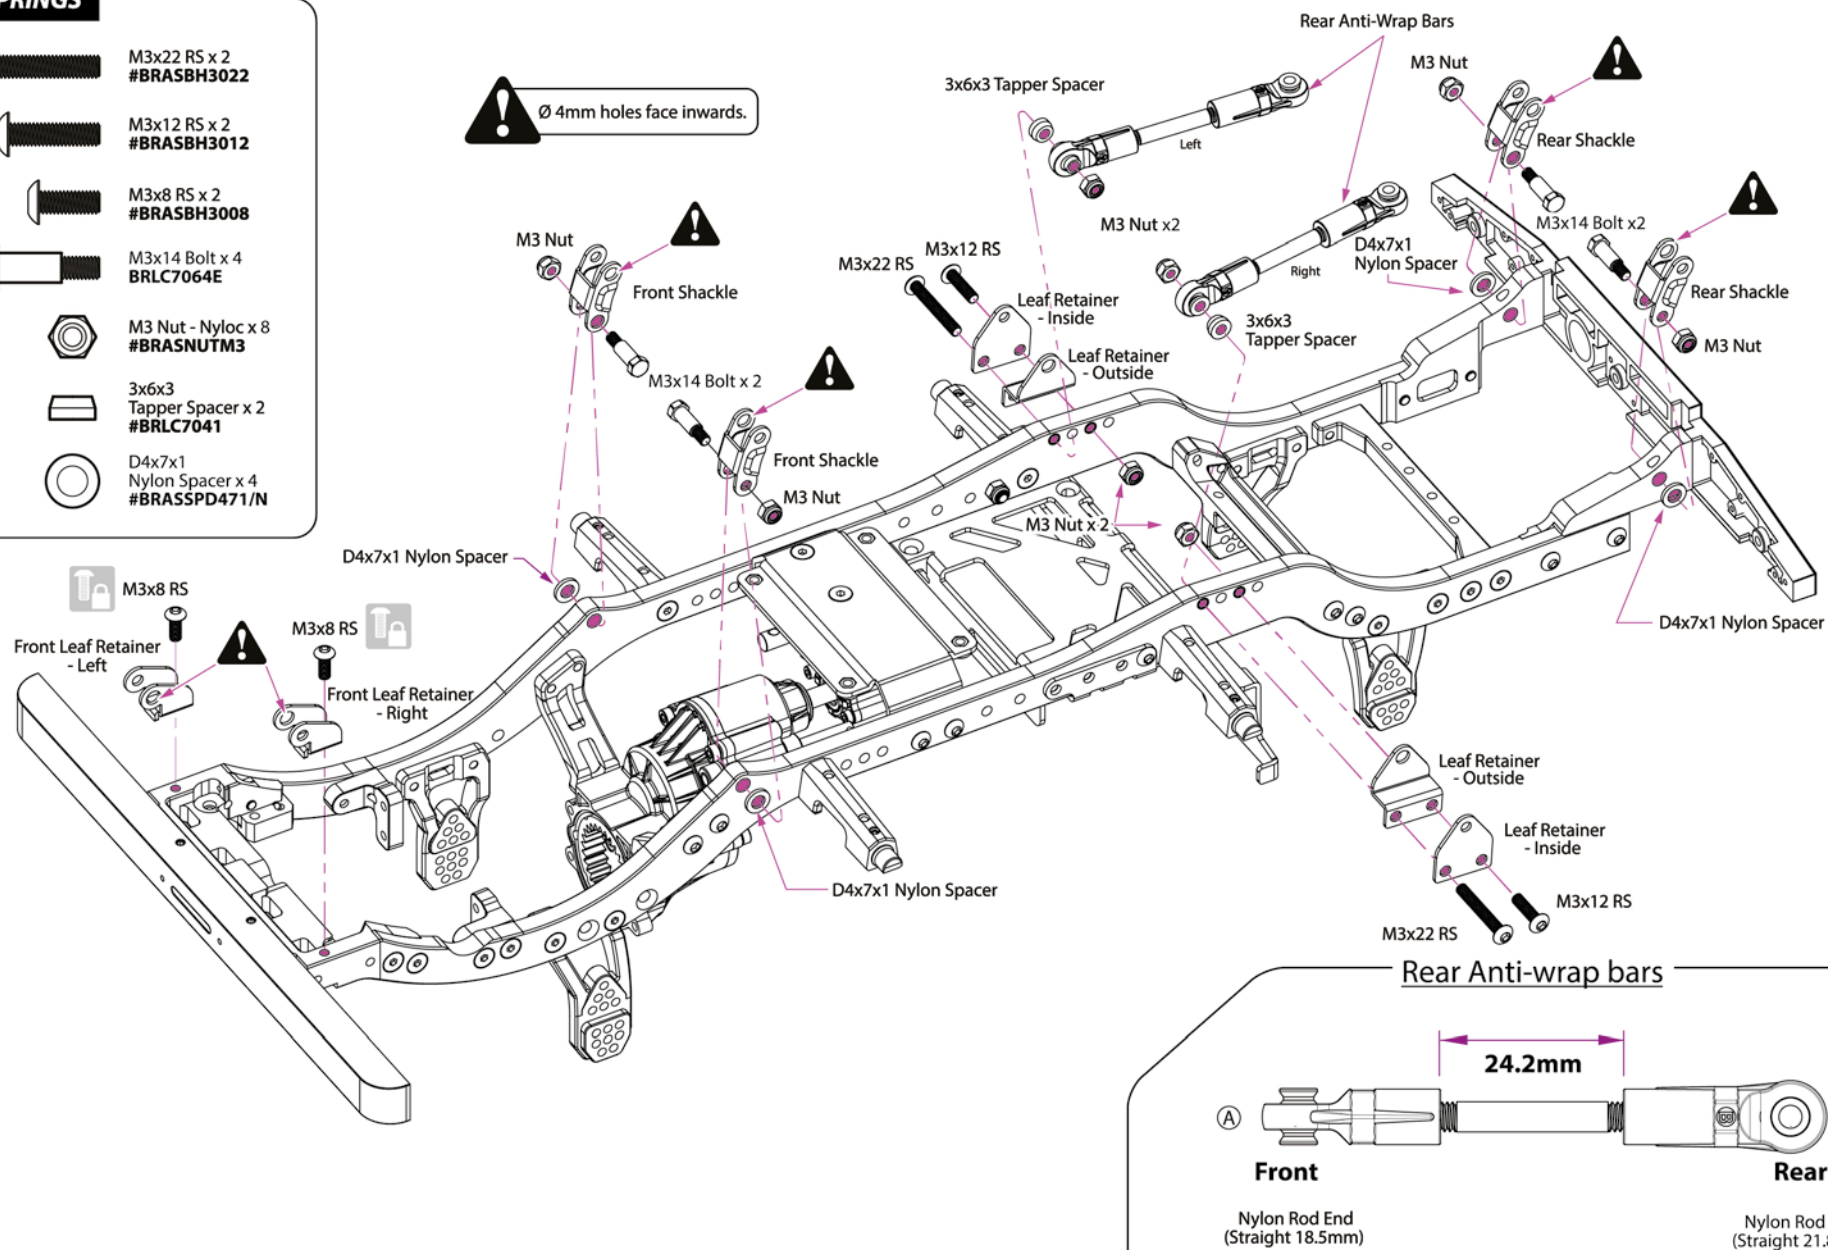**BRX02**


0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190 200 210 mm

C LEAF SPRINGS


M3x12 RS x 2
 #BRASBH3012



D6x1.5 O-Ring x 8
 #BR5ORD6-15

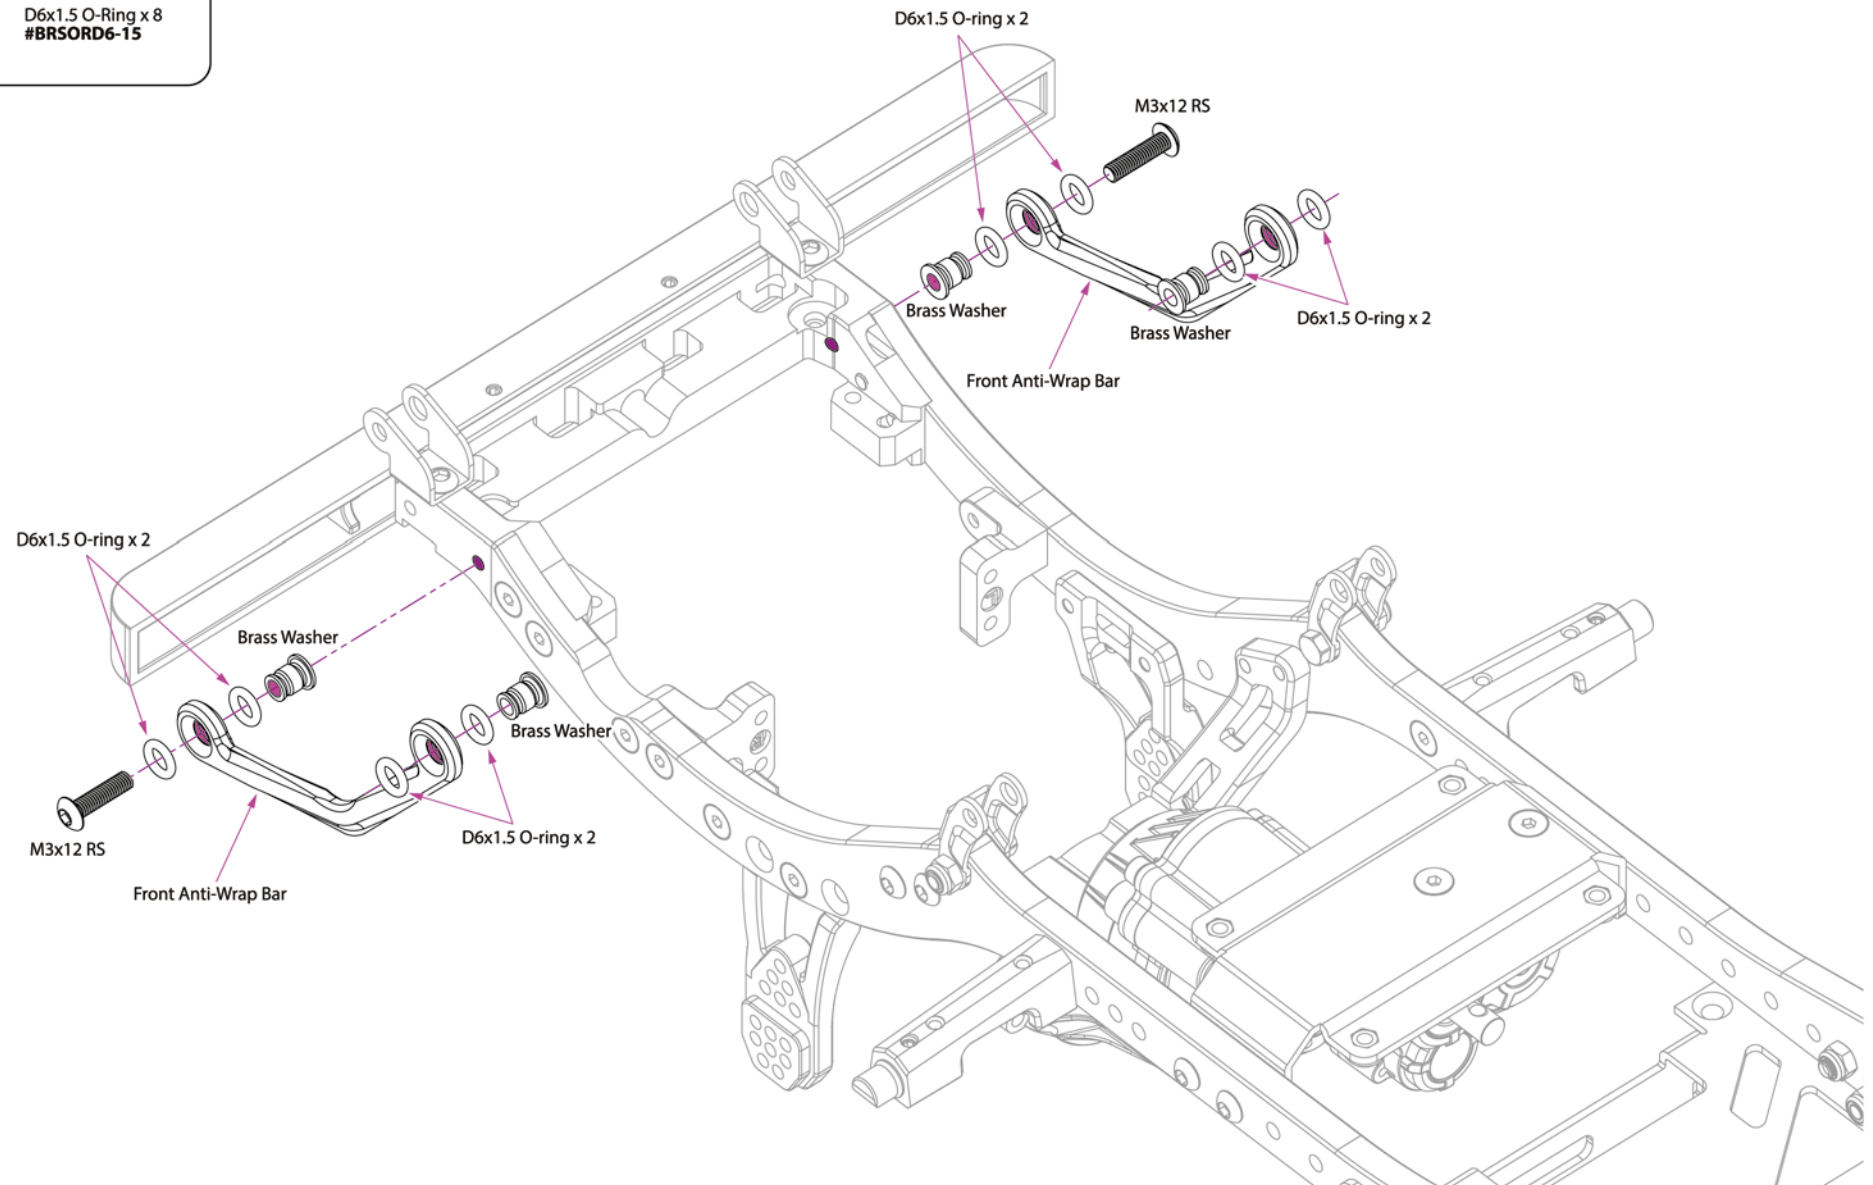



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

int Retained
#BRSHJ

The diagram illustrates the installation and removal of a Pivot Ball using the Ball Tool and Multipurpose Shock Pliers #BRT10065.

Installation: The diagram shows the Pivot Ball being inserted into the end of a shock absorber tube. The Ball Tool is used to push the ball into the tube. The Multipurpose Shock Pliers are used to secure the ball in place.

Removal: The diagram shows the Pivot Ball being removed from the end of the shock absorber tube. The Ball Tool is used to pull the ball out of the tube. The Multipurpose Shock Pliers are used to hold the tube steady during removal.

Optional Tool: The Multipurpose Shock Pliers #BRT10065 are shown as an optional tool for this task.


Installation



Multipurpose
Shock Pliers
#BRT10065

 1 - 3
Pay attention to cautions 1, 2 and 3.

Pay attention to cautions 1, 2 and 3.

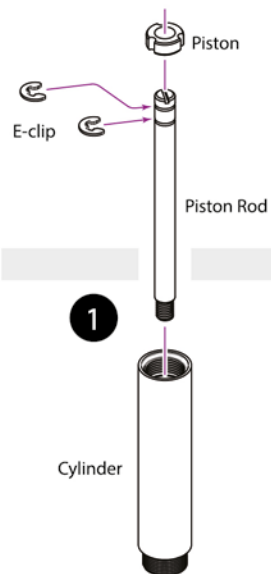

Rod Guide
(face down)

Separator

Rod Guide
(face up)

Cylinder End Cap



OPTIONAL



Shock Slime Grease 5g
#BRGRS09-5GB

For ultimate sealing performance,
apply Shock Slime Grease instead.

Use a slotted screwdriver (not provided) to secure piston rod into lower mount.

Upper Mount

Cylinder Sealing

Filling shock oil not more than 3/4 full can prevent compression blockage.

Filling shock oil 1/2 full can provide enough damping force.

Pivot Ball

- Pivot Retainer

Direction Guide

Direction Guide

Pivot Retainer

4

5

x 2

M3x14 Bolt

M3 Nut

M3x14 Bolt

M3 Nut

M3 Nut

M3x14 Bolt

M3 Nut

M3x14 Bolt

M3 Nut

M3x24 RS

80mm Damper

M3x16 RS

3x6x3 Tapper Spacer

80mm Damper

M3x16 RS


3x6x3 Tapper Spacer

B LEAFS / SHOCKS

- M3x16 RS x 6
#BRASBH3016
- 3x6x3
Tapper Spacer x 4
#BRLC7041

C LEAF SPRINGS

- M3x14 Bolt x 4
BRLC7064E
- M3 Nut - Nyloc x 6
#BRASNUTM3

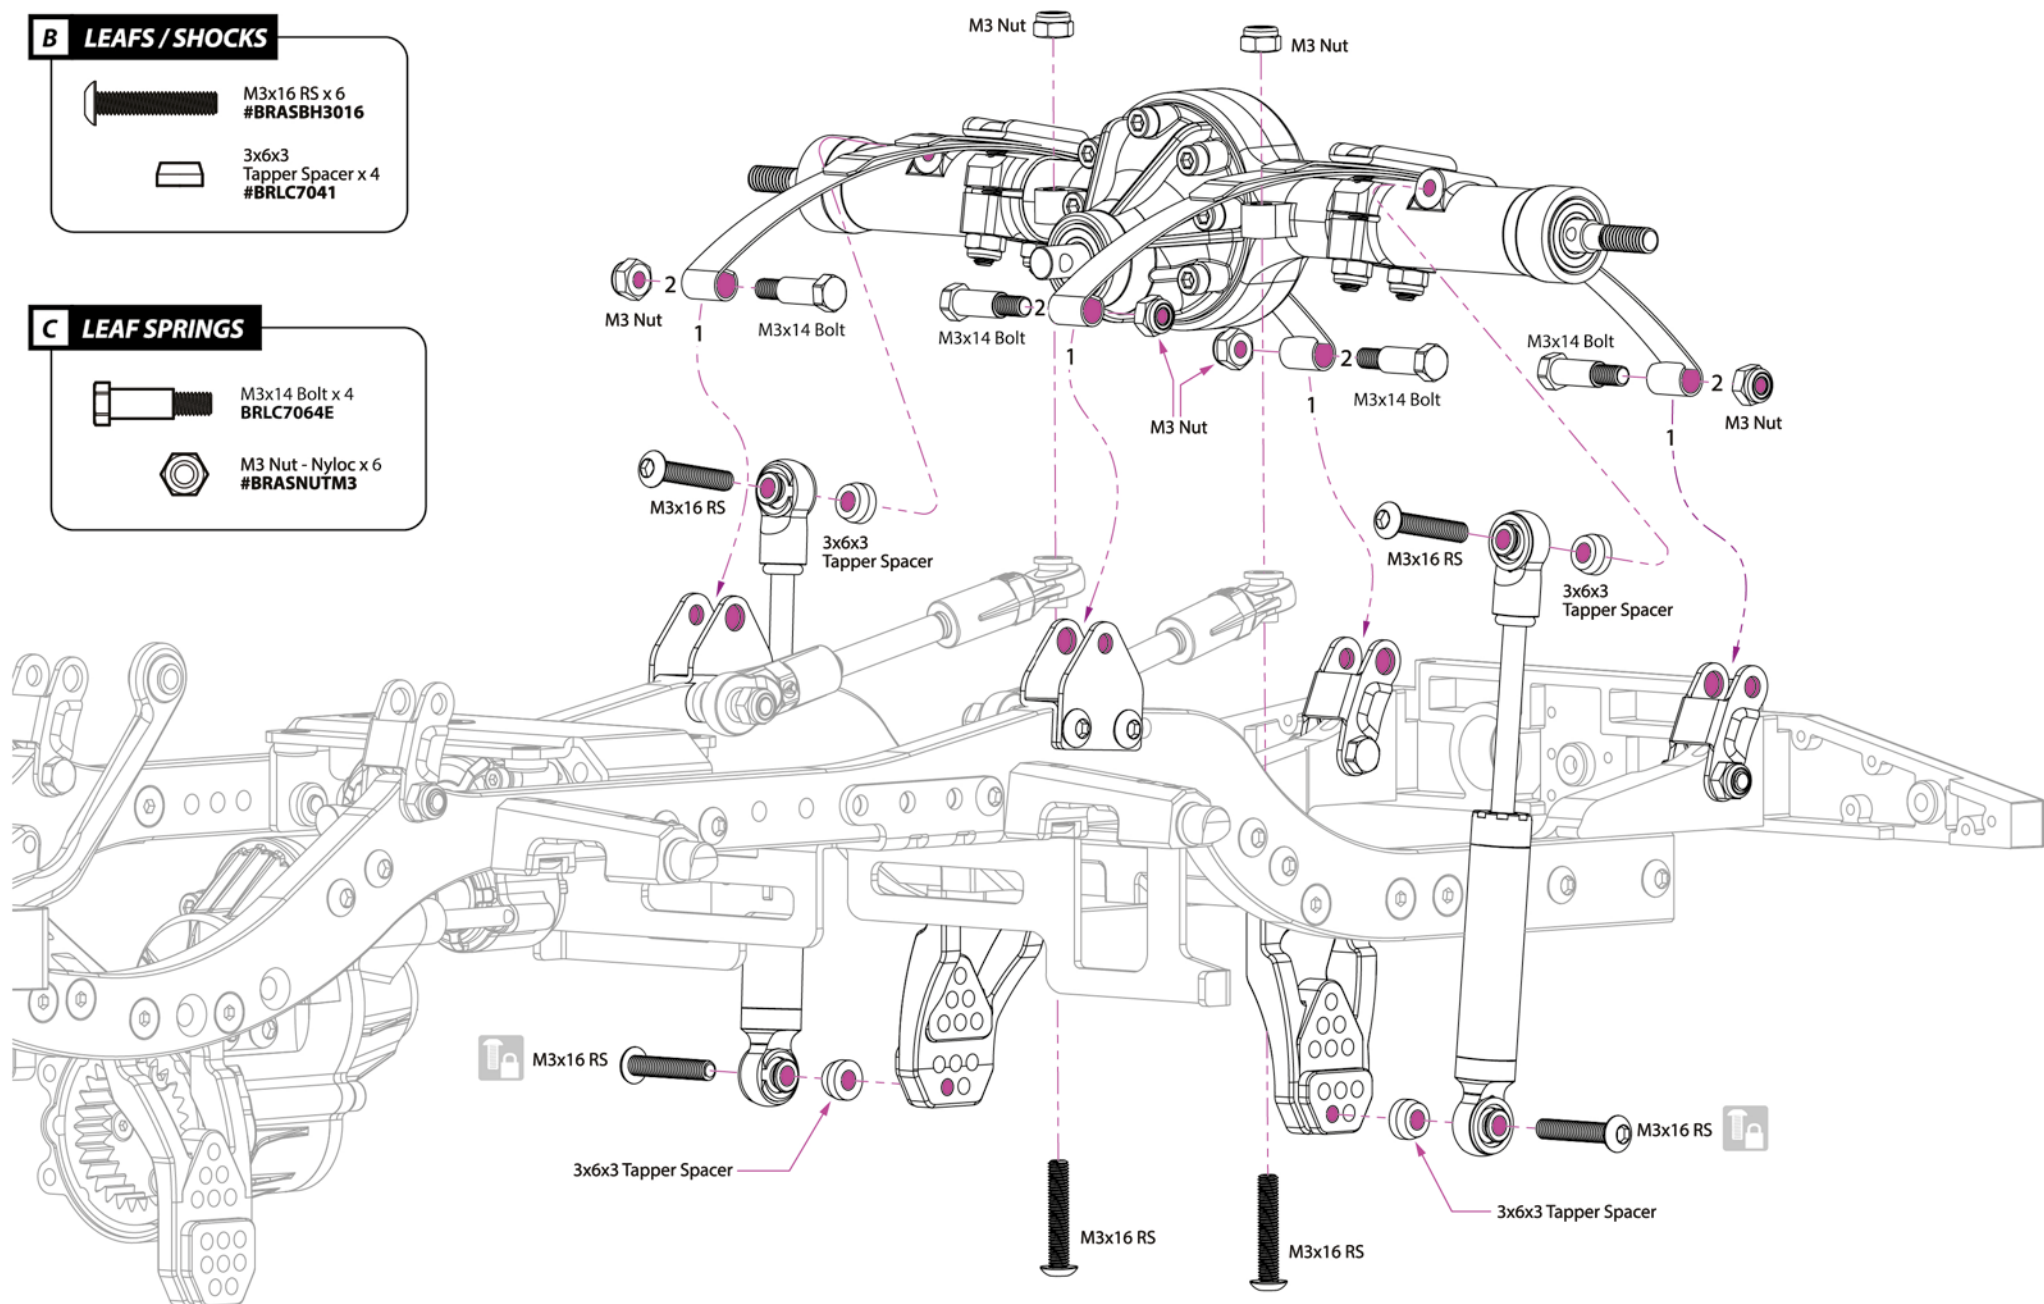


BRX02


0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190 200 210 mm

11 - DRIVE SHAFTS

 Parts Needed:



 KUDU™ HD CVD Rear Center Drive Shaft x 2
#BRX029043




KUDU™ HD CVD Front Center Drive Shaft x 2
#BRX029043

E GEARBOX / TRANSFER CASE

M3/2.2x11 SS x 4
#BRASST3022/DS


Align input shaft hole and drive shaft hole properly. Use the 1.5 Hex Key provided to help pull out the shaft if needed.

Routinely check the two center driveshafts and make sure loctite is used on the grub screws to prevent them from backing out.

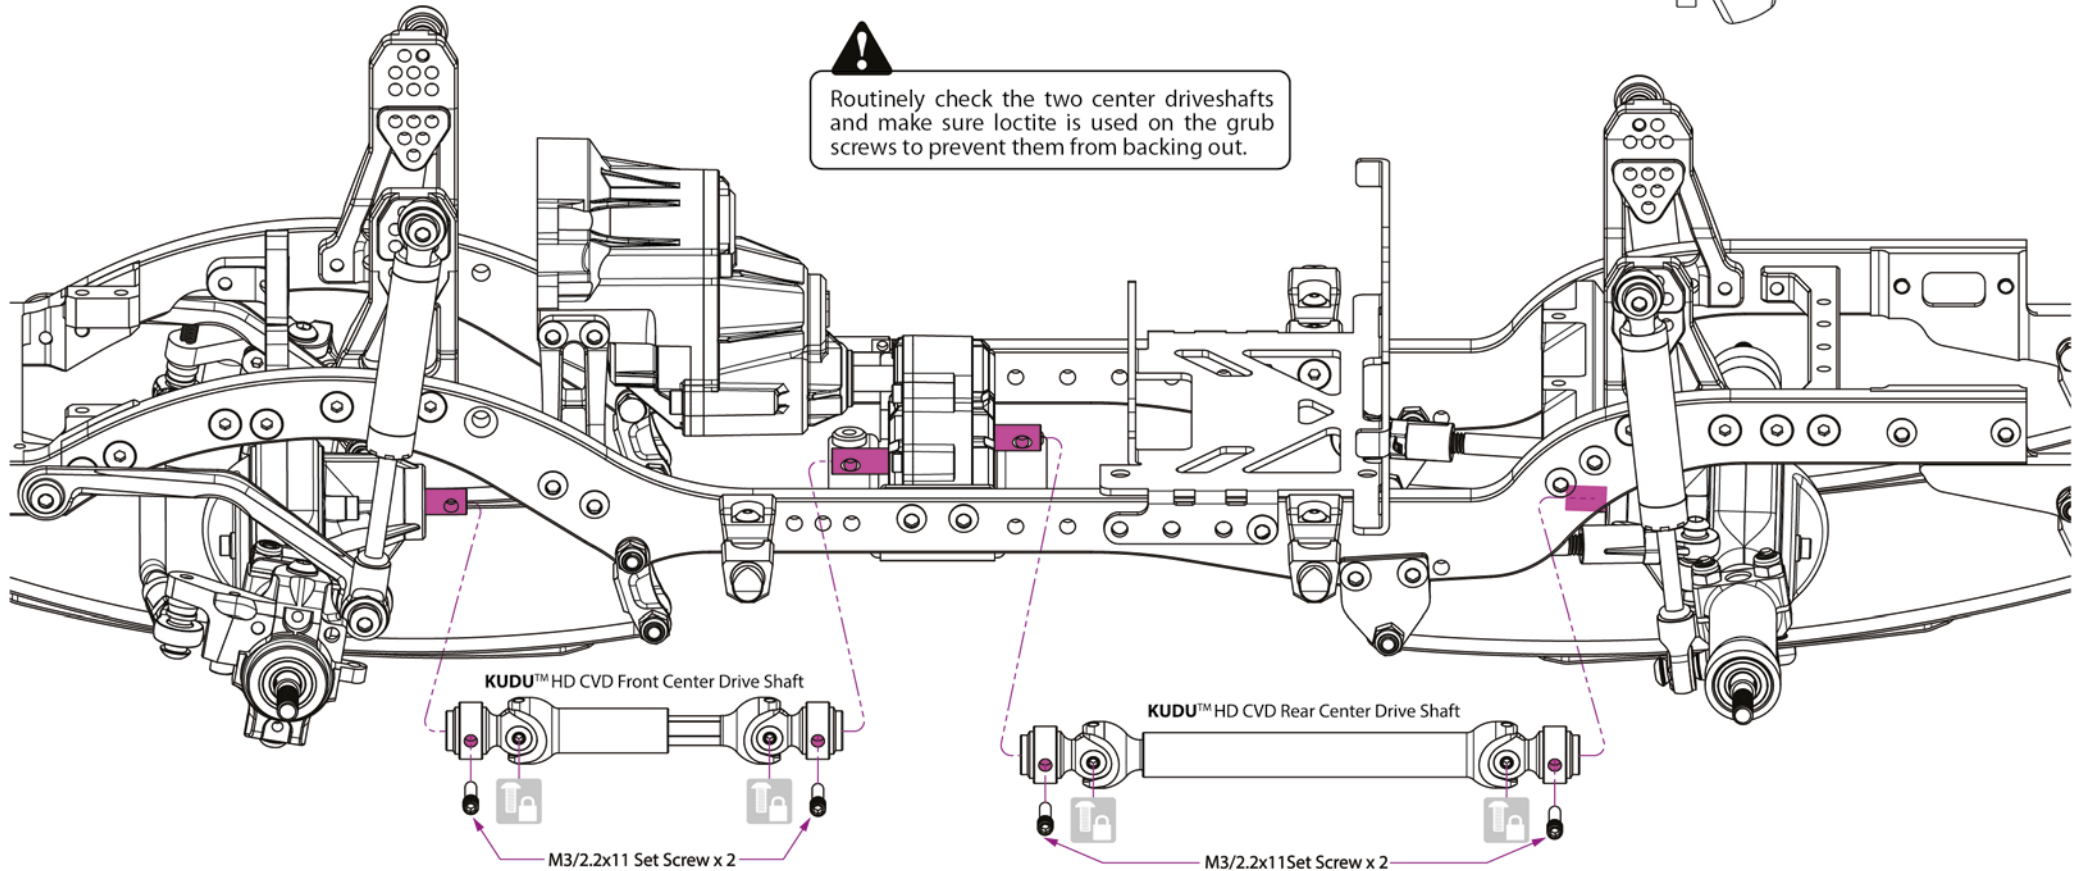


12 - SERVOS & SKID SLIDER

Parts Needed:

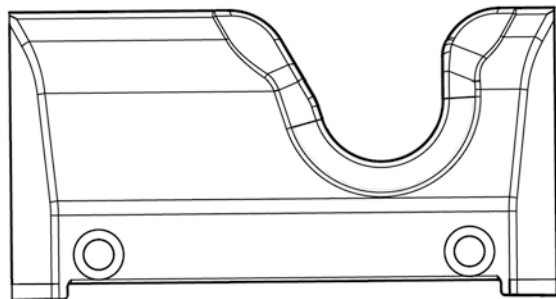


Front Center Skid Slider x 1
#BRX020107F

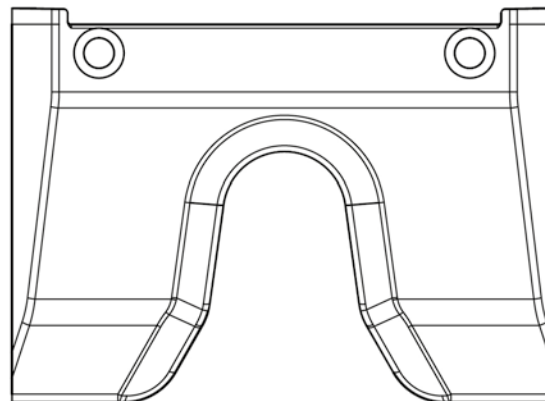


Rear Center Skid Slider x 1
#BRX020107R




Nylon Rod End (Upwards 20.0mm) x 1
#BRW750307D

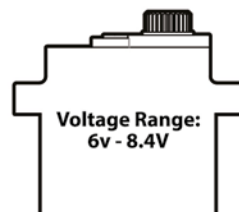

JX Waterproof HV Mini Servo x 1
#JX/PDI-HV1151MG

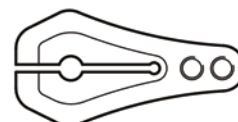

Servo Horn A - 25T x 1
#BR955014BK

 


Nylon Rod End
19.5mm (Sideways) x 1
#BRW750308C




BADASS™ Stainless
Steel Pivot Ball x 2
#BRW750310




Fine Tunable Link - 55mm x 1
#BRLC7050

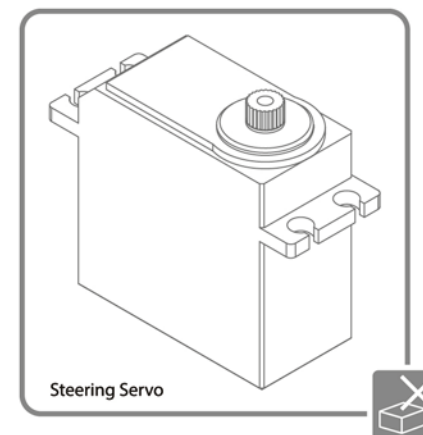

Steering Servo

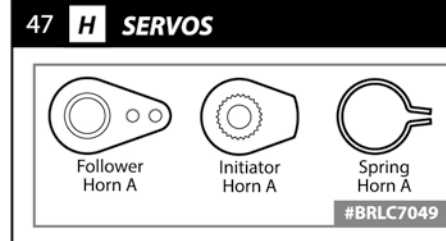

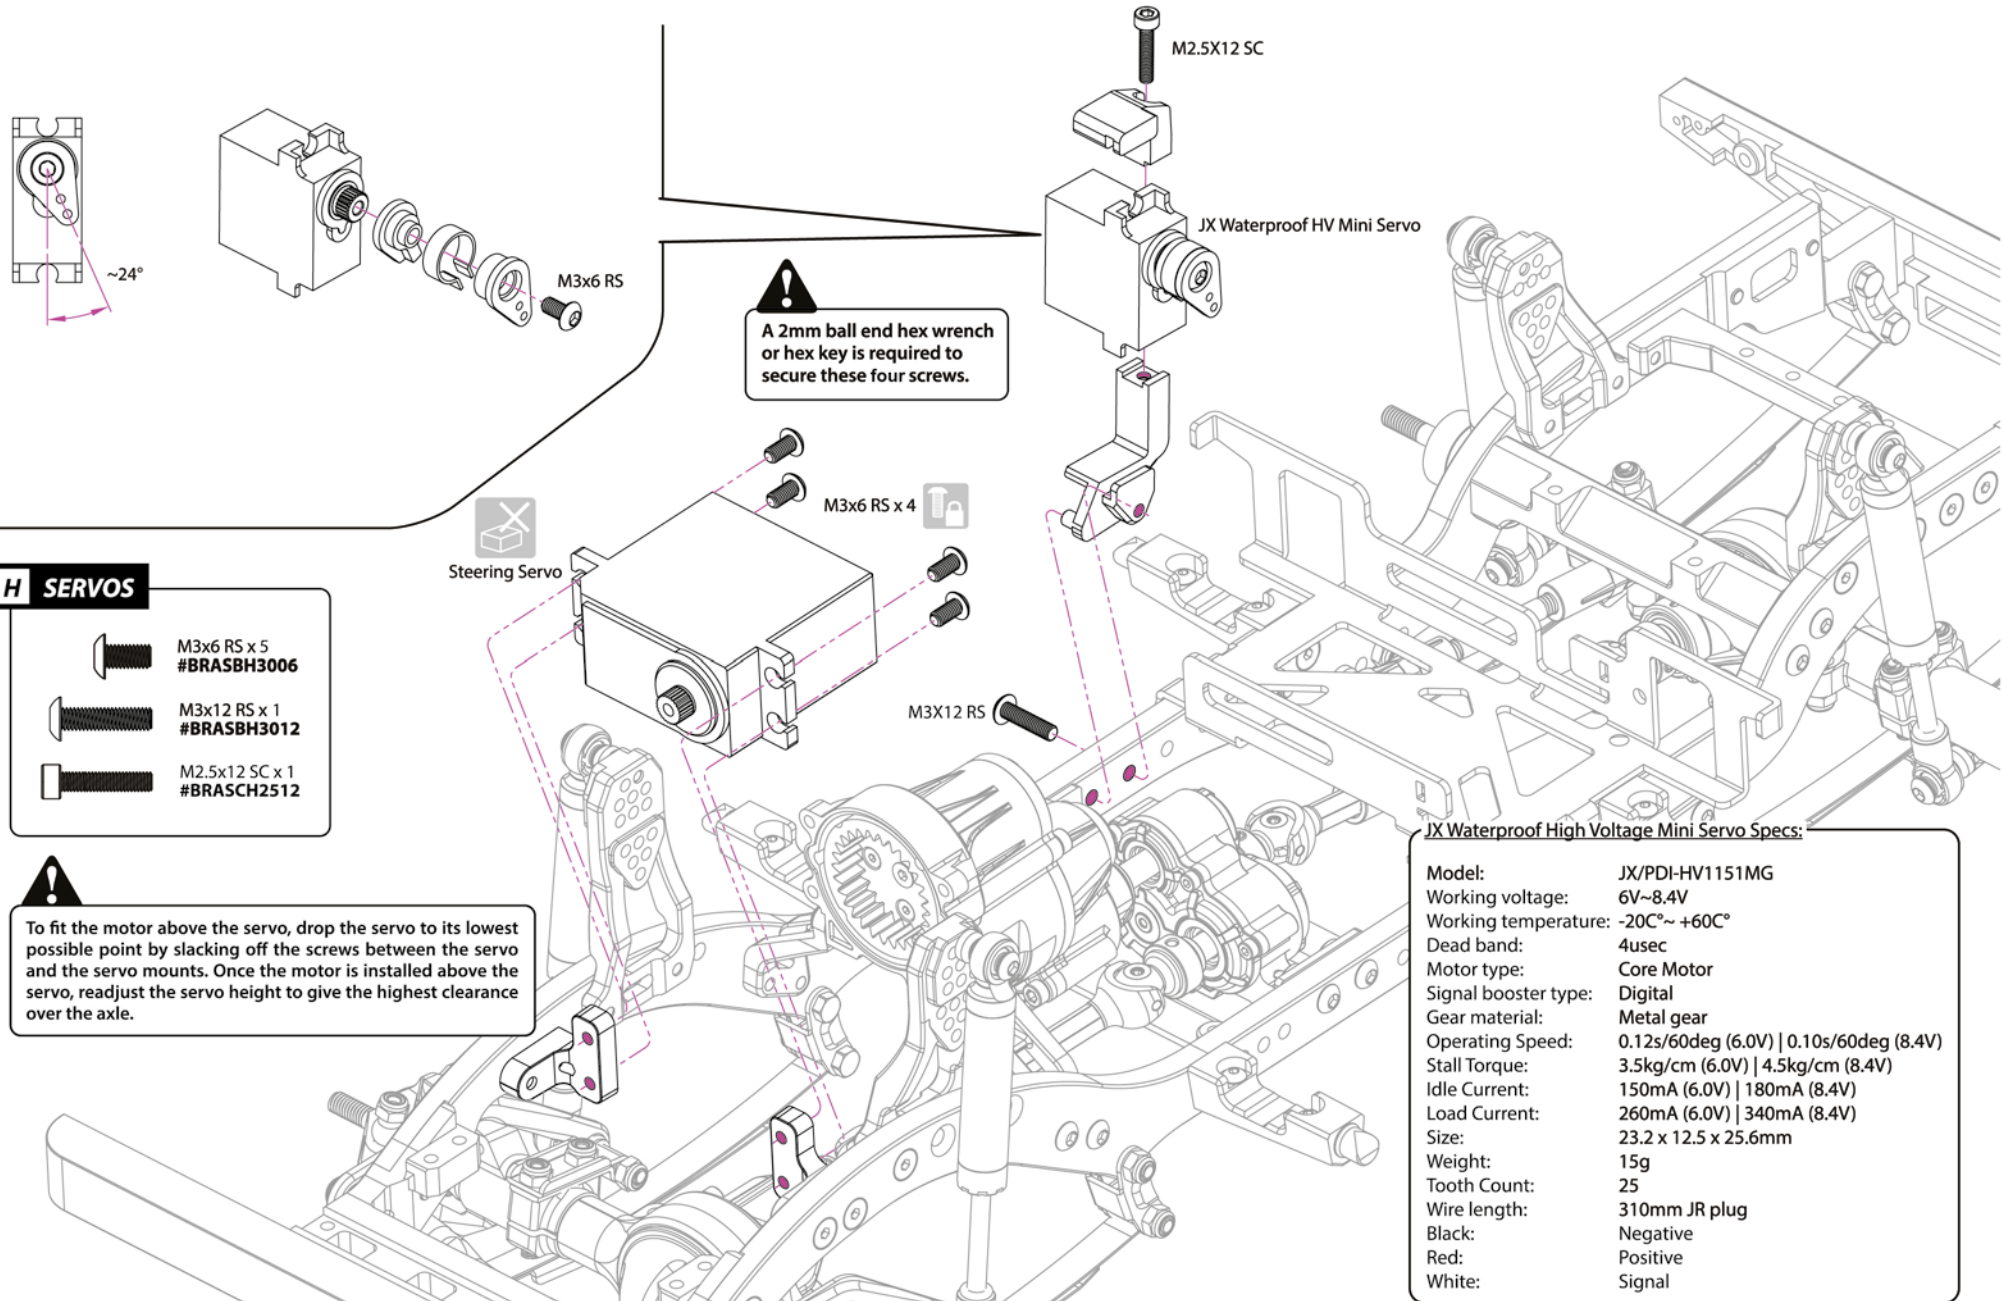

A CHASSIS

M3x14 RS x 4
#BRASBH3014/ST

M3x6 RS x 4
#BRASCH3006

B LEAFS / SHOCKS


M3x10 RS x 1
#BRASBH3010

M3 Nut - Nyloc x 1
#BRASNUTM3

H SERVOS

M3x6 RS x 1
#BRASBH3006

M2x8 SC x 2
#BRASCH2008

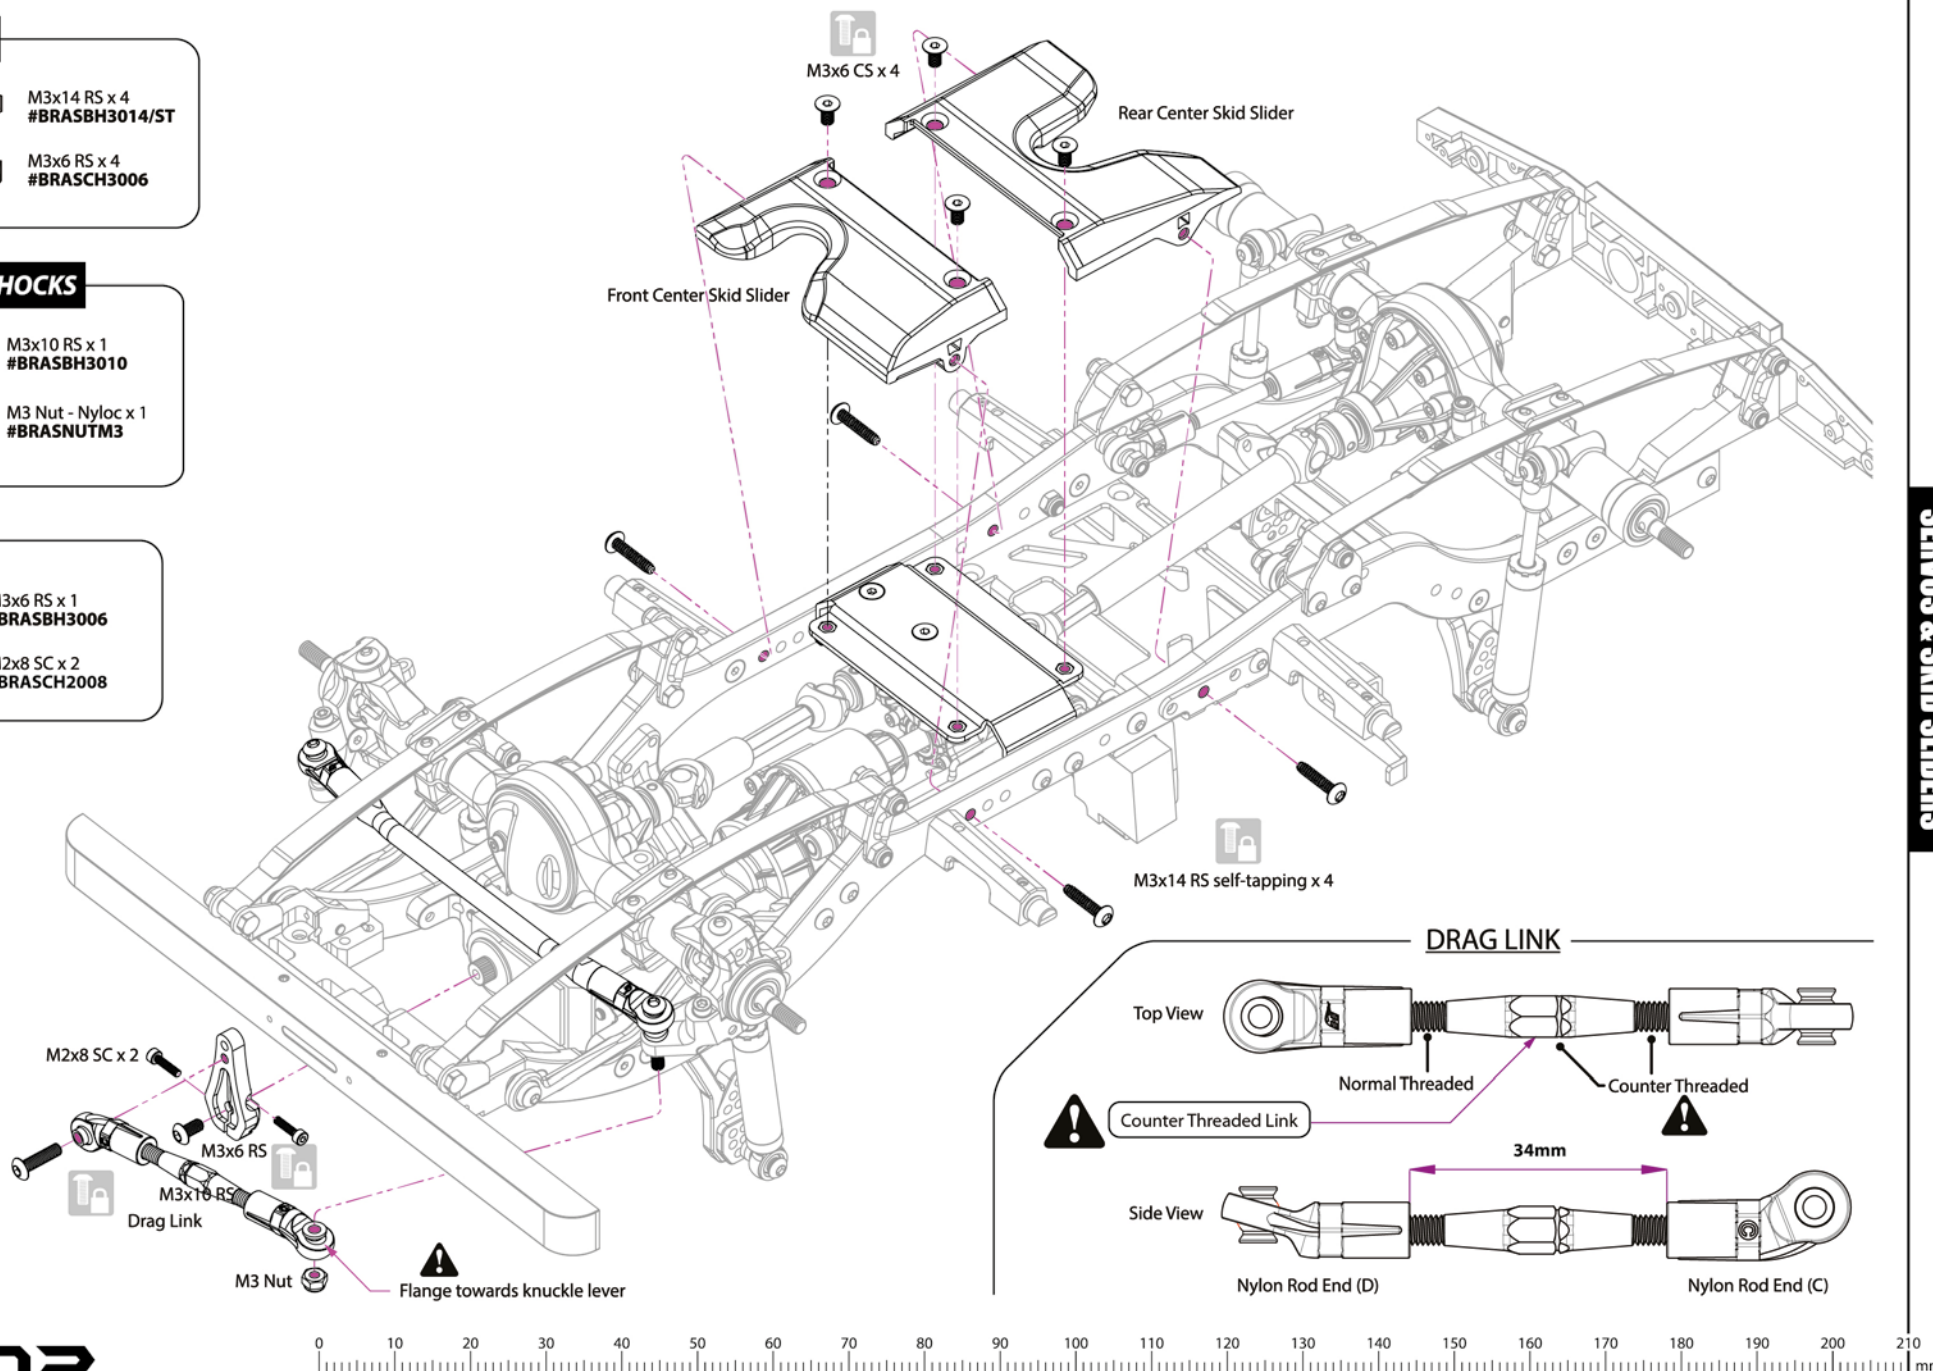**BRX02**

13 - SHIFT ROD

Parts Needed:



Shift Rod x 1
#BRX029051



D2 Ball & Rod End x 1
#BRQ90351





SERVOS



M2x8 SC x 1
#BRASCH2008



SHIFT ROD

39mm

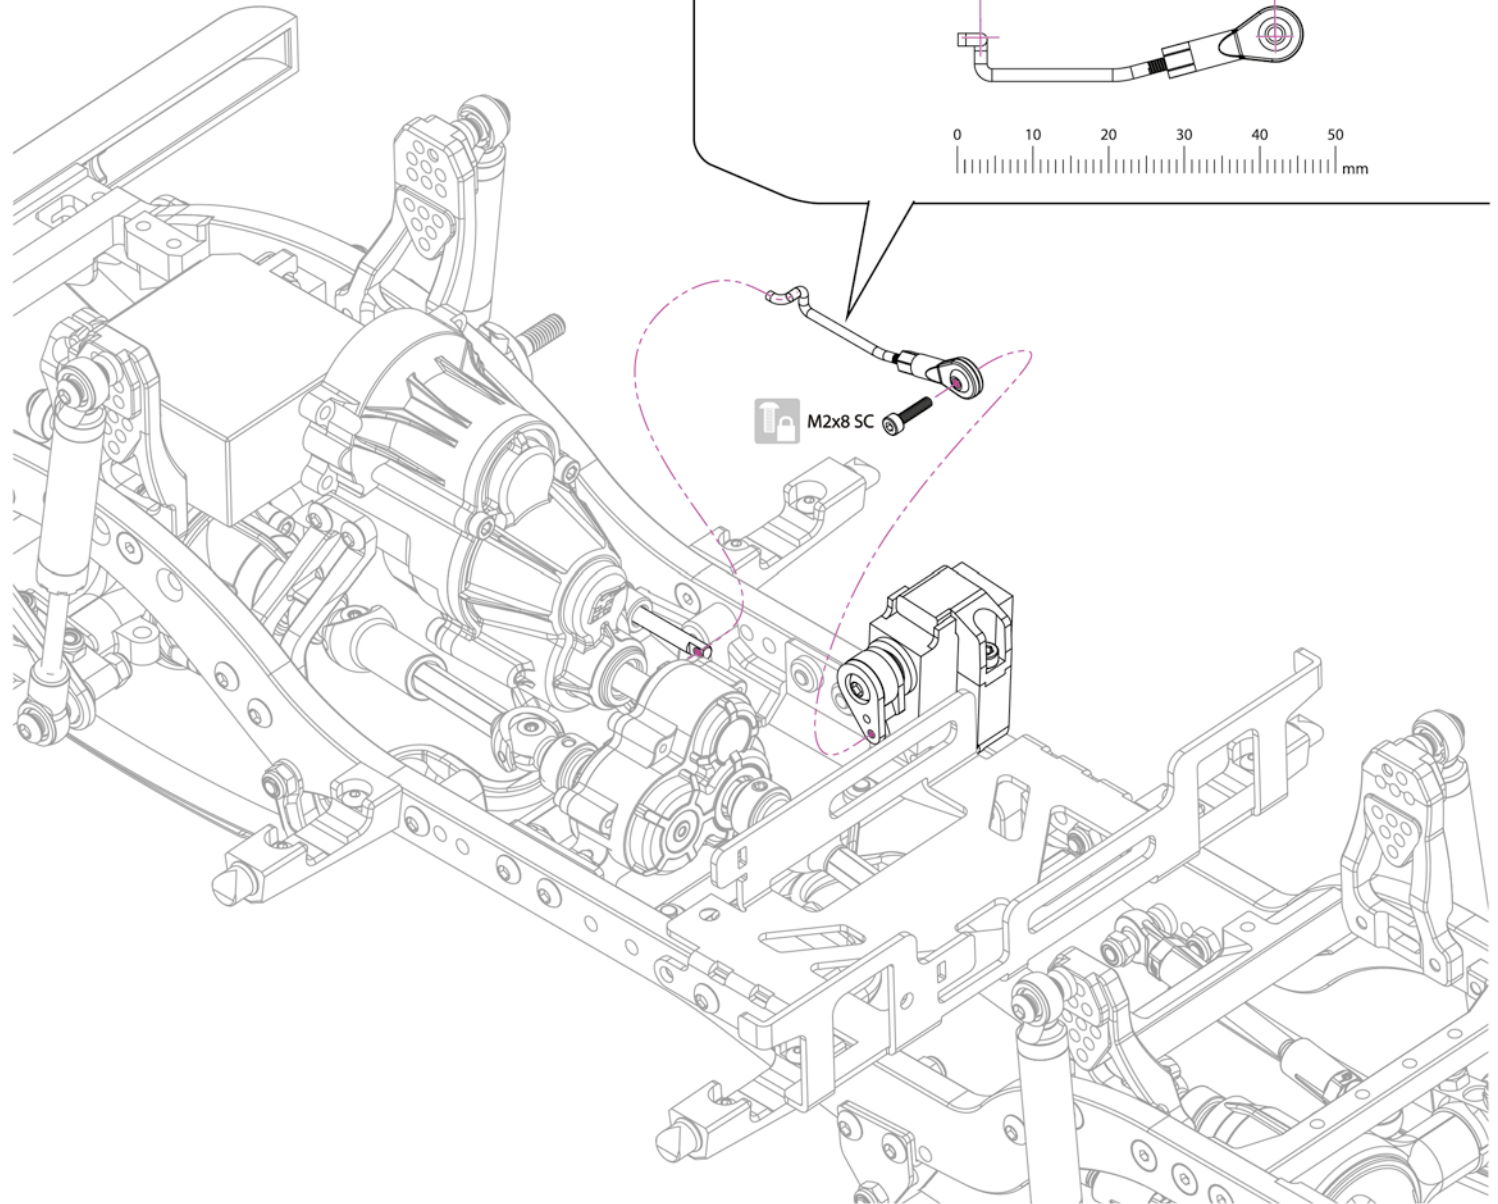
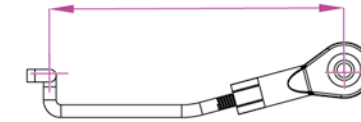


14 - MOTOR


Parts Needed:

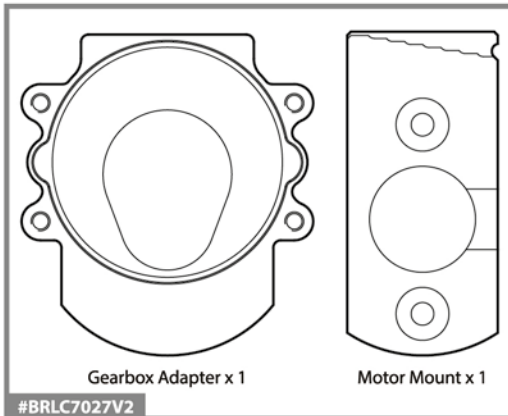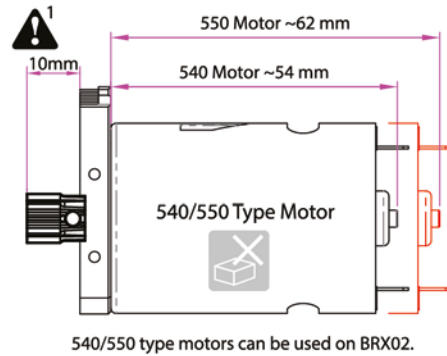

GEARBOX / TRANSFER CASE

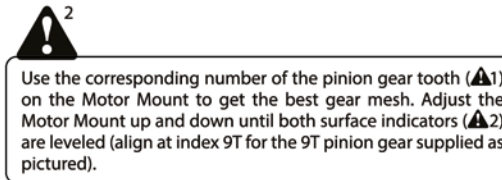
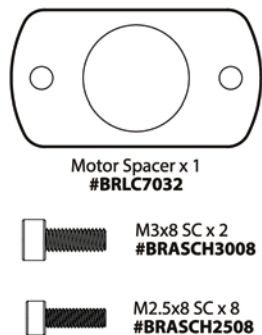


Align surface indicators*

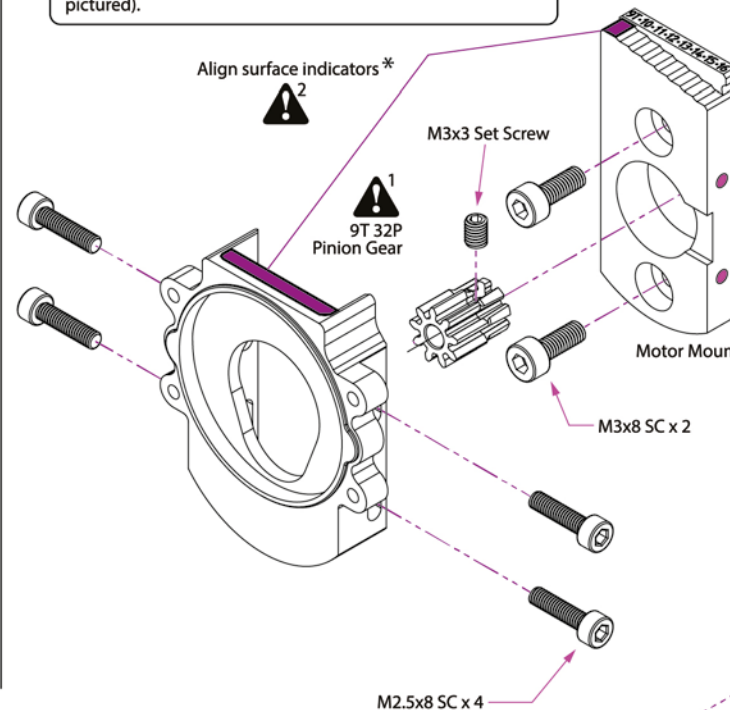

M2.5x8 SC x 4

M2.5x8 SC x 4


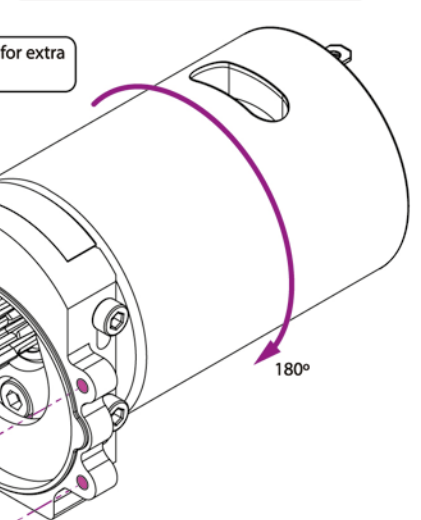
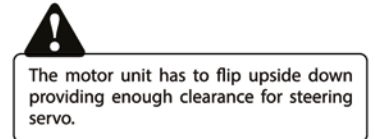


Final Drive Ratio		
Pinion Gear	Spur Gear (28T)	
	1st Gear	2nd Gear
* 9	60.15	27.07 *
10	54.13	24.36
11	49.21	22.15
12	45.11	20.30
13	41.64	18.74
14	38.67	17.40
15	36.09	16.24
16	33.83	15.23

Only 9T pinion gear can be used for the stock setup.

15 - RECEIVER BOX & ELECTRONICS INSTALLATION

Parts Needed:

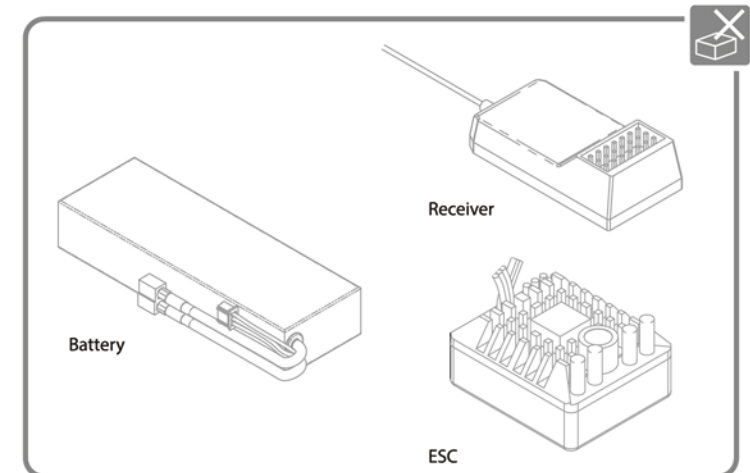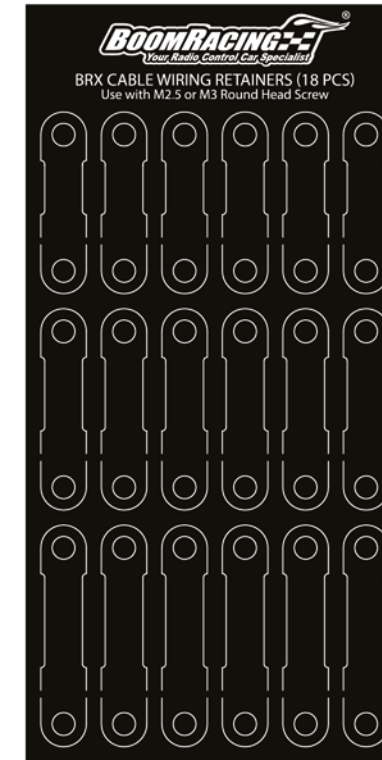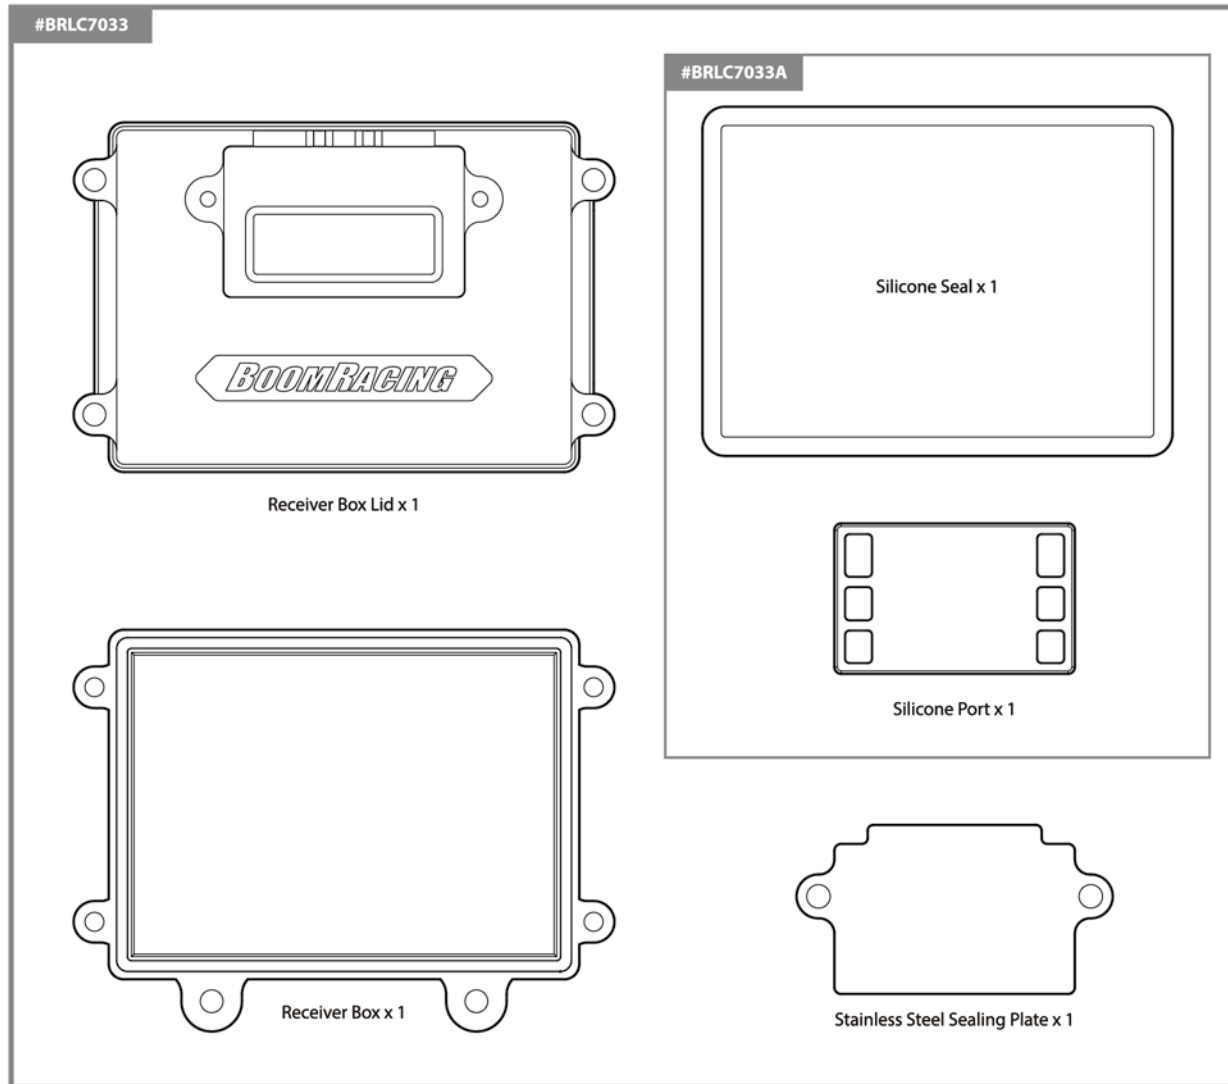

A CHASSIS

M3x6 RS x 2
#BRASBH3006

F RECEIVER BOX

M3x22 RS x 2
#BRASBH3022

Battery (not provided)



Battery

ESC Mounting Plate



ESC (not provided)
Max. clearance between
mounting plate and motor: 22mm



ESC

M3x6RS x 2

9mm Spacer x2

CABLE WIRING RETAINER

M2.5x4 RS x2

Use the shortest cable wiring
retainer provided to secure
cables.


The recessed shape on
body post is designed for
cable routing.

A CHASSIS

M2.5x4 RS x 8
#BRASBH2504

OPTIONAL

For the ultimate soldering
experience you can use this.

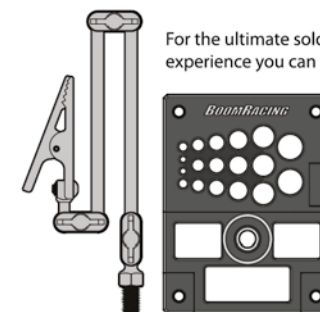

Multifunctional Soldering Jig
#BRT10058


Receiver Box

M3x22 RS x2

BRX02


0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190 200 210 mm

F RECEIVER BOX
 M3x8 RS x 4
#BRASBH3008

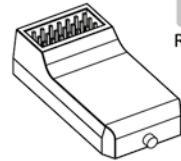 M2.5x6 RS x 2
#BRASBH2506


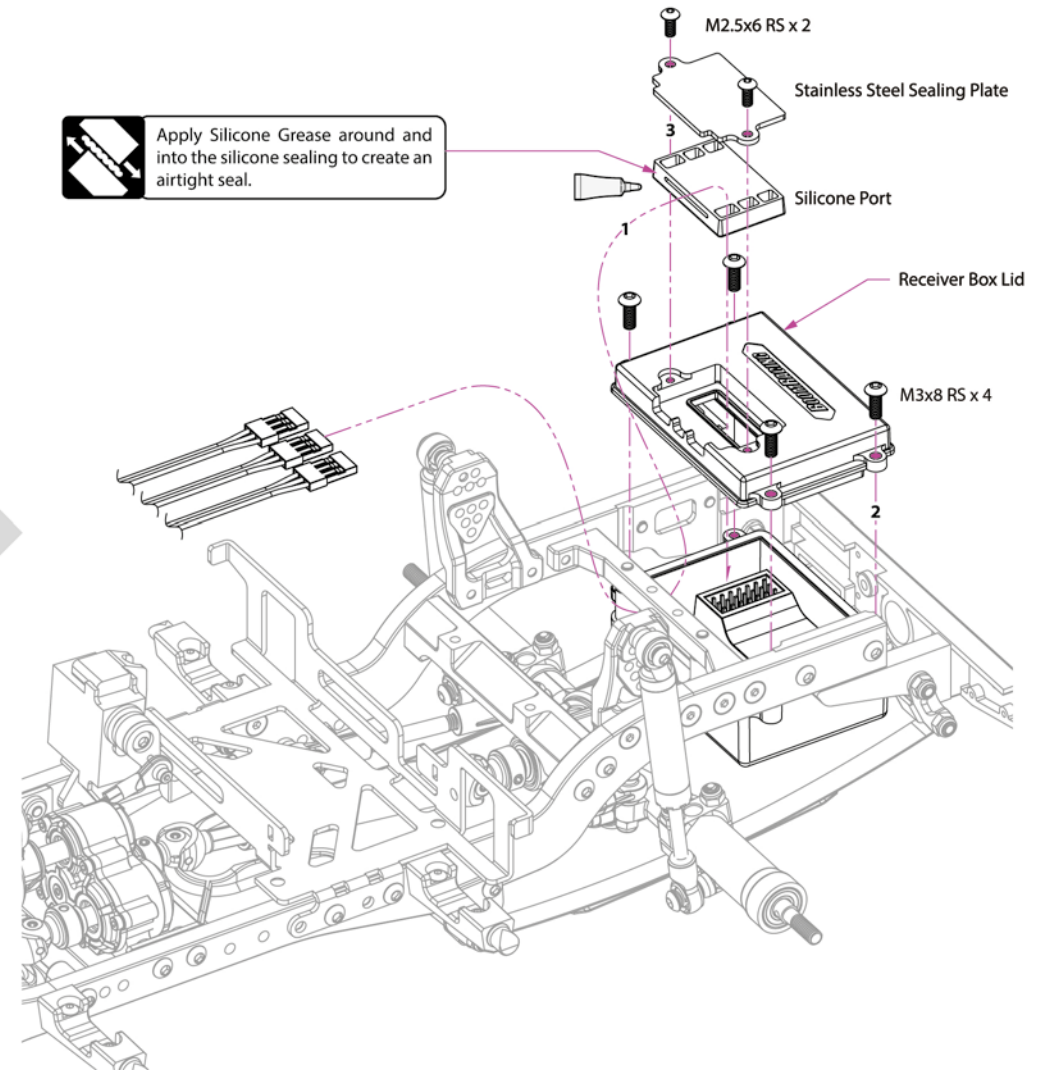
Receiver

Receiver (not provided)
The orientation to place
the receiver depends on
the model used.

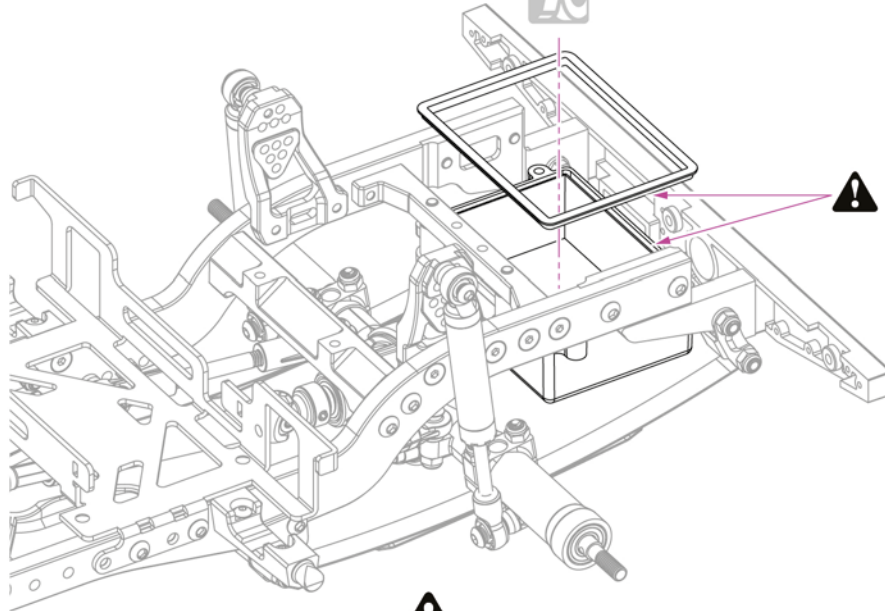



To fully waterproof the receiver box, apply a generous amount of Silicone Grease into and around the two silicone sealings to create an airtight seal.

The BRX02 is designed to go anywhere. This includes being fully submerged under water. To protect electronics from water damage, all electronics must be fully waterproofed. It is your responsibility to fully waterproof all electronics before driving in wet conditions.


 Apply Silicone Grease around and into the silicone sealing to create an airtight seal.


16 - WHEELS & TIRES

Parts Needed:

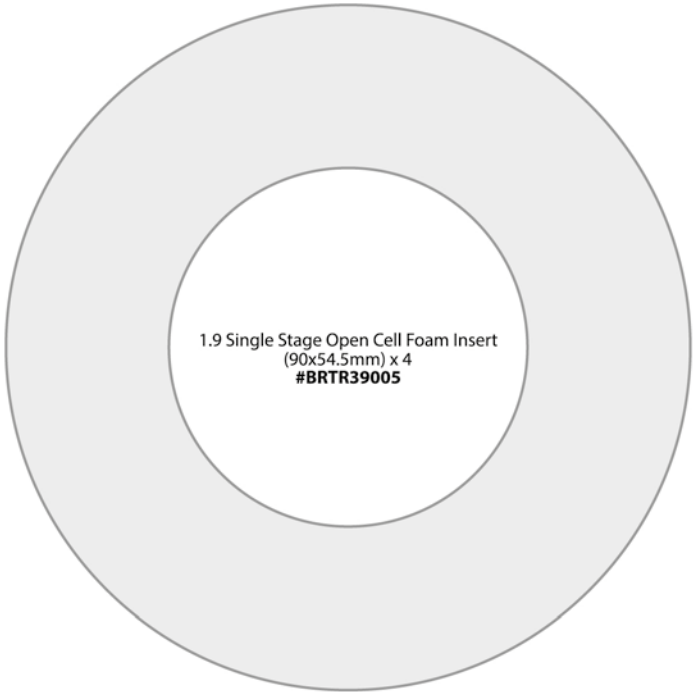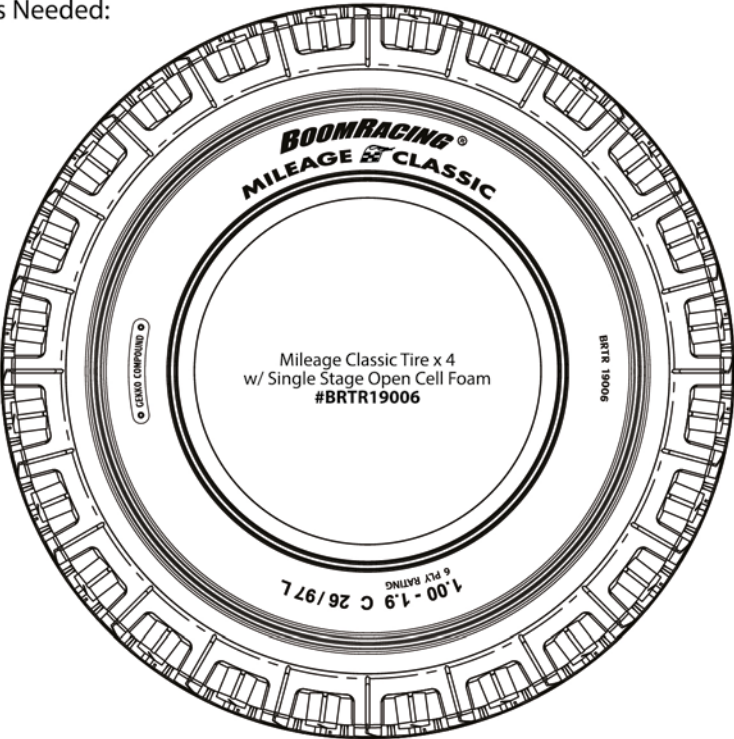

1.9 Single Stage Open Cell Foam Insert
(90x54.5mm) x 4
#BRTR39005

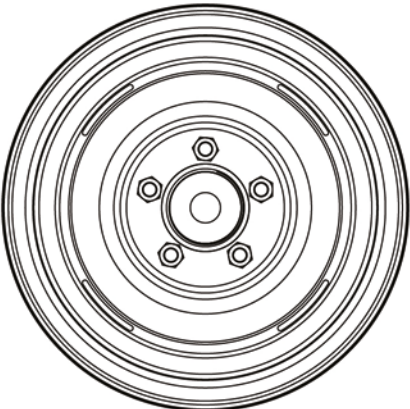

SLR™ 1.9 Classic Steel Wheel x 4
w/ Cap and Scale Hardware
#BRW780944
with (#XT502PIN) Wheel Hub



Nylon Wheel Hub Caps x 4
#BRW780944C

C LEAF SPRINGS



M2.5x14 RS x 2
#BRASBH2514



2.5 Nut x 2
#BRASNUTM25

D WHEELS




M4 Nut - Nyloc x 4
#BRASNUTM4




2x10mm Pin x 4
#BRASPIN210




D4x7x2
Aluminum Spacer x 4
#BRASSP472

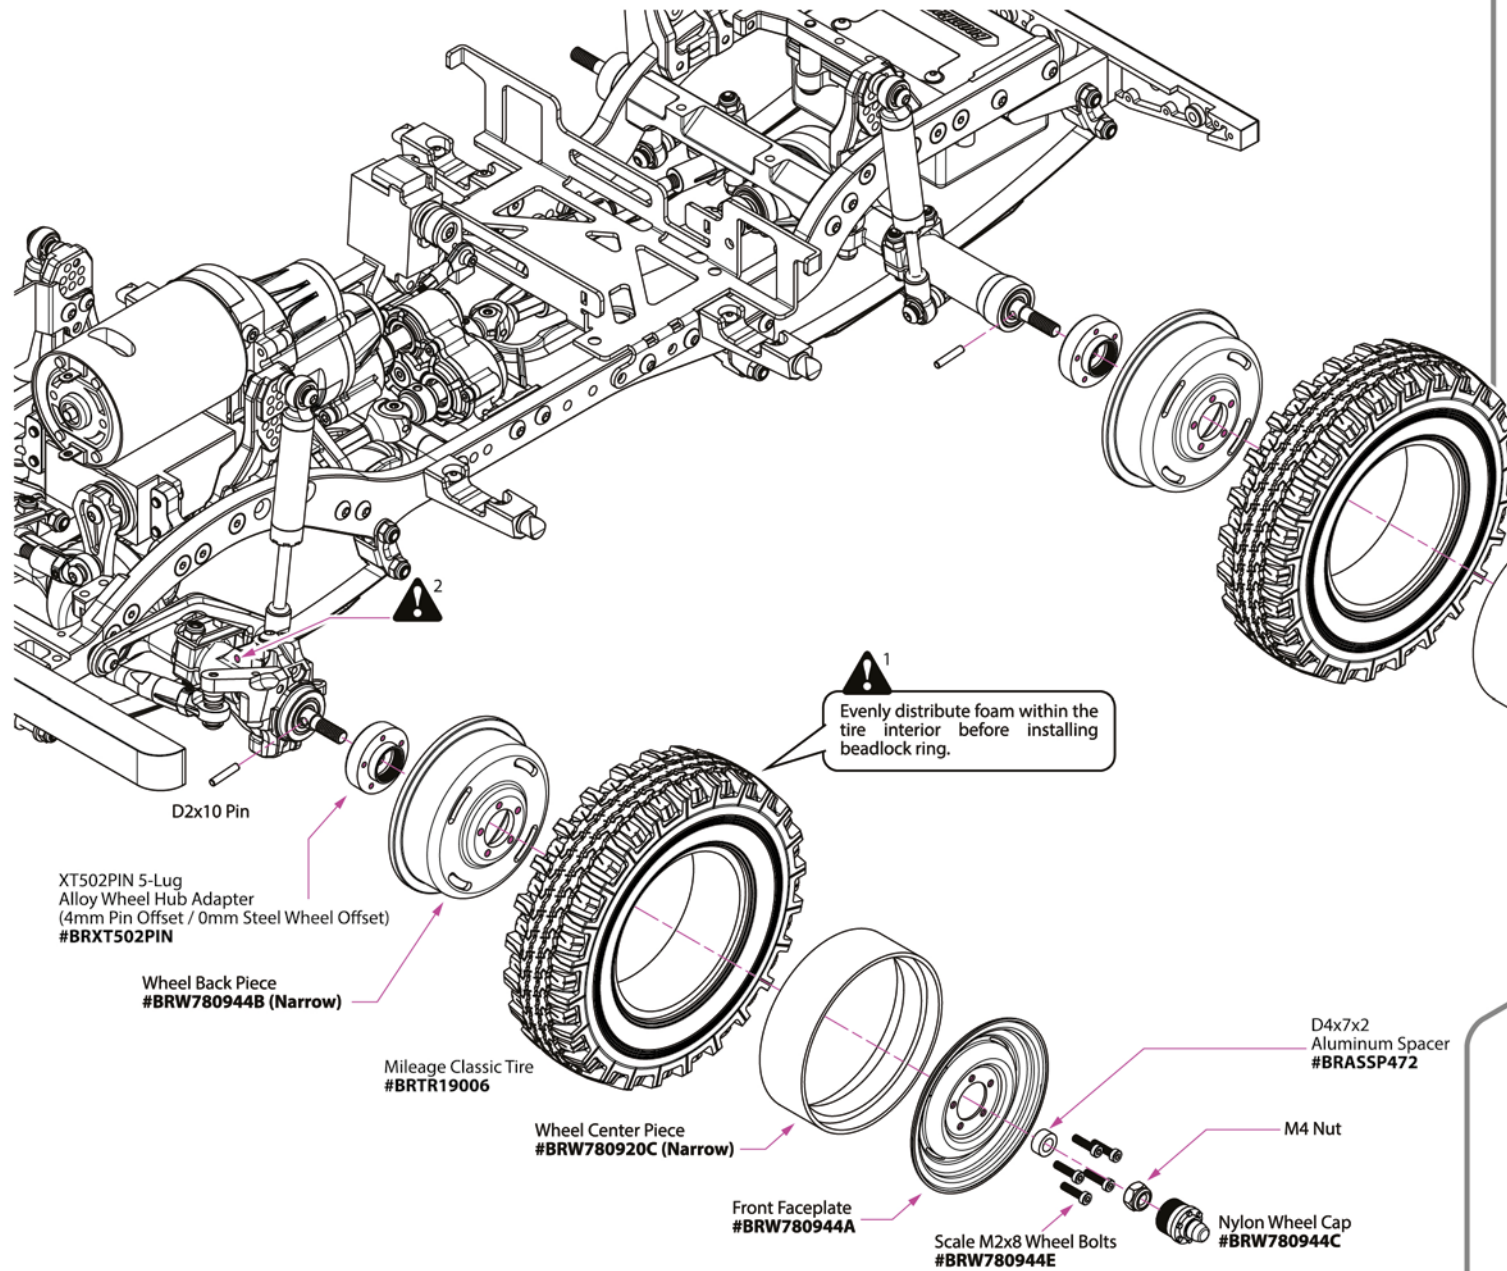

TOOL USAGE

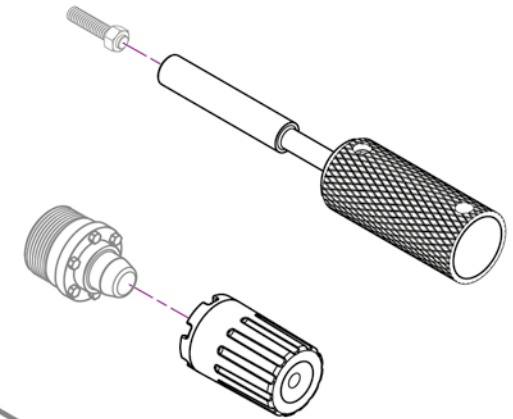


STEERING ANGLE LIMITER

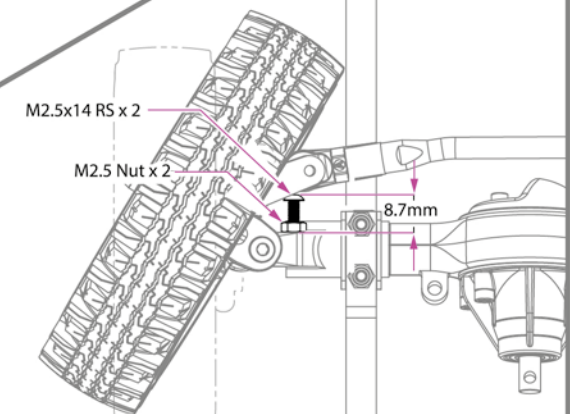

18 - REAR BUMPERETTE INSTALLATION

 Parts Needed:



Rear Bumper x 1
#BRX020109R



Rear Bumper Guard x 2

J


GEARS, SHAFTS & BEARINGS - GEAR BOX



M2x9 Scale Hex Bolt x 4
#BRPROB-06BK




2.0mm Socket Driver Bit X 1

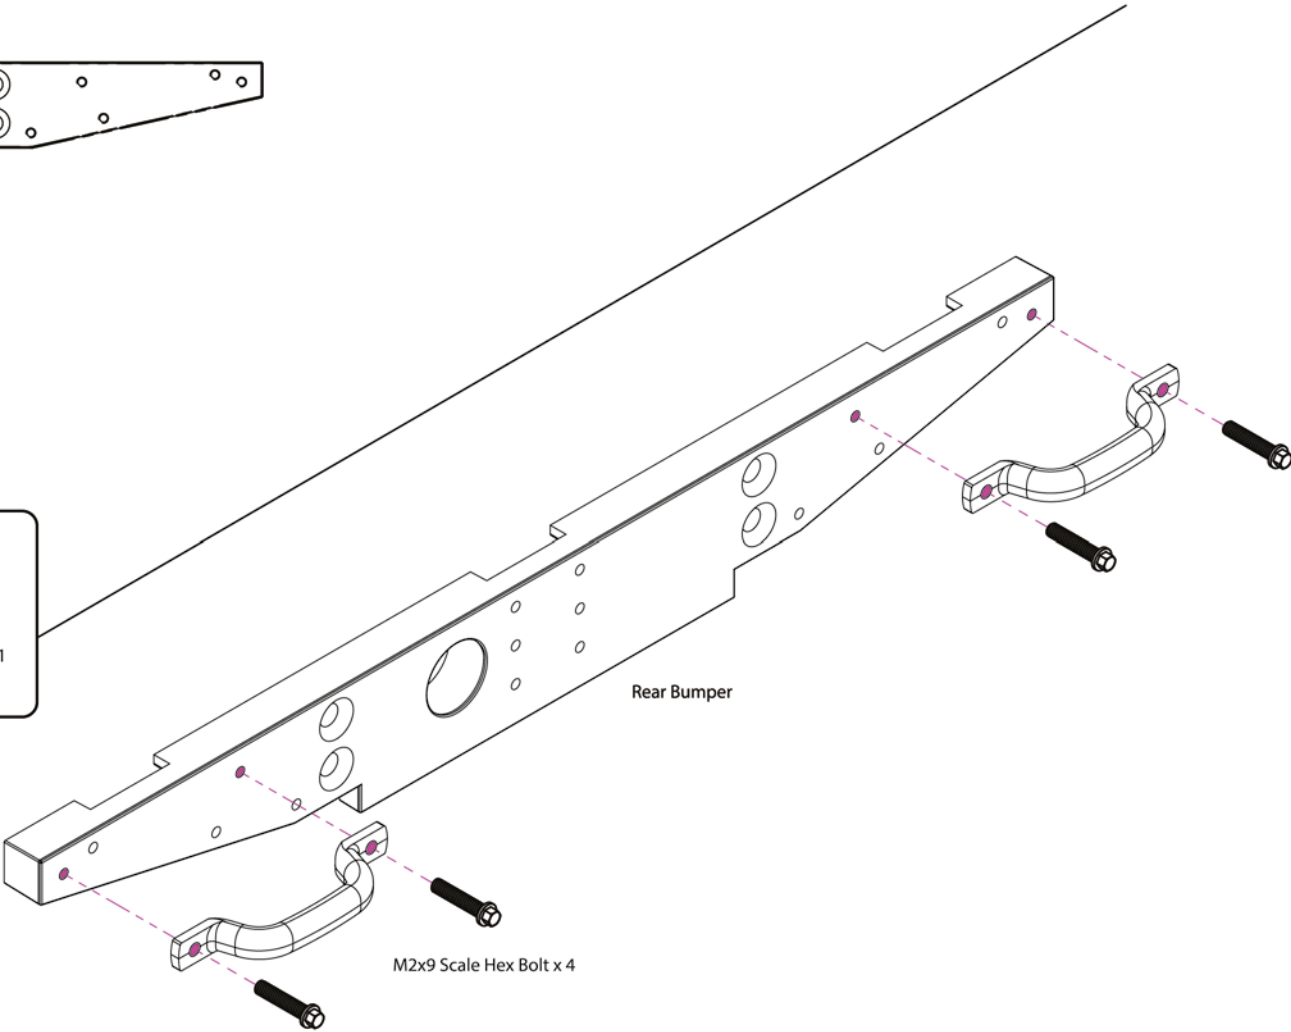

17 - BODY MOUNT

Parts Needed:


#BRX020112

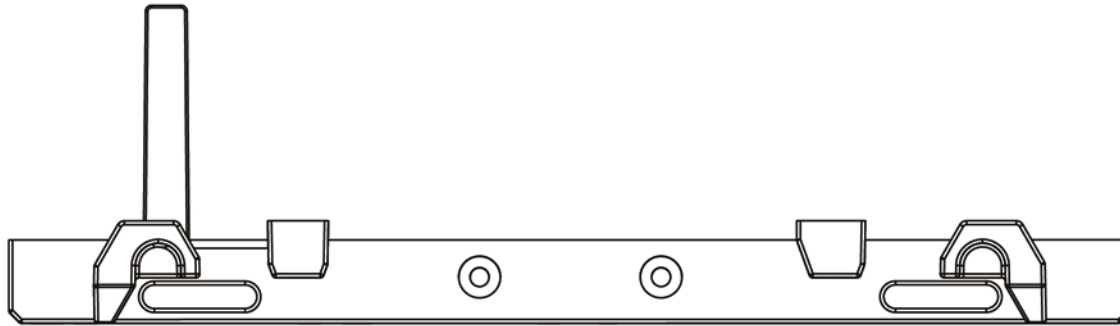


Aluminum Body Brace Left x 1




 
Aluminum Body Brace Right x 1


Quick Release Body Latch x 2
#BRX020061**G BODY MOUNTS**M3x14 RS x 4
#BRASBH3014Ø5mm Spring x 4
#BRASSPRING05510Slider Spacer x 4
#BRX020035

QUICK RELEASE BODY MOUNT - LEFT

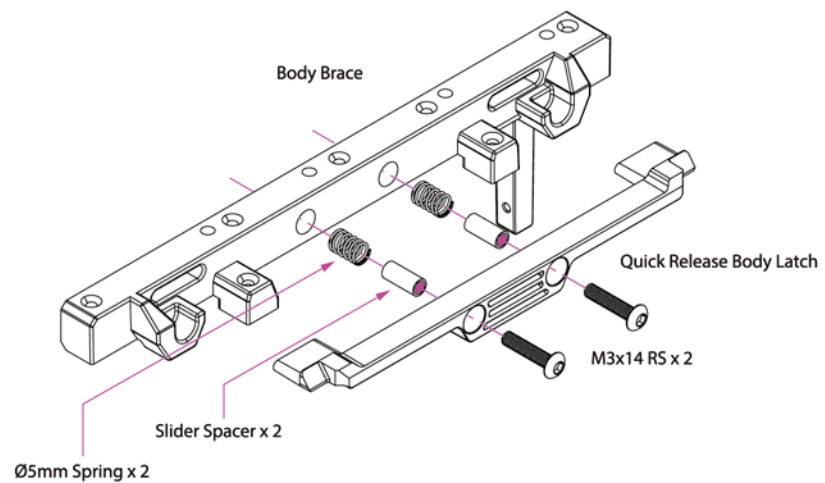

QUICK RELEASE BODY MOUNT - RIGHT

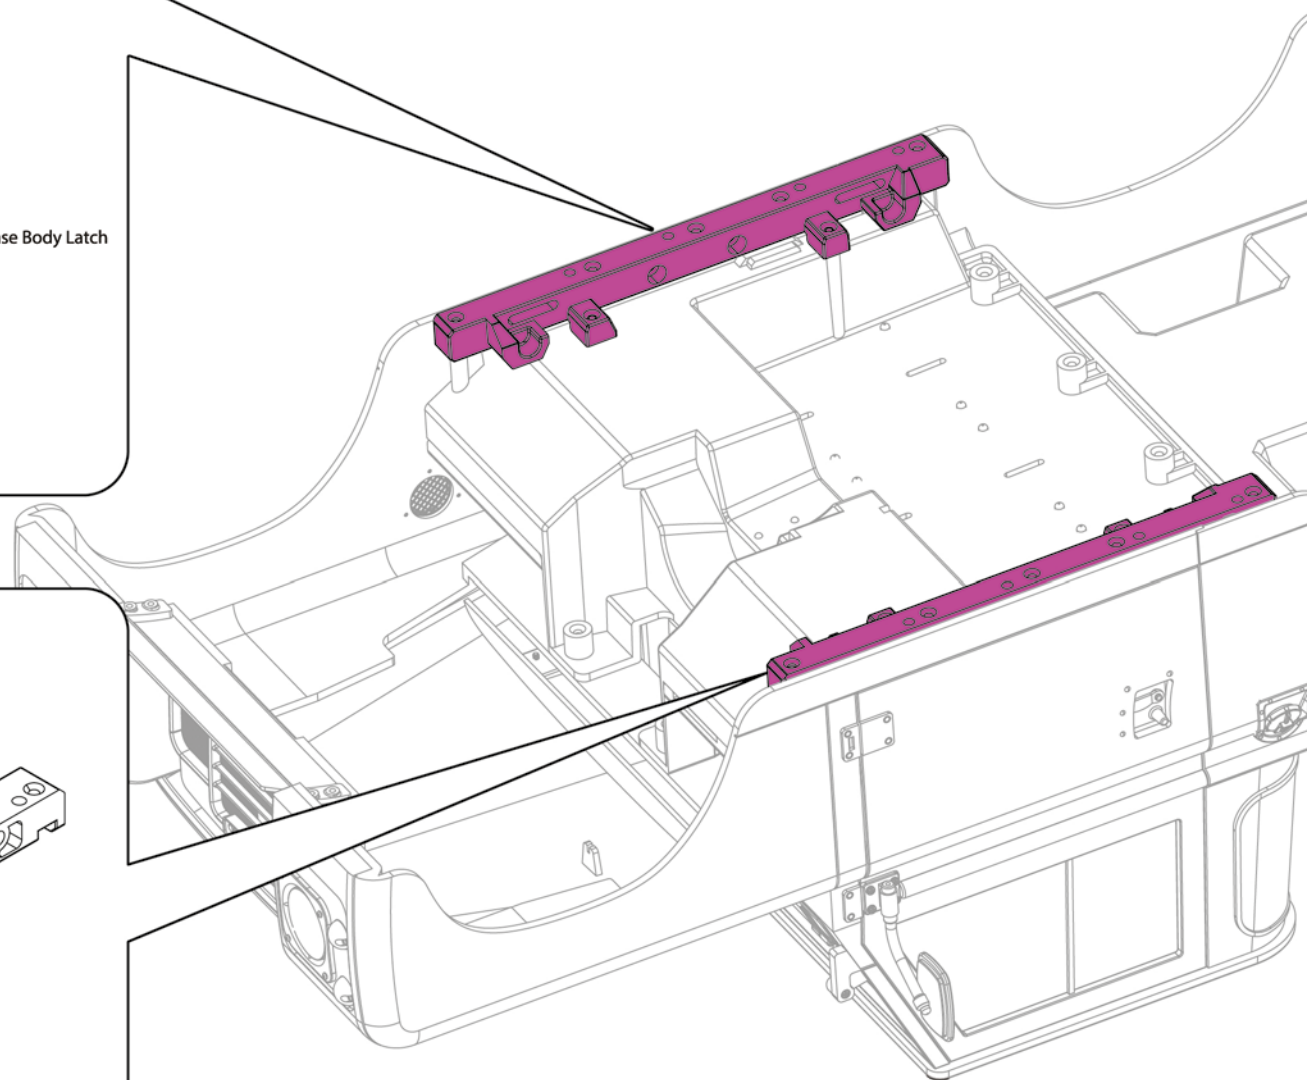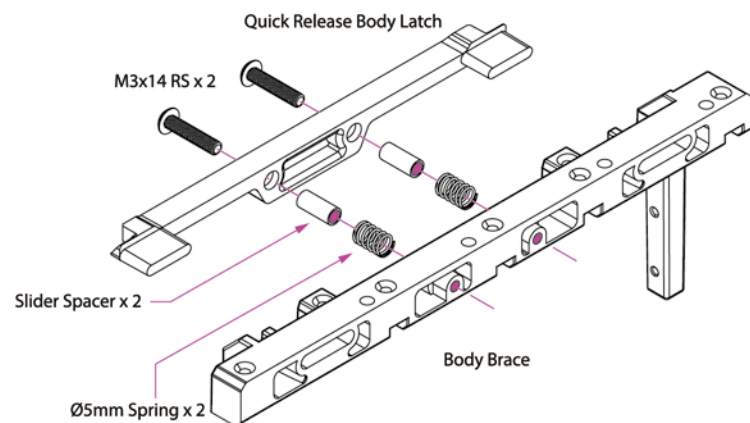

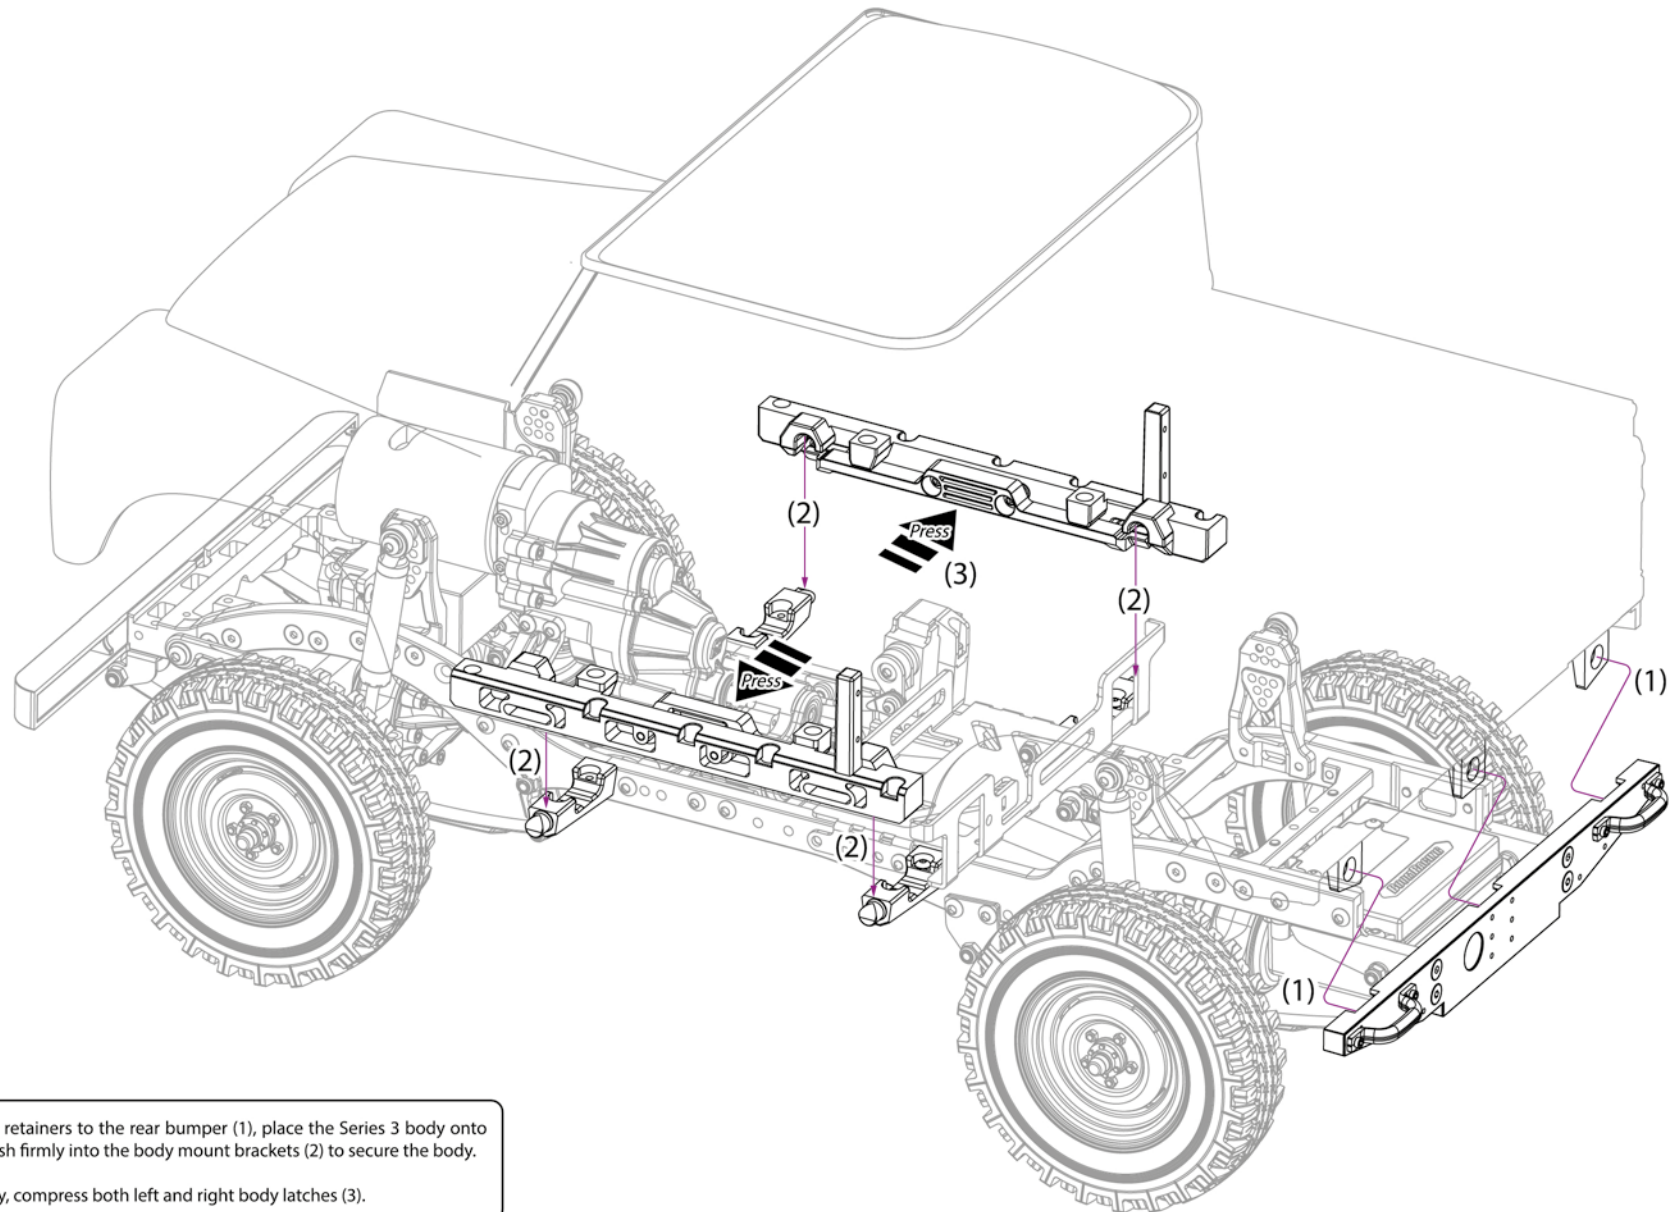
ATTACH / DETACH BODY

After inserting the retainers to the rear bumper (1), place the Series 3 body onto the chassis and push firmly into the body mount brackets (2) to secure the body.

To release the body, compress both left and right body latches (3).


PRE-ASSEMBLED AXLE

Front Diff Cover Release Method In Case Assembly Is Tight.

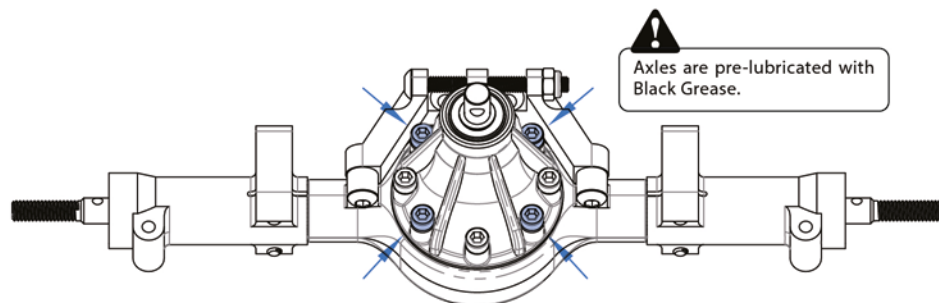


Step 1 - Loosen four M2.5x16mm socket screws indicated making the screw cap 3 mm apart from the case.

Step 2 - Hammer those screw slightly via screwdriver to release the front diff cover.

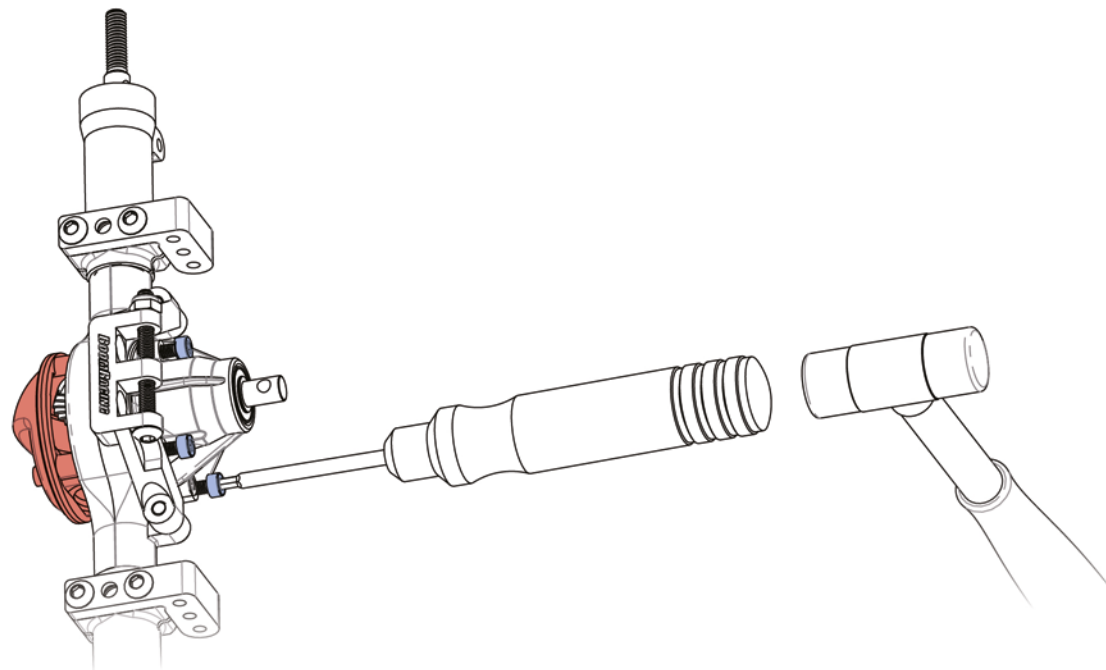


The Third Member Release Method When Assembly Is Tight.

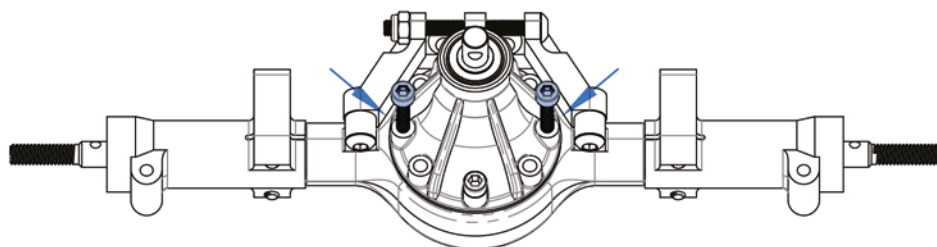

Step 1 - Remove all M2.5x16mm and two M2.5x5mm socket screws

Step 2 - Install two M2.5x16mm socket screws into both left and right screw holes as indicated


Step 3 - Lightly torque the screws until the third member is released

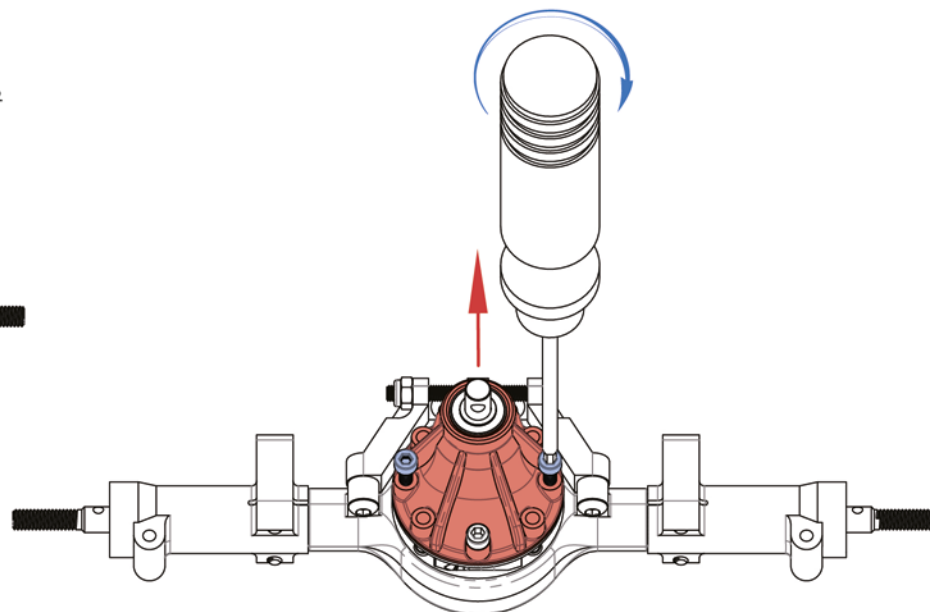

PRE-ASSEMBLED FRONT AXLE




Apply a generous amount of Black Grease on all movable contact surfaces including gears, spacers, shafts and bearings.

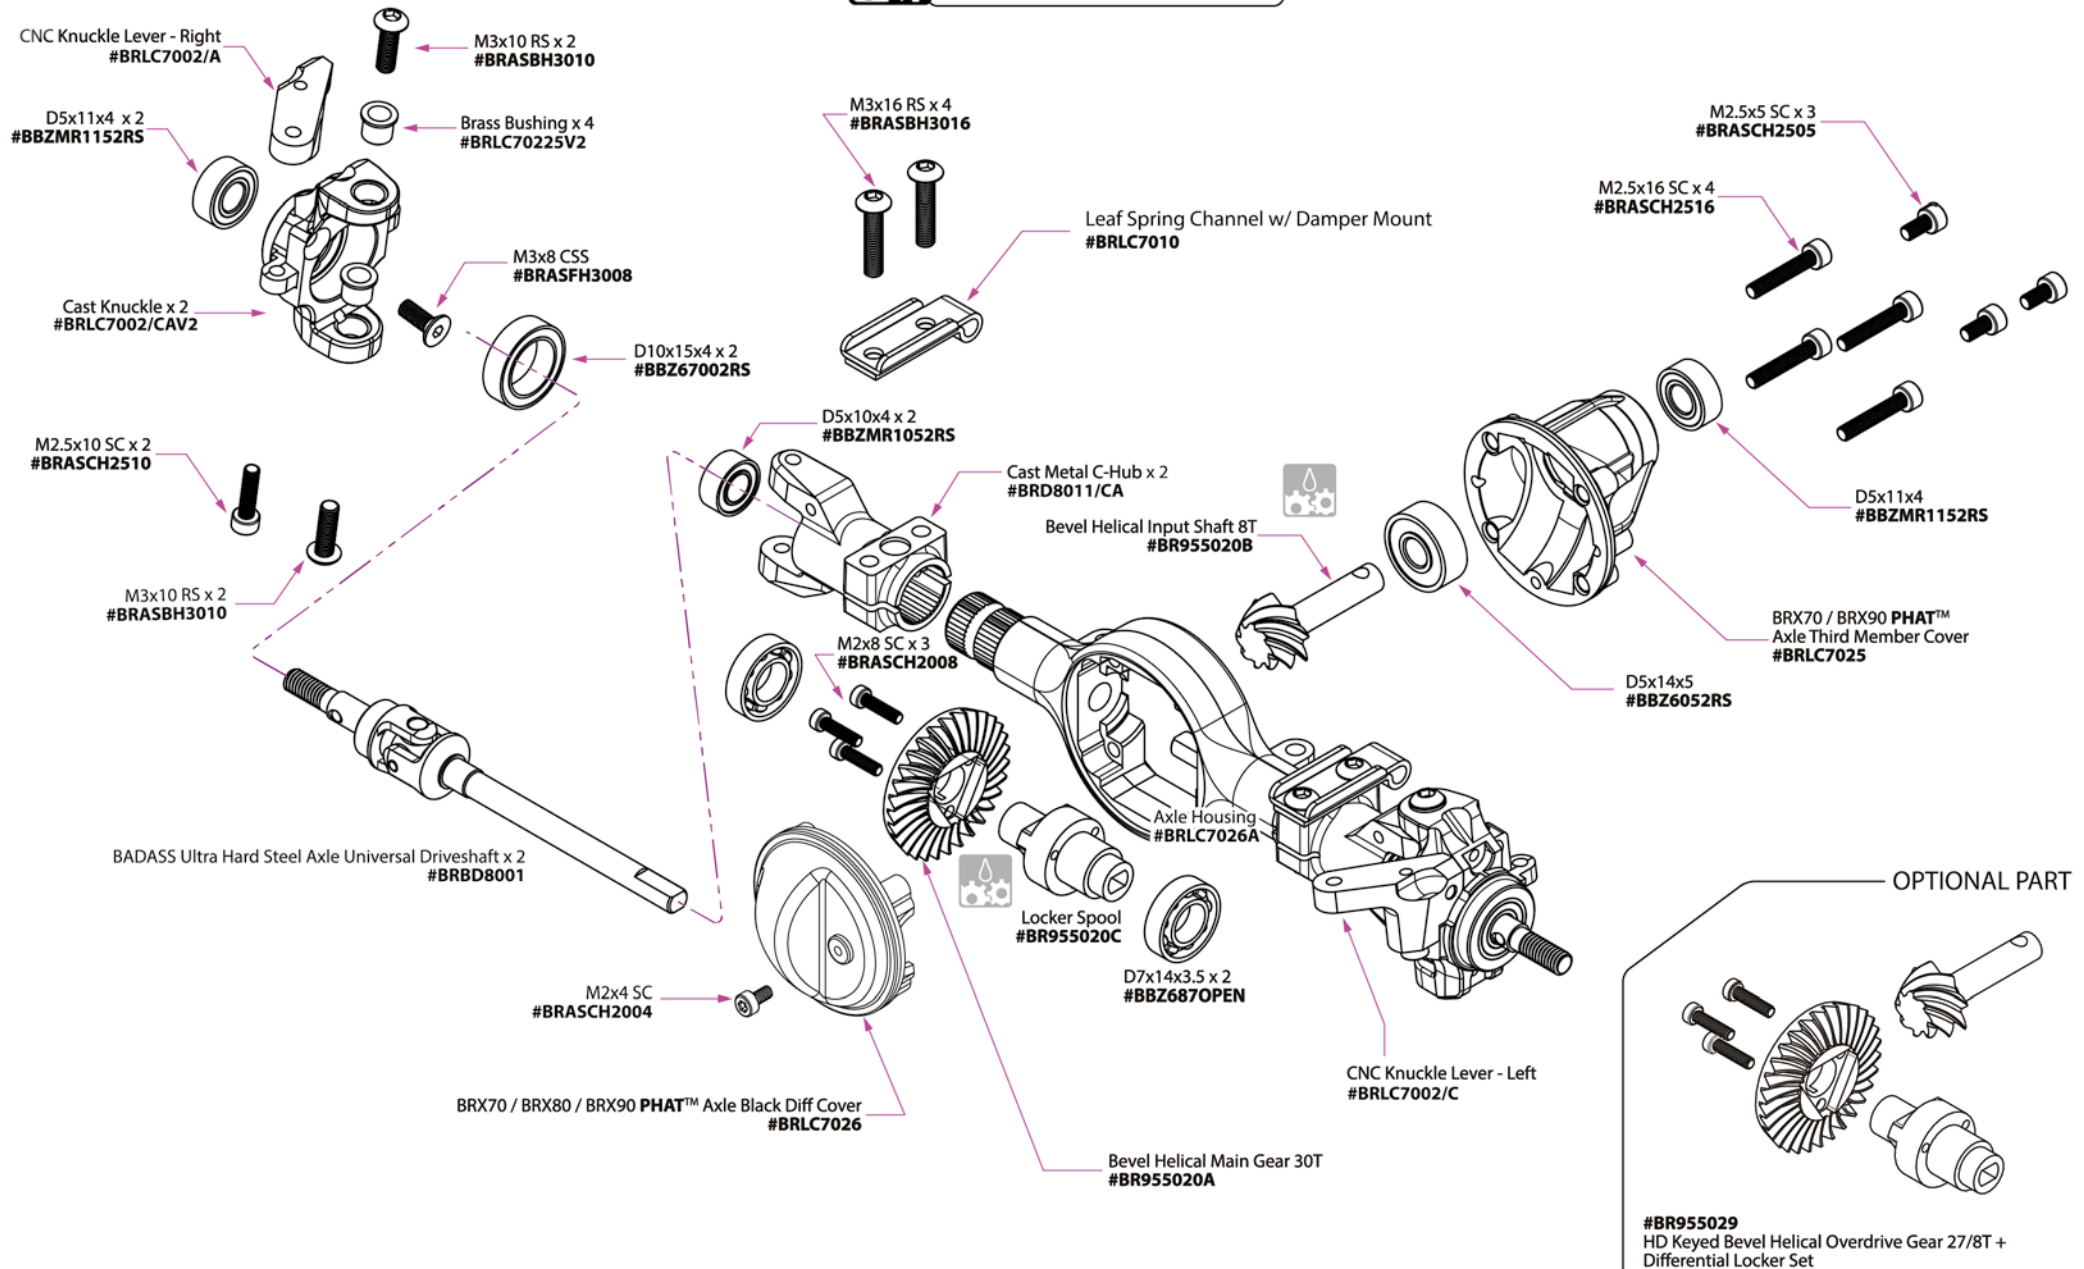

PRE-ASSEMBLED REAR AXLE



Apply a generous amount of Black Grease on all movable contact surfaces including gears, spacers, shafts and bearings.

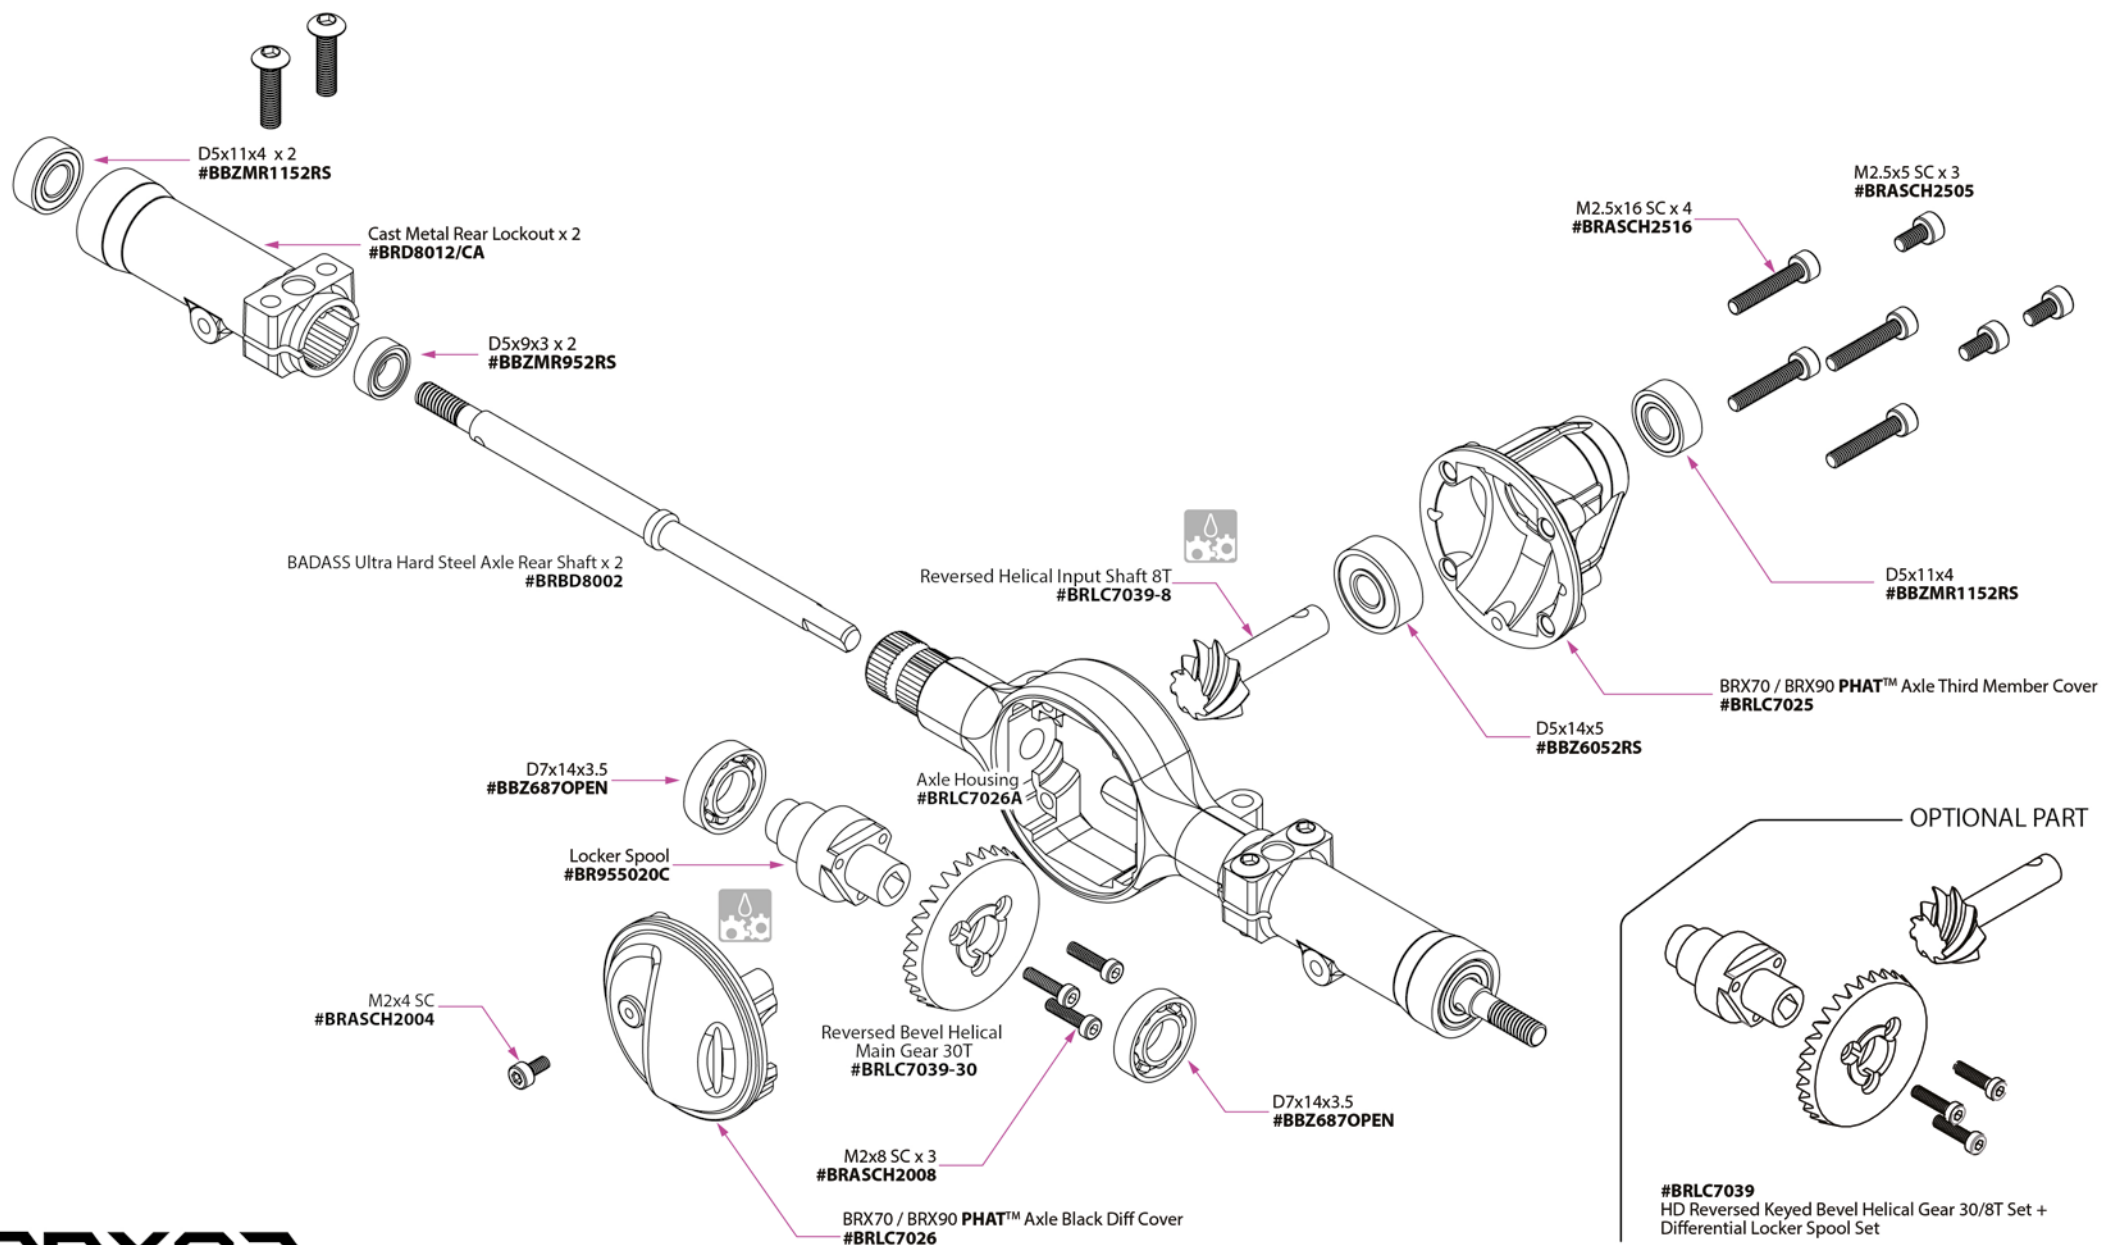

BRX02

PARTS LIST

Part #	Description	Part #	Description
BBZ6052RS	5x14x5mm High Performance Rubber Sealed Bearing (1)	BRASSPD471/N	D4x7x1 Nylon Spacer (5)
BBZ67002RS	10x15x4mm High Performance Rubber Sealed Bearing (1)	BRASSPD4705	Spacer D4x7x0.5 (5)
BBZ687OPEN	7x14x3.5mm High Performance Open Ball Bearing (1)	BRASSPD5801	Spacer D5x8x0.1 (10)
BBZMR1052RS	5x10x4mm High Performance Rubber Sealed Bearing (1)	BRASSPD5805	Spacer D5x8x0.5 (10)
BBZMR1152RS	5x11x4mm High Performance Rubber Sealed Bearing (1)	BRASSPD5730	Spacer D5x7x3 (5)
BBZMR1172RS	7x11x3mm High Performance Rubber Sealed Bearing (1)	BRASSPRING05510	Ø5mm Spring (4)
BBZMR952RS	5x9x3mm High Performance Rubber Sealed Bearing (1)	BRASST3003	M3x3 Set Screw (10)
BR955014BK	Aluminum Short Low Profile Servo Horn 25T Black	BRASST3004	M3x4 SS Set Screw (10)
BR955020	Heavy Duty Keyed Bevel Helical Gear 30/8T + Differential Locker Spool Set	BRASST3022/DS	M3/2.2x11 Set Screw (10)
BR955020A	Heavy Duty Bevel Helical Main Gear 30T	BRASST3024/DS	M3/2.4x11 Set Screw (10)
BR955020B	Heavy Duty Bevel Helical Input Shaft 8T	BRASST4016	M4x16 Set Screw (10)
BR955020C	Diff Locker Spool for HD Helical Bevel Gear	BRBD8001	Ultra Hard Steel Axle Universal Driveshaft (2)
BR955029	Heavy Duty Keyed Bevel Helical Overdrive Gear 27/8T + Differential Locker Set	BRBD8002	Ultra Hard Steel Axle Rear Shaft (2)
BRASBH2504	M2.5x4 RS Round Head Screw (10)	BRD8011/CA	Cast Metal C-Hub (2)
BRASBH2506	M2.5x6 RS Round Head Screw (10)	BRD8012/CA	Cast Metal Rear Lockout (2)
BRASBH2514	M2.5x14 RS Round Head Screw (10)	BRD8022A	Stainless Steel Tie Rod For BRX80 axle
BRASBH3006	M3x6 RS Round Head Screw (10)	BRGRS01	BADASS™ Siliking Grease 5g
BRASBH3008	M3x8 RS Round Head Screw (10)	BRGRS08	BADASS™ Black Graphite Grease 5g
BRASBH3010	M3x10 RS Round Head Screw (10)	BRGRS09-5GB	BADASS™ Shock Slime Grease 5g
BRASBH3012	M3x12 RS Round Head Screw (10)	BRGRS10274-10	BADASS™ Silicone Grease 10g
BRASBH3014	M3x14 RS Round Head Screw (10)	BRGRS10274-20	BADASS™ Silicone Grease 20g
BRASBH3016	M3x16 RS Round Head Screw (10)	BRGRS1055-10	BADASS™ Black Graphite Grease 10g
BRASBH3022	M3x22 RS Round Head Screw (10)	BRGRS1055-20	BADASS™ Black Graphite Grease 20g
BRASBH3024	M3x24 RS Round Head Screw (10)	BRGRS242	242 Blue Thread Lock 10g
BRASCH2004	M2x4 SC Socket Cap Screw (10)	BRLC7002/A	Aluminum Knuckle Lever (High Clearance) - Right
BRASCH2008	M2x8 SC Socket Cap Screw (10)	BRLC7002/C	Aluminum Knuckle Lever (High Clearance) - Left
BRASCH2505	M2.5x5 SC Socket Cap Screw (10)	BRLC7002/CA	Cast Metal Knuckle (2)
BRASCH2506	M2.5x6 SC Socket Cap Screw (10)	BRLC7010	Steel Leaf Spring Channel w/ Shock Mount for BRX70 / BRX80 / BRX90 Axle (2)
BRASCH2508	M2.5x8 SC Socket Cap Screw (10)	BRLC7022A	Brass Bushing for BRX70 / BRX80 / BRX90 Axle Knuckle (4)
BRASCH2510	M2.5x10 SC Socket Cap Screw (10)	BRLC7025	BRX70 / BRX80 / BRX90 PHAT™ Axle Third Member Cover
BRASCH2516	M2.5x16 SC Socket Cap Screw (10)	BRLC7026	BRX70 / BRX80 / BRX90 PHAT™ Axle Black Diff Cover
BRASCH3008	M3x8 SC Socket Cap Screw (10)	BRLC7026A	BRX70 / BRX80 / BRX90 PHAT™ Axle Housing
BRASEC30	E-Clip 3mm (10)	BRLC7027	Aluminum Gearbox Adapter w/ Motor Mount
BRASFH2005	M2x5 CSS Counter Sunk Screw (10)	BRLC7029-12T	Heavy Duty 12T Spur Gear
BRASFH2508	M2.5x8 CSS Counter Sunk Screw (10)	BRLC7029-15T	Heavy Duty 15T Spur Gear
BRASFH3006	M3x6 CSS Counter Sunk Screw (10)	BRLC7029-20T	Heavy Duty 20T Spur Gear
BRASFH3008	M3x8 CSS Counter Sunk Screw (10)	BRLC7029-24T	Heavy Duty 24T Spur Gear
BRASFH3010	M3x10 CSS Counter Sunk Screw (10)	BRLC7029-32T	Heavy Duty 32T Spur Gear
BRASHS3005	M3x5 Hex Cap Screw (2)	BRLC7030	Spur Gear Mount
BRASNUTM25	Nut M2.5 (5)	BRLC7031	Internal Spur Gear 28T
BRASNUTM3	Lock Nut M3 Nyloc (5)	BRLC7032	Steel Motor Spacer
BRASNUTM4	Lock Nut M4 Nyloc (5)	BRLC7033	BRX Universal Receiver Box Set w/ Silicone Seals
BRASPIN210	D2x10 Pin (10)	BRLC7033A	Silicone Seal & Port for BRX Receive Box
BRASSP473	D4x7x3 Aluminum Spacer (5)	BRLC7039	30/8T Reverse HD Steel Triangular Keyed Bevel Helical Cut Diff Gear w/ Spool Set
		BRLC7039-8	HD Steel Reversed Helical Input Shaft 8T

PARTS LIST

Part #	Description
BRLC7039-30	HD Steel Reversed Bevel Helical Main Gear 30T
BRLC7041	M3x6x3 Tapper Spacer (4)
BRLC7044	Ultra Hard Steel Gearbox Shaft Set (3pcs)
BRLC7044A	Ultra Hard Steel Gear Catcher
BRLC7044B	Input shaft
BRLC7044C-EX	Extended Gearbox Output Shaft
BRLC7044E	2-Speed Gear Unit
BRLC7045A	Brass Shifter Cap & Bushing
BRLC7045B	Ultra Hard Steel Shifter
BRLC7045C	Stainless Steel Shift Rod
BRLC7049	Mini Servo Horn
BRLC7050	Fine Tunable Link
BRLC7060	2-Speed Gear Circle Clip (5)
BRLC7064A	Leaf Spring Set (2)
BRLC7064C	Stainless Steel M4X40 Anti-wrap Bar (2)
BRLC7064D	Rear Shackle (2)
BRLC7064E	M3x14 Bolt
BRLC7064F	Rear Leaf Retainer (Outside & inside) (2)
BRLC7095	Extension Cable (2)
BRLC7207-P	Guiding Shaft (1)
BRLC7208	Rear Output Shaft For OD & SWD Transfer Case
BRLC70201-B	Front Output Shaft For OD & SWD Transfer Case
BRLC70201-GEAR	Over-drive Gear Set
BRLC70210	Gear Set 20Tx1 29Tx2 For SWD Transfer Case
BRPG3212-3	32P 12T / 3.175mm Steel Pinion Gear
BRPROB-17	ProBuild™ 3.0mm Socket Driver Thumb Tool
BRQ90351	D2 Ball & Rod End
BRRM19006	Rock Monster RED Silicone Tire Insert 3.5"x0.84" (90x21mm)
BRSH0080	KUDU ™ 80mm Scale Shock Absorber (2)
BRSHJR	Pivot Ball Retainer (4)
BRSD06-15	D6x1.5 O-Ring (10)
BRT10037	Cable Wiring Retainer
BRT10028	Tool Kit
BRT10053	Pivot Ball Tool
BRTR19006	1.9" Mileage Classic ™ Scale Crawler Tire GEKKO Compound 3.82"x1.0" (97x26mm) w/ Single Stage Open Cell Foam (2)
BRTR39005	Single Stage Open Cell Foam Insert for 1.9" Mileage Classic ™ Crawler Tire 3.82"x0.94" (97x24mm) (2)
BRW750306A	KUDU ™ HD Rust-Resistant Rod Ends M4 Nylon (Straight) 18.5mm w/ SST Pivot Ball (5.8x3x7.4mm) (10)
BRW750308C	KUDU ™ HD Rust-Resistant M4 Nylon Rod Ends 19.5mm (Sideways) w/ SST Pivot Ball (5.8x3x7.4mm) (10)
BRW750309B	KUDU ™ HD Rust-Resistant Rod Ends M4 Nylon (Straight) 21.8mm w/ SST Pivot Ball (5.8x3x7.4mm) (10)

Part #	Description
BRW750310	Shock End Pivot Ball (14)
BRW780920C	Wheel Center Piece (Narrow)
BRW780944	SLR™ 1.9 Classic Steel Wheel w/cap and Scale Hardware (4)
BRW780944A	SLR™ Wheel Face Plate (2)
BRW780944B	SLR™ Wheel Barrel (2)
BRW780944C	Nylon Wheel Cap (4)
BRW780944D	Wheel Cap Installation Tool (1)
BRW780944E	M2x8 Scale Wheel Bolt (5)
BRX020012	Rear Crossmember
BRX020014	Mid Crossmember
BRX020016	Front Crossmember
BRX020018F	Front shock Mount (Left & Right)
BRX020018R	Rear Shock Mount (Left & Right)
BRX020020LF	Center Skid Plate
BRX020027	Front Anti-wrap Bar (2)
BRX020029	BCF2 ™ Gearbox Housing (A & B)
BRX020029A	Gear Box Bearing Holder
BRX020030	Brass Washer (4)
BRX020034	Body Latch Pin (4)
BRX020035	Slider Spacer (4)
BRX020039	Body Post (4)
BRX020055	Cast C-Hub (2)
BRX020056	Cast Lock Out (2)
BRX020064A	Front Shackle (2)
BRX020064B	Front Leaf Retainer (Left & Right)
BRX020106	Steel Front ESC Mount Plate
BRX020108	Steering Servo Mount (Left & Right)
BRX020109F	Series 3 Aluminum Front Bumper
BRX020109R	Series 3 Aluminum Rear Bumper
BRX020110	Gearbox Side Mount (Left & Right)
BRX020111	B2X ™ Transfer Case Housing
BRX020112	Quick Release Body Mount for Series 3 (Left & Right)
BRX020113	S3 Rear Bumperette (2)
BRX020115F	BRX80 Complete Front PHAT ™ Axle LEAF Ver.
BRX020115R	BRX80 Complete Rear PHAT ™ Axle LEAF Ver.
BRX0290011	Aluminum Chassis Rail for S3 88 (Left & Right)
BRX0290012	Mini Servo Mount
BRX0290016	Recevier Box Post D3x6x9
BRX0290107F	Nylon Center Front Skid Slider
BRX0290107R	Nylon Center Rear Skid Slider
BRX029019	Rear Bumper Mount (Left & Right)
BRX029021	Battery Tray
BRX029043	HD CVD Center Drive Shaft (Front & Rear)
BRX029051	Shift Rod
BRXT502PIN	Scale M2x8 Wheel Bolt (5)
JX/PDI-HV1151MG	JX Waterproof High Voltage Mini Servo

PARTS LIST (Optional Accessories)

Part #	Description	Part #	Description
Chassis Parts		Tires & Inserts	
BRX02382	Military Bumper for BRX02 Aluminum Raw Finish	BRTR19015	1.9" Expedition Classic Scale Crawler Tire Gekko Compound 3.86"x1.0" (2)
BRX02382BK	Military Bumper for BRX02 Aluminum Black	BRTR19014	1.9" Landy Classic Scale Crawler Tire Gekko Compound 3.82"x1.0" (2)
BRX02342	KUDU™ Aluminum Rock Slider (2) for Land Rover® Series 88	BRTR19013	1.9" Trophy Classic Scale Crawler Tire Gekko Compound 3.82"x1.0" (2)
BRX02338	Aluminum Door Hinge for Series Land Rover Bodies (2)	BRTR19005	1.9" SP Road Tracker Crawler Tire Gekko Compound 3.82"x0.94" (2)
BRX020068	KUDU™ Front Skidplate with D-Ring Shackles for BRX02 Leaf Spring Version	BRTR19397	1.9" MAXGRAPPLER Scale RC Tire Gekko Compound 3.82"x1.26" Open Cell Foams (2)
BRX020067	KUDU™ Universal Front Skidplate for BRX02	BRRM19006	Rock Monster RED Silicone Tire Insert 3.5"x0.84" (90x21mm)
BRX020068A	KUDU™ Front D-Ring Shackles & Retainer for BRX02 Leaf Spring Version		
BRX020011	6mm Carbon Fiber Chassis Left & Right	Winch & Winch Accessories	
BRX020079	Carbon Fiber ESC Mount Plate	BR-40SW-3S	3S Muscle Winch™ High Voltage Direct Power 40KG Waterproof Servo Winch w/ Free Spool Unit
BRX020080	KUDU™ Rear Metal Step Bumper w/ Diamond Plate	BR-36SW	Muscle Winch™ High Torque 36KG Waterproof Servo Winch w/ Free Spool Unit
BRLC7089	Brass Front Knuckle Base Weights for BRX70/BRX80/BRX90 PHAT™ & AR44 Axle (2)	BRD90110036	Muscle Winch™ Mount Lead Kit for BRX02 & BRX02 109
BRD9024	Brass Rear Knuckle Base Weights for BRX80 / BRX90 PHAT™ Axle (2)		
BRLC7092	Brass Small Weight Blocks 4g for BRX70/BRX80/BRX90 PHAT™ Axle Knuckle Weight Base (6)	LED	
BRX02327	Nylon Front Inner Fender for BRX02 88 & 109	BRTL001	KUDU™ LED Light Module System for BRX02 Series Land Rover
BRX02336	Nylon Rear Inner Fender for BRX02 109	BRTL003	KUDU™ LED Rock Light Set for BRX02 Series Land Rover
BRX02337	Nylon Side Skid Plate for BRX02 88	BRX02339	KUDU™ LED Dash Light Set for Land Rover Series III
		BRX02383	KUDU™ LED Dash Light Set for Land Rover Series II
Drivetrain		Pinion Gear	
BRLC70201-GEAR	Overdrive HD Gear Set for B2X/DIG/SWD/OD Transfer Cases (33T, 25T, 16T) for BRX Chassis	BRPG3209-3	32P 9T / 3.175mm Steel Pinion Gear (1)
BRLC70201-OD	Overdrive Transfer Case Kit for BRX01 & BRX02	BRPG3210-3	32P 10T / 3.175mm Steel Pinion Gear (1)
BRX02335	SWD (Selective RWD/4WD) Transfer Case Set for BRX02 88	BRPG3211-3	32P 11T / 3.175mm Steel Pinion Gear (1)
BRX02334	DIG Transfer Case Kit for BRX02 88	BRPG3213-3	32P 13T / 3.175mm Steel Pinion Gear (1)
BR955040	Heavy Duty Keyed Bevel Helical Overdrive Gear 24/8T + Differential Locker Set	BRPG3214-3	32P 14T / 3.175mm Steel Pinion Gear (1)
BR955029	Heavy Duty Keyed Bevel Helical Overdrive Gear 27/8T + Differential Locker Set	BRPG32COMBO1-3	32P Steel Pinion Gear Combo 9T-12T (4)
BRX02337	Nylon Side Skid Plate for BRX02 88	BRPG32COMBO2-3	32P Steel Pinion Gear Combo 13T-16T (4)
BRLC7086F	Front Skid Plate for BRX70/BRX80/BRX90 PHAT™ Axle		
BRLC7086R	Rear Skid Plate for BRX70/BRX80/BRX90 PHAT™ Axle	Shock Oil	
		BRSHK010	BADASS™ Silicone Shock Oil 10wt 60ml
		BRSHK015	BADASS™ Silicone Shock Oil 15wt 60ml
		BRSHK020	BADASS™ Silicone Shock Oil 20wt 60ml
		BRSHK025	BADASS™ Silicone Shock Oil 25wt 60ml
		BRSHK030	BADASS™ Silicone Shock Oil 30wt 60ml
		BRSHK035	BADASS™ Silicone Shock Oil 35wt 60ml
		BRSHK040	BADASS™ Silicone Shock Oil 40wt 60ml
		BRSHK045	BADASS™ Silicone Shock Oil 45wt 60ml
		BRSHK050	BADASS™ Silicone Shock Oil 50wt 60ml
		BRSHK055	BADASS™ Silicone Shock Oil 55wt 60ml
		BRSHK060	BADASS™ Silicone Shock Oil 60wt 60ml
		BRSHK065	BADASS™ Silicone Shock Oil 65wt 60ml
		BRSHK070	BADASS™ Silicone Shock Oil 70wt 60ml
		BRSHK075	BADASS™ Silicone Shock Oil 75wt 60ml
		BRSHK080	BADASS™ Silicone Shock Oil 80wt 60ml
Wheel Accessories			
BRPROB-21NWBK	ProBuild™ 1.9" Low-Profile Brass Narrow Center Ring 16.5mm (1)		
BRXT500V2	ProBuild™ XT500 V2 5-Lug Aluminum Wheel Pin Hub Adapters 0MM Offset V2 (2)		
BRXT504V2	ProBuild™ XT504 V2 5-Lug Aluminum 12mm Wheel Hub Adapters 4MM Offset V2 (2)		
BRXT508V2	ProBuild™ XT508 V2 5-Lug Aluminum 12mm Wheel Hub Adapters 8MM Offset V2 (2)		
BRXT512	ProBuild™ XT512 5-Lug Aluminum 12mm Wheel Hub Adapters 12MM Offset V2 (2)		
BRXT516V2	ProBuild™ XT516 V2 5-Lug Aluminum 16mm Wheel Hub Adapters 16MM Offset V2 (2)		

If you have questions, call Boom Racing at:

1-209-676-8880 (USA) or email Boom Racing at sales@boomracing.com

WWW.BOOMRACING.COM

Brian Parker - Recon G6

When "Enjoy Being a Badass" is a slogan, you better bring it. Boom Racing does just that; they are the pinnacle of R/C scale performance. The BRX01 shattered the perception that scale R/C meant sacrificing performance. The platform didn't change the game; it created the scale performance game and left other manufacturers watching from the park bench outside the stadium of awesomeness. The BRX02 Land Rover Series III continues this "badass" reputation and drives leaf-sprung performance and tunability into its own category. Not only in the quality of the product, and I mean from unboxing to engineering to the instruction manual to driving performance to creativity in owning an R/C vehicle. This level of thinking tells me one essential thing about Boom Racing as a company: Jason Tsang & his colleagues do not see people as customers; Boom Racing is building a community of scale performance-minded individuals.

Dariusz Cybula - RC/DC Scale RC

When building R/C models, I aim to make them good enough to look and function like a real car. It is not easy and sometimes seems unattainable. Typically, the models offered on the market did not provide such an option and required many changes, combinations, and searches. Now, this Series III has everything I want from an R/C model. A realistic and fully functional design that we can enjoy during construction. We no longer have to focus on modifications and wonder what to change to make it like the original. I appreciate this model's details and can always add something from myself. After all, this is what our hobby is all about.

Adam Sajdak - Maxee RC

Let me start by saying that driving the new Series III is pure pleasure! I was afraid of this model in the beginning because it is built on leaf springs. I was surprised when I saw it has axle supports with full configuration of the hardness of the leaf springs. The suspension works great, and the ride is very realistic. I'm very happy that we get two versions in one go; the standard Series III pickup with hard top, and the possibility of building a Safari version with a small door and without the roof. Plus, the windshield folding down on the hood is original. Such flavors in the kit are really first league. The model itself is very well made, with attention to details. I am delighted with this model!

Shawn Roche

This truck has it all - a beautifully done iconic body, a leaf spring chassis that actually performs, and the tried and true BRX drivetrain. With this kit Boom Racing has set the bar for excellence higher than I thought possible.

Jeremy Kilburn

Having built hundreds of R/C kits over the years, the BRX02 109 was a fantastic experience and a top tier kit. It was a true pleasure to assemble a well-engineered and well thought out kit. There was never a moment I wished for more, all the metal and machined parts will keep this vehicle dependable and durable for many years to come.

BOOMRACING®
Your Radio Control Car Specialist

BRX02

BRX02 88 1/10 4WD R/C CHASSIS KIT FOR SERIES LAND ROVER

WWW.ENJOYBEINGABADASS.COM