

## Lamp Control Manual

### 1. Power Mode:

- Directly connect 4PIN label from Lamp Control Board to Remote (use the Remote Power 6-8.4V)
- Lamp Control Board supply extend Battery(2-3S/6-12.6V).Use the extend Battery must move red line with 4PIN cable.

### 2. Function:

- When Power on,Daytime running Lamp normally on(without control),Cornering Lamp will auto on with corner turn.  
Stop Lamp on when Stop.
- Forward or backup,Stop Lamp off.Backup Lamp on when backup.If Backup Lamp on when forward,push "CH2 Reverse switch" button on Lamp Control Board 1 time.
- Move Wheel turn right to end and release to middle quickly 2 times,wait 3 second(No other control),Head Lamp will on.  
Operation again to off.
- Move Wheel turn left to end and release to middle quickly 2 times,wait 3 second(No other control),Emergency Lamp will on.  
Operation again to off.
- Move Forward or Back Control button to end and release to middle quickly 3 times,wait 3 second(No other control),Fog Lamp will on,Operation again to off.

### 3. Lamp Cable

