

用ABS胶水或3M强力双面胶粘贴连接件于此位置
Use ABS glue to stick

用塑料垫片调节车壳高度
Use ABS gasket to adjust the height of the body.

车壳固定于SCX10 系列底盘方法




Fire

竞技轮眉安装方法:

- 1: 用双面胶把轮眉固定在轮框处。
- 2: 用钳子夹住针, 在火上烧红后, 对准轮眉的孔位扎孔, 孔穿通车壳。(铁针附赠在轮眉包装内)
- 3: 用螺丝螺帽把轮眉固定在车壳上。

The installation method:

1. Use double sided tape to fix a fender to a fender trim.
2. Heat a needle until red hot, clamp the needle with a plier, pierce a hole in the hole sites on the fender and through the car body. (needle is in the fender package)
3. Fix the fender to the car body with screws and nuts.

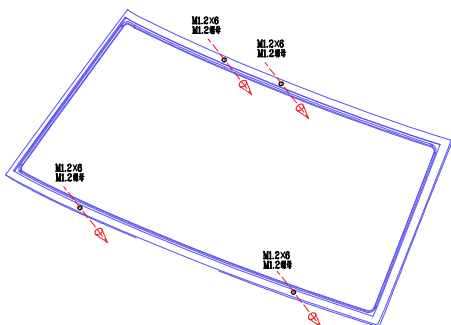

前挡风玻璃可以用针同上述方法烧红后穿孔, 固定在车壳上。

Use the same method with needle can fix the front windshield.