


CA10

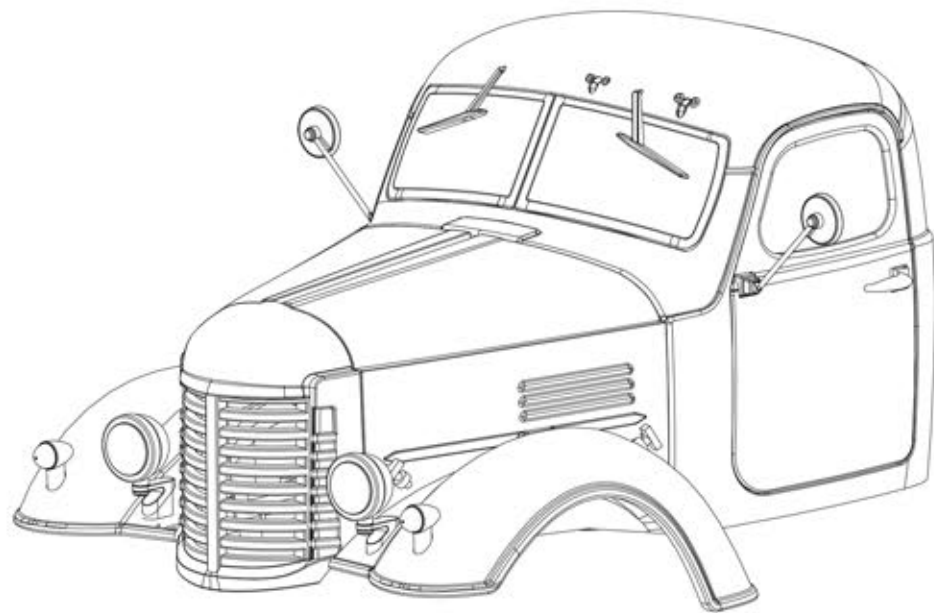

CA10

车壳说明书




推荐工具

RECOMMENDED TOOLS



十字螺丝刀
BOLT DRIVER

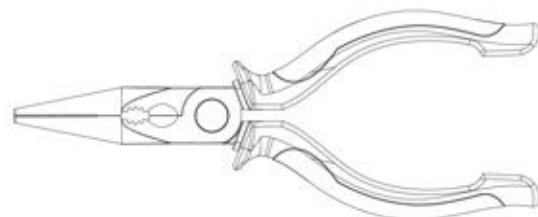

尖嘴钳
LONG NOSE PLIERS

安装提示:

TIPS FOR ASSEMBLY:

使用好质量的螺丝刀, 避免磨损螺丝头


USE GOOD QUALITY HEX DRIVERS TO AVOID STRIPPING SCREW HEADS.

当将金属螺丝拧进金属部件时, 请使用螺纹胶





USE THREAD LOCK WHEN PUTTING METAL SCREWS INTO METAL PARTS.


不要将螺丝拧太紧, 否则将会磨损螺纹

DO NOT OVER TIGHTEN SCREWS OTHERWISE YOU MAY STRIP THE THREAD.

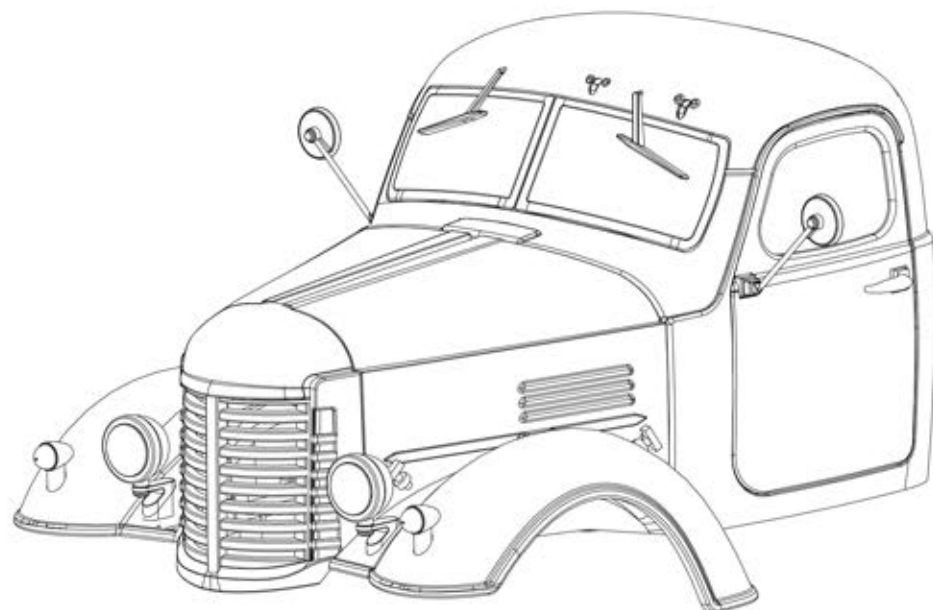




车壳完成

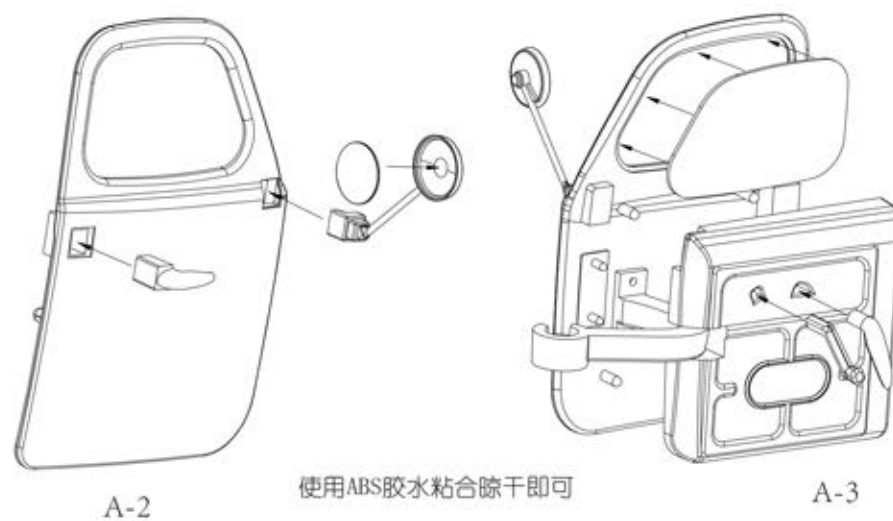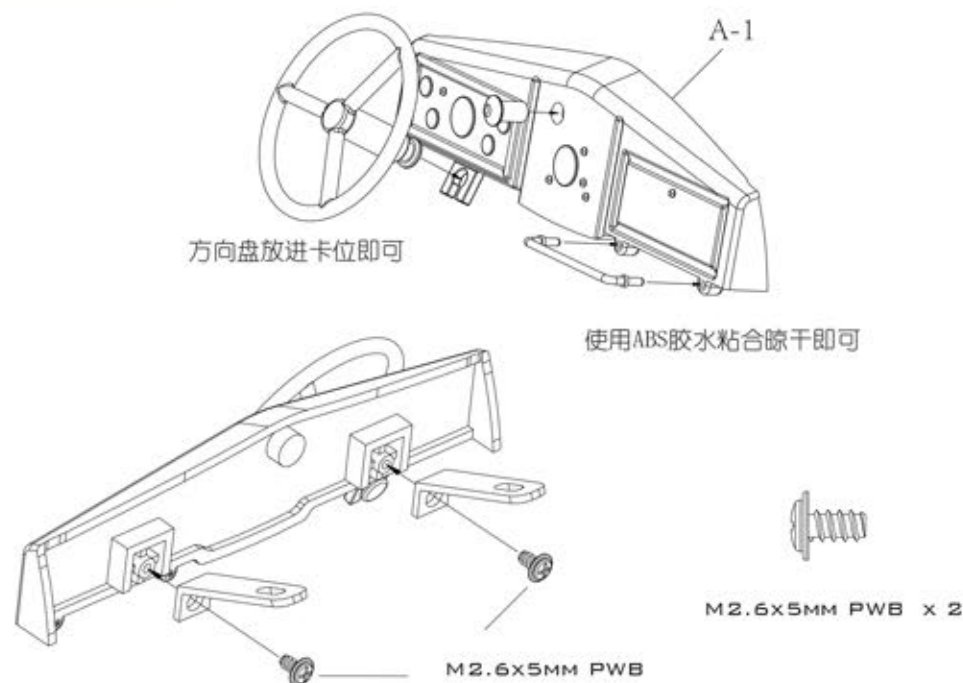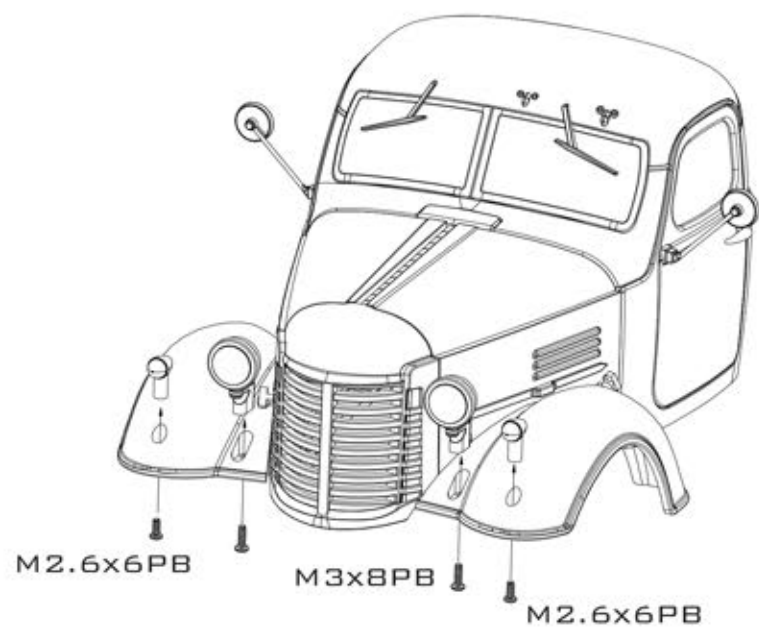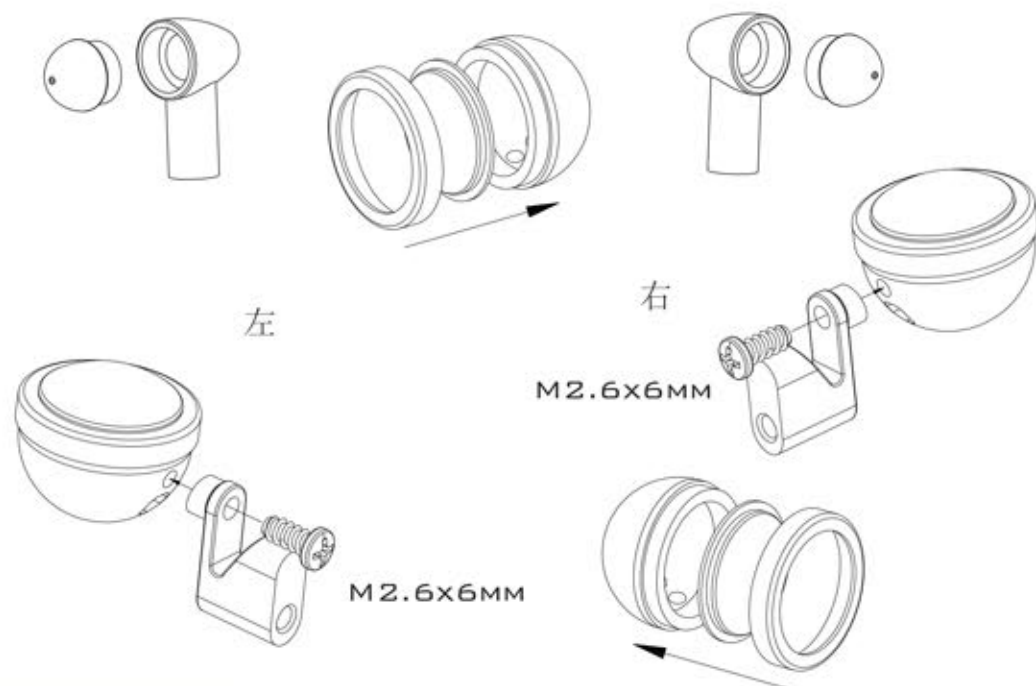

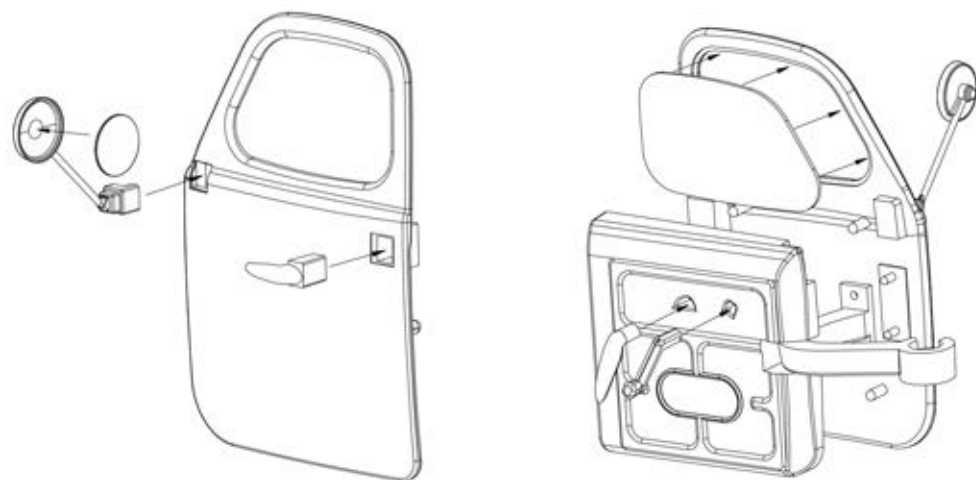


使用ABS胶水粘合晾干即可


M3x8PB

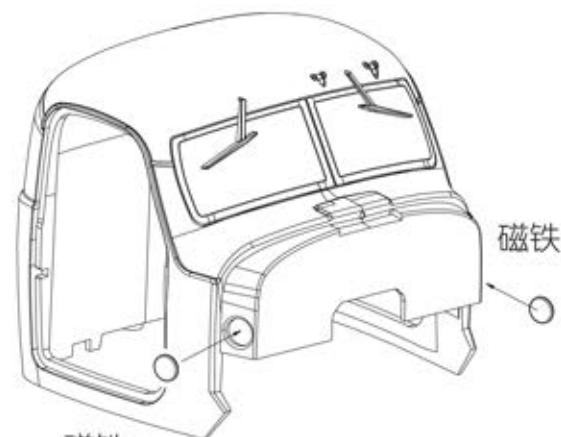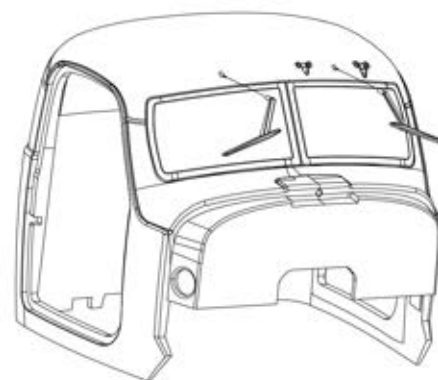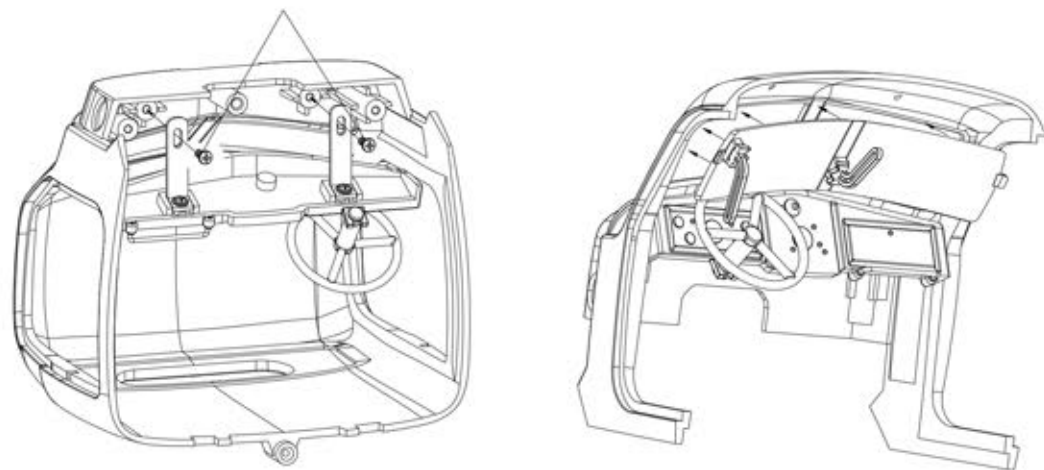


磁铁

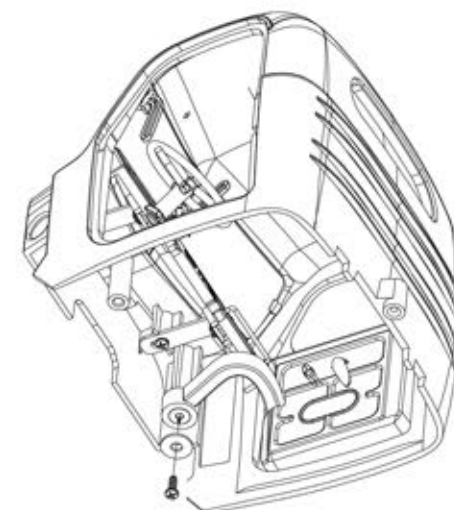


M3x8PB

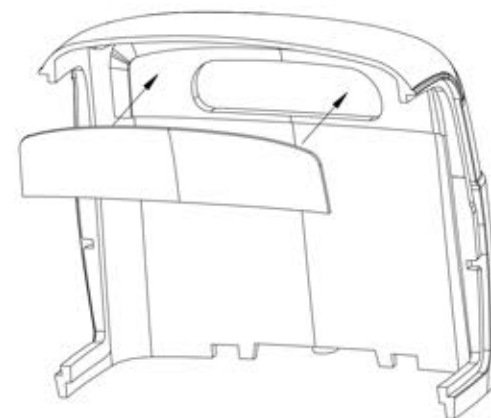


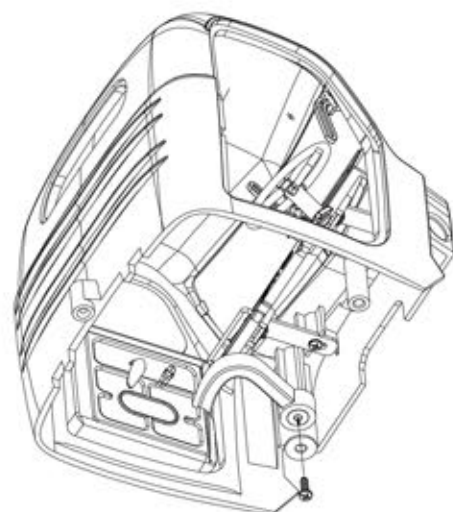


M3x8MM

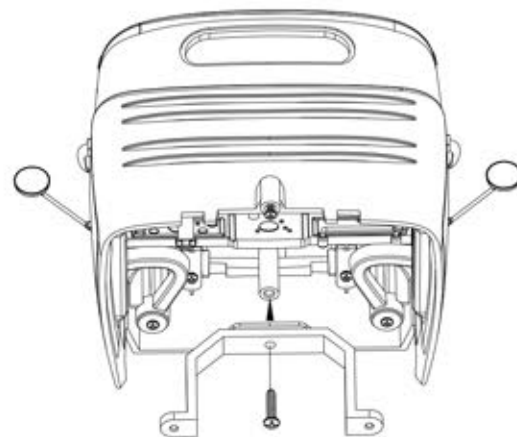

M4x16MM

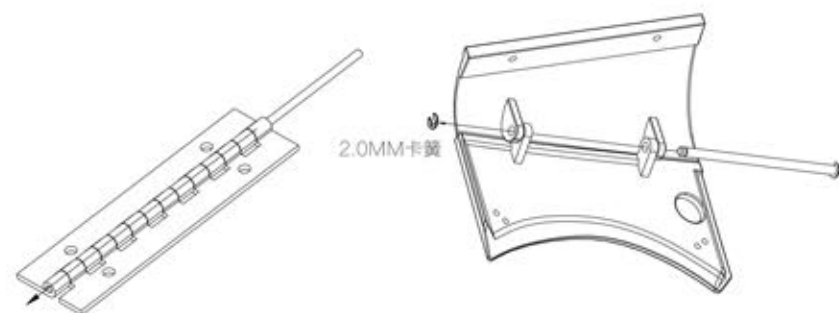


2.0MM卡簧

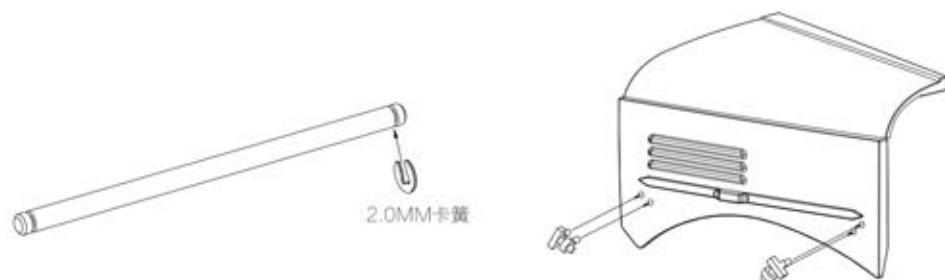


2.0MM卡簧




2.0MM卡簧

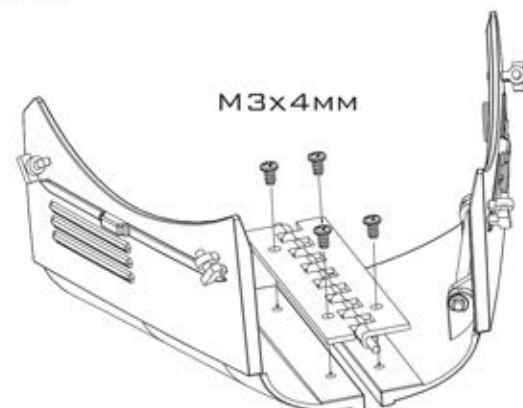

M3x4MM

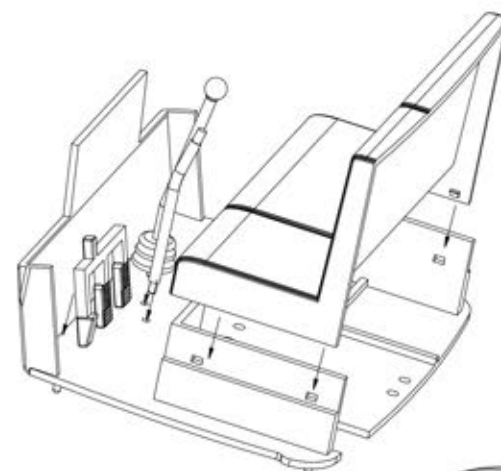


使用ABS胶水粘合晾干即可

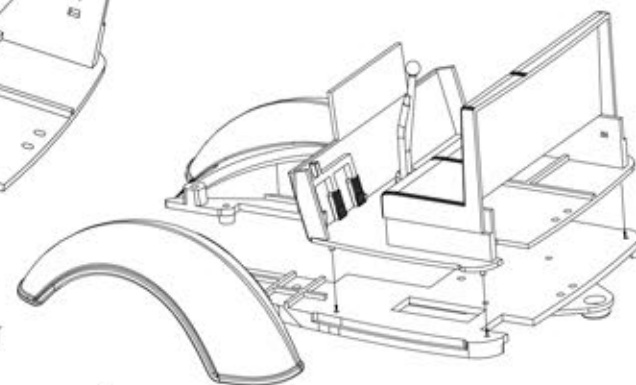






M3x8MM

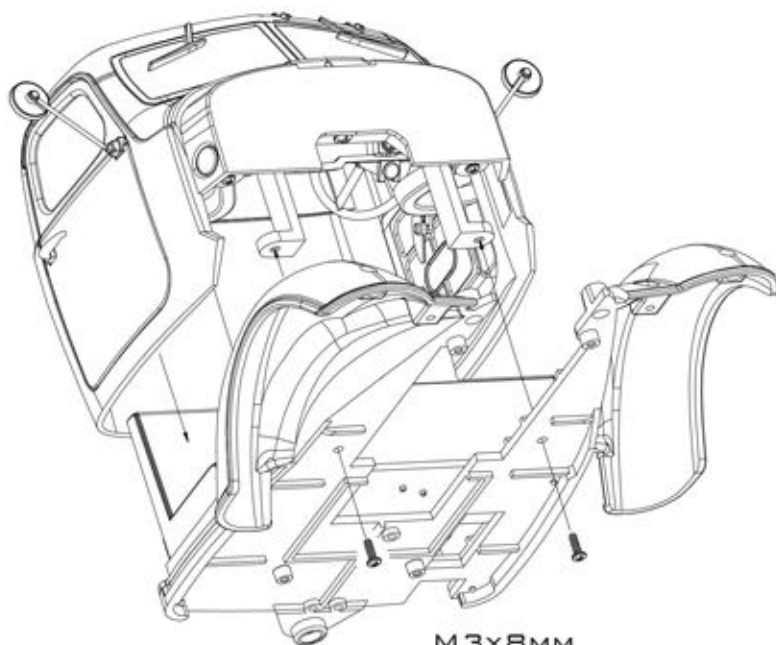


M3x8MM

平头M4x10MM

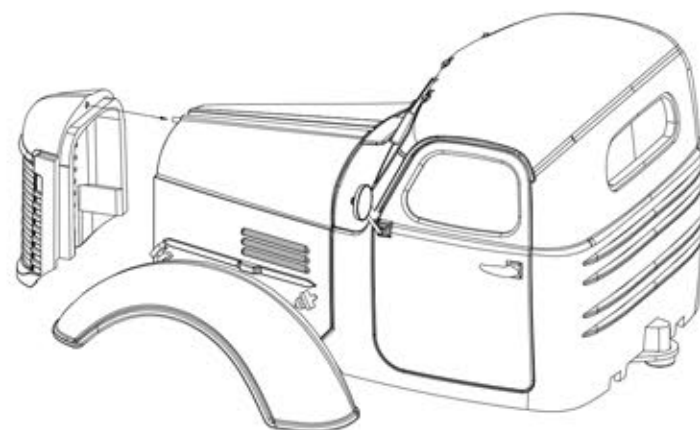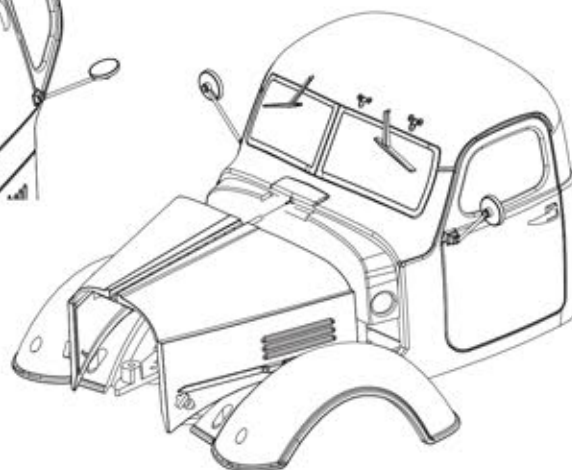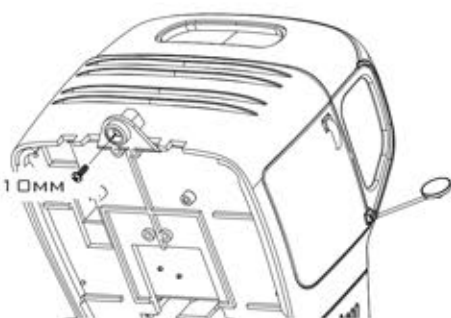

M3x10MM

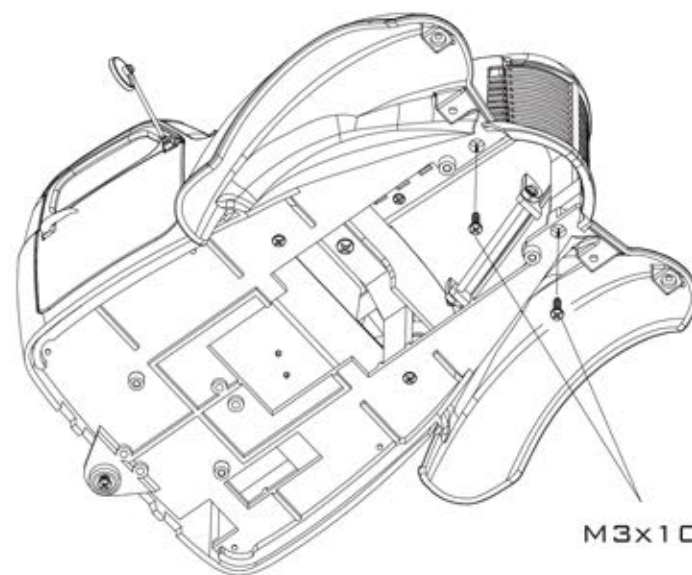

M3x10MM