


PROBUILD™ 1.9" CUSTOMIZABLE BEADLOCK WHEELS EXTRA WIDE

Version 1.1

WHEEL OFFSET WITH HUB (XT604 / XT504)

3mm Faceplate used for reference only

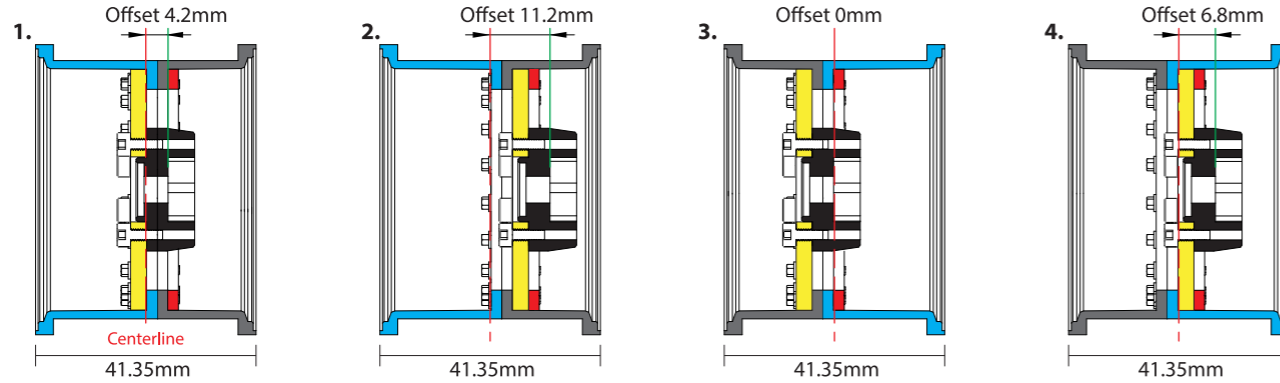

19.5mm Barrel 15mm Barrel Faceplate Steel Lock Ring

The Most Customizable Off-Road Wheels in RC

BUILD LIKE A PRO

The idea behind PROBUILD was to find a way to make a fully customizable and adjustable wheel with multiple setup options. Today, that sounds really smart, but back when we started most people thought we were crazy. That's alright, everything has its time!

EXACTLY THE WAY YOU LIKE

Quality off-road wheels are not always affordable. Most of us save our money to get a nice set. Deciding on the right set of wheels can end up being a scary and expensive learning lesson. Our proprietary customizable design completely removes any fear of getting another set of wheels that are "almost right". We took into consideration all of the desirable wheel features - style, color, offset, material, total width, weight, hub size, hardware styling, etc., and provided the options to adjust the wheel to the way you like.



PROBUILD™
1.9" CUSTOMIZABLE BEADLOCK WHEELS
EXTRA WIDE



WWW.BOOMRACINGRC.COM

Copyright © Boom Racing Ltd.




www.boomracingrc.com

PROBUILD™ 1.9" CUSTOMIZABLE BEADLOCK WHEELS EXTRA WIDE


Instruction Manual

Parts Included:	Qty.
(1) 15mm Barrel	2
(2) 19.5mm Barrel	2
(3) 34.5mm Center Piece	2
(4) Faceplate	2
(5) Steel Lock Ring	2
(6) XT604 V2 Wheel Hub Adapter	2*
(7) XT504 V2 Wheel Hub Adapter	2*
(8) M2x9 Scale Screw	40
(9) M2.5x8 Socket Cap Screw	12
(10) M2x14 Socket Cap Screw	6
(11) M4 Nut - Nyloc	2
(12) 7mm Nut Driver Adapter	1
(13) 2mm Scale Socket Driver	1
(14) M2x8 Socket Cap Screw	40

* Faceplates come in either 5-lug or 6-lug bolt patterns. Depending on the faceplate, XT5 (5-lug) or XT6 (6-lug) alum hubs will be used.

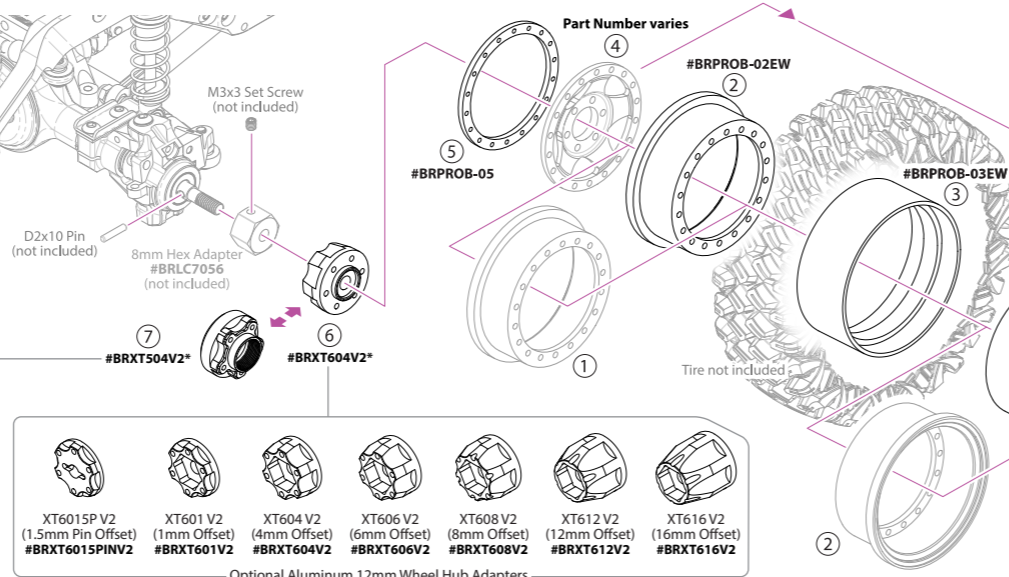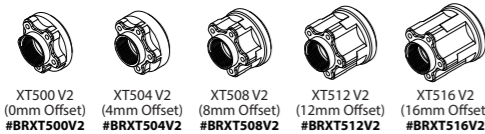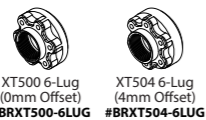

4 SETUPS

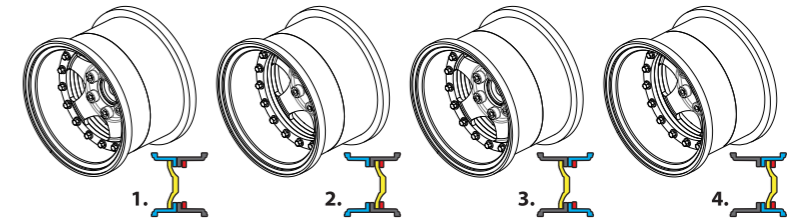

15mm Barrel
19.5mm Barrel
Faceplate
Steel Lock Ring

Note: Use the M2x14 Socket Cap Screws (9) to start the assembly of the wheel. Once the wheel pieces are sandwiched together flush, then start the Scale Screws (7) installation.

WARNING:
ALL OUTER SCREWS. DO NOT USE THREAD LOCK AND DO NOT OVER TIGHTEN.

WWW.BOOMRACINGRC.COM