


# KUDU™ Tool Set (17pcs) + Carrying Bag with 2 Yr Warranty #BRT10062

Difficulty Level: ★★☆☆☆

## INSTALLATION MANUAL

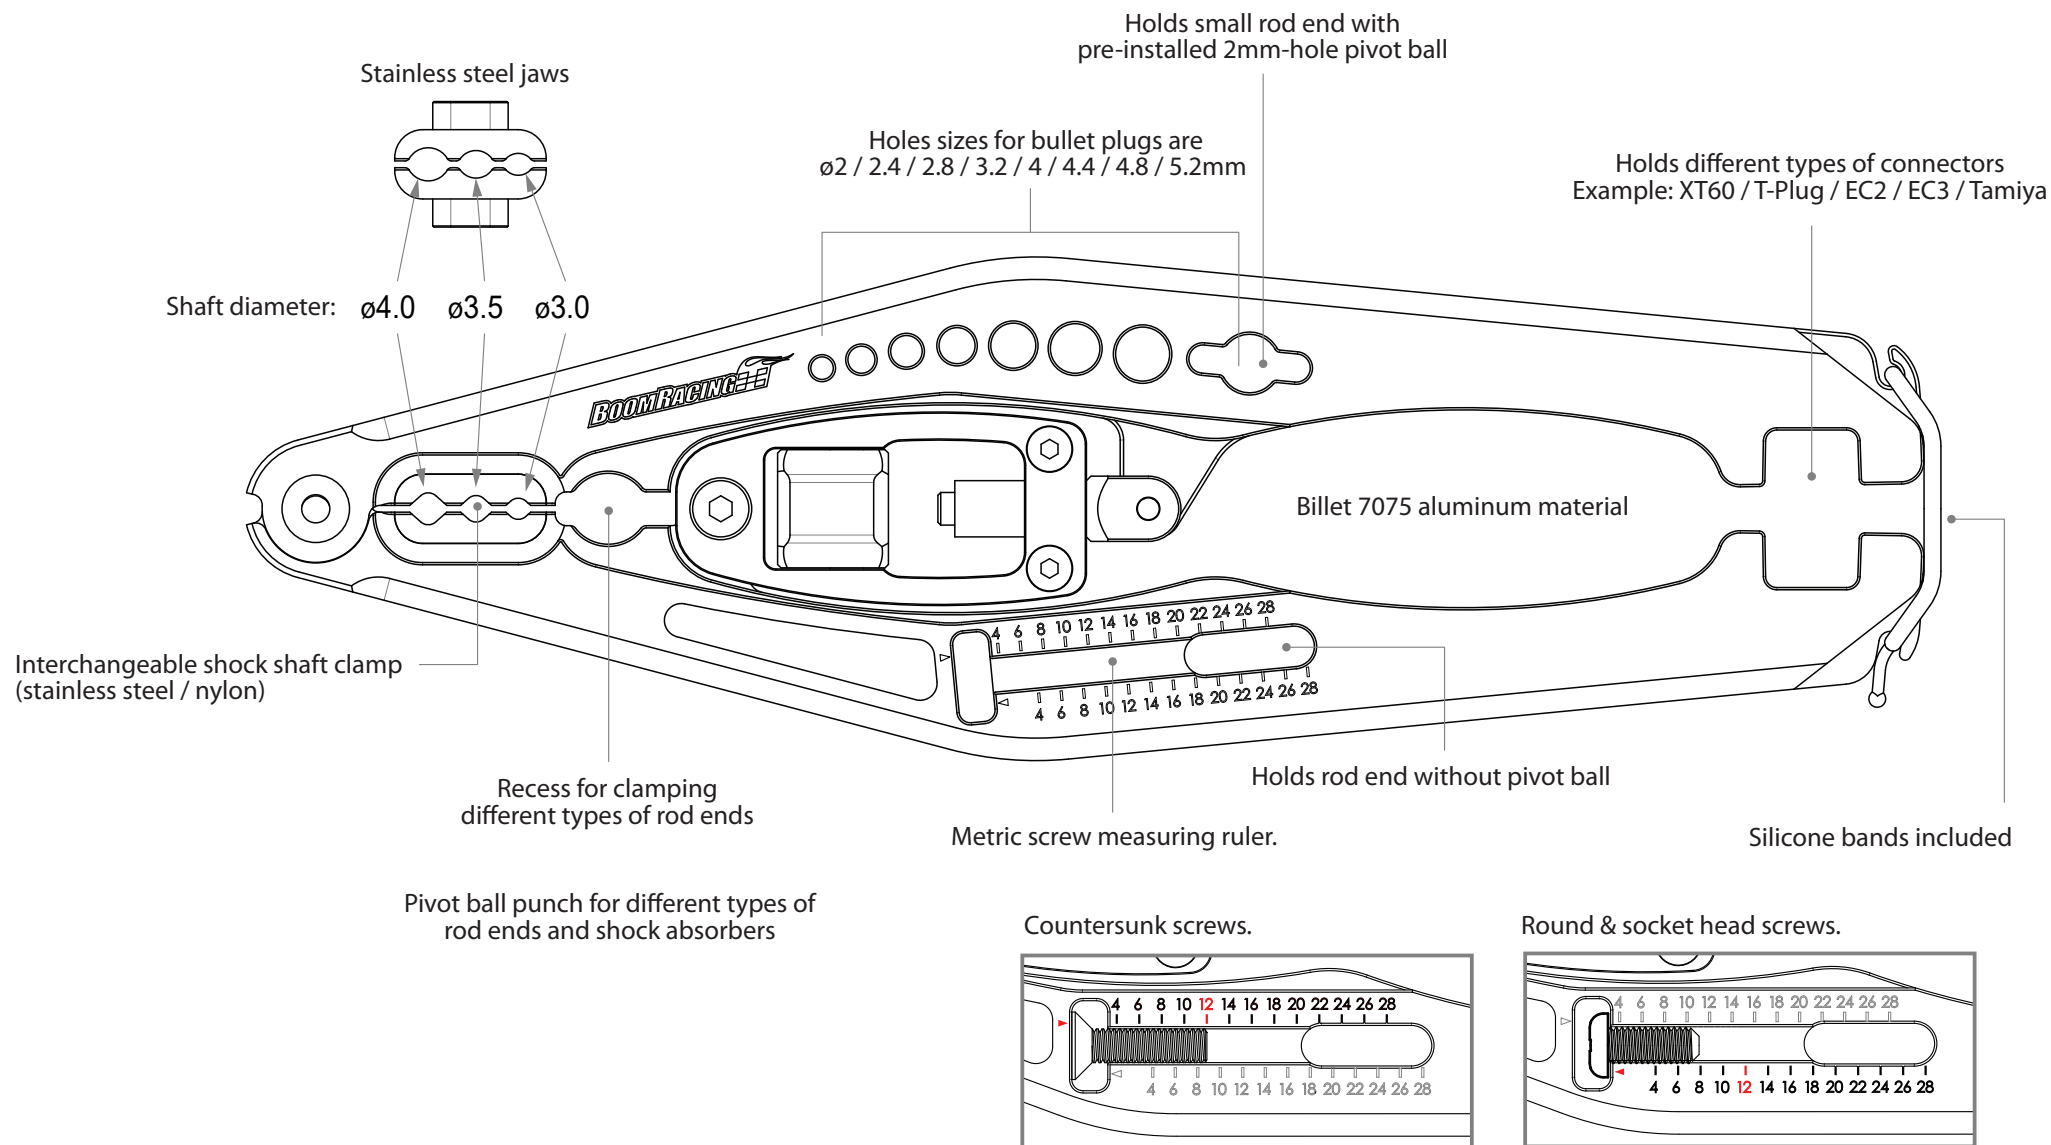



## INSTALLATION MANUAL

### How to Install the Pivot Ball into a Rod End or Shock Absorber

1


**Rotate the die to the installation position.**

(Refer to the highlighted die position in the illustration.)

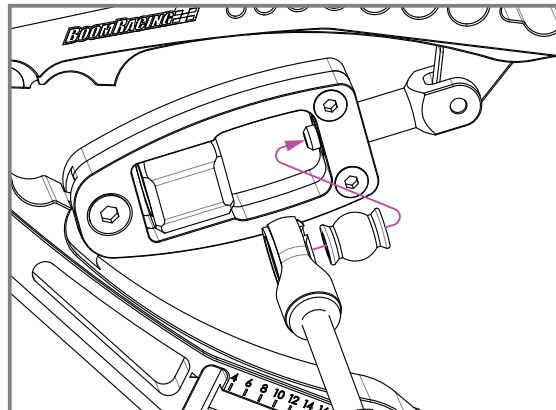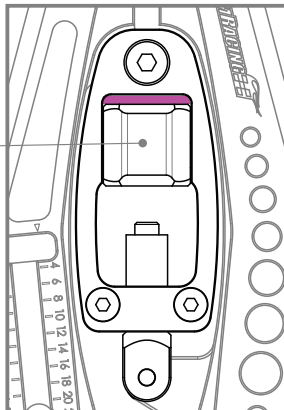

2

**Insert the pivot ball** on the side from which you want to punch it in. Ensure the pivot ball is facing the punch side.

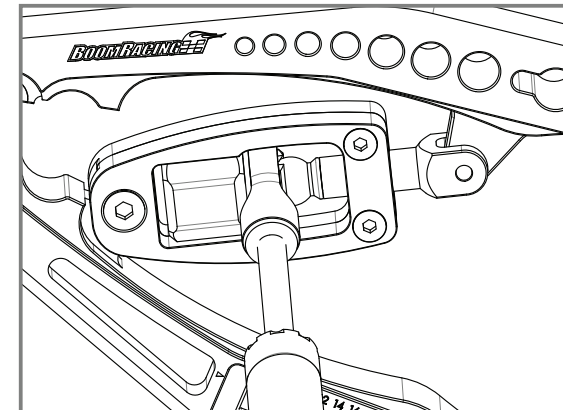

3



**Align all components carefully** before compressing the punch to install the pivot ball.

### How to Remove the Pivot Ball from a Rod End or Shock Absorber

1


**Rotate the die to the removal position.**

(Refer to the highlighted die position in the illustration.)

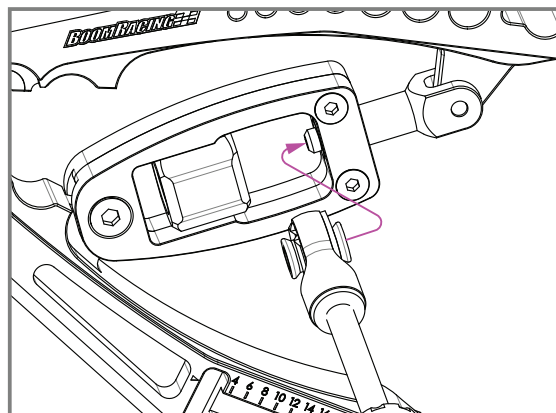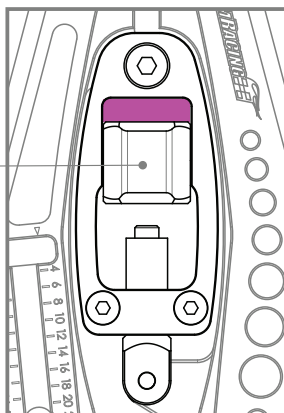

2

**Position the rod end or shock absorber** so that the side you want to punch the pivot ball out from is facing the die side.

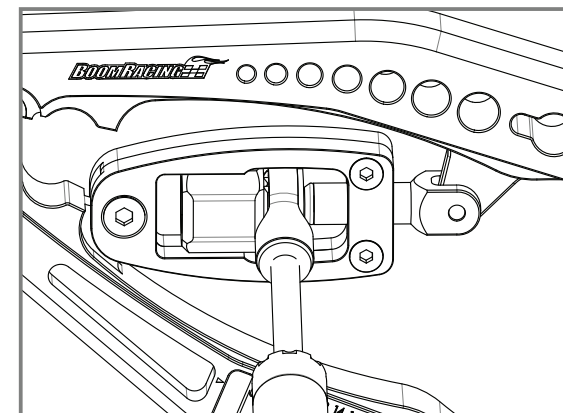

3

**Align everything properly** before compressing the punch to remove the pivot ball.