


JDM-155 1/14 Overland 4x4 ARTR RC Truck



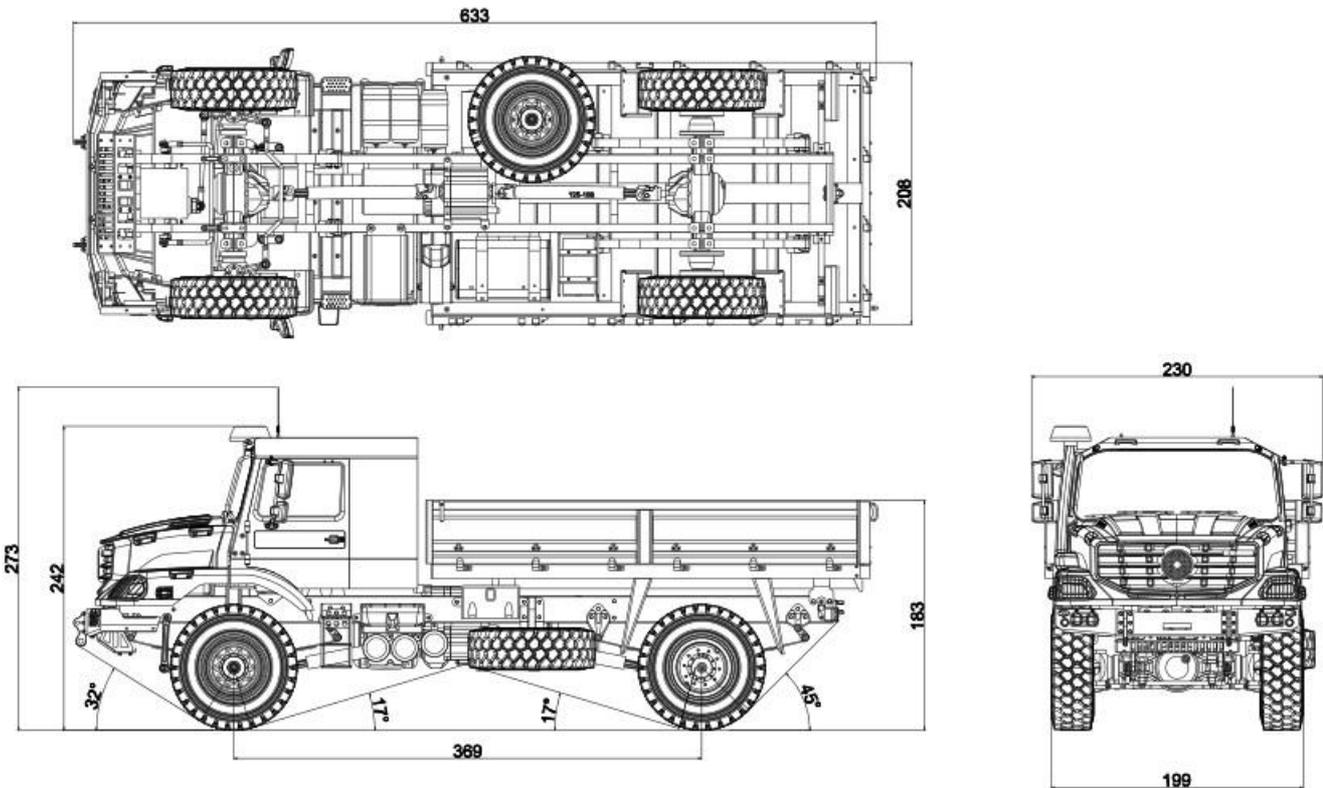

Scale: 1:14

Dimensions: length 633, width 230, height 273 (excluding antenna 233), unit: mm

Wheelbase: total wheelbase 369mm

Front shock absorber stroke: 20 mm

Battery Specification: 3S, 5200mAh, 11.1v, above 25C; battery compartment size: 142 * 45 * 40MM (battery size is within this range)

battery needs to be purchased separately


Weight: 3.3kg

Theoretical load: 8kg


Total weight: 12kg

Controller needs to be purchased separately

Remove the cab

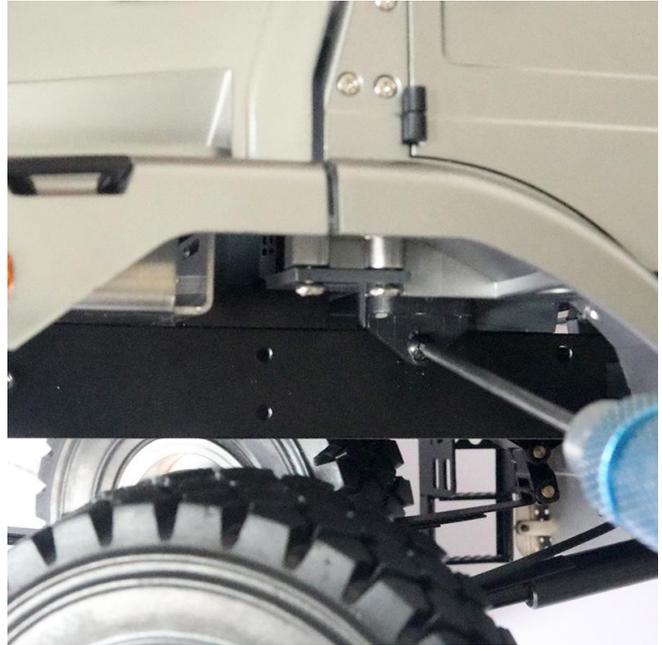


Remove the hood

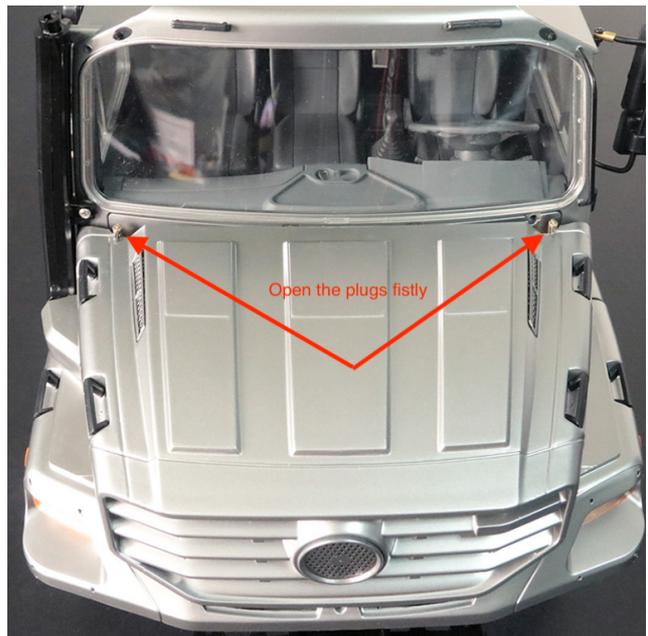

Remove the hood




Remove the battery box

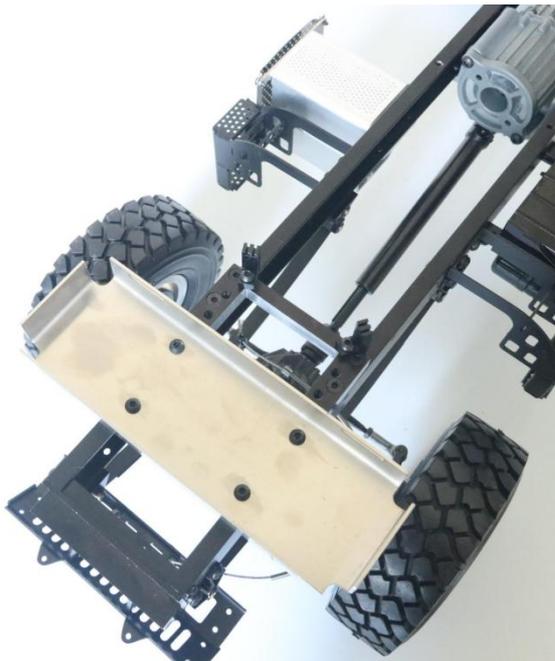


Remove the holder and the cable mount piece





Install the steering gear
(the steering gear needs to
be purchased separately)

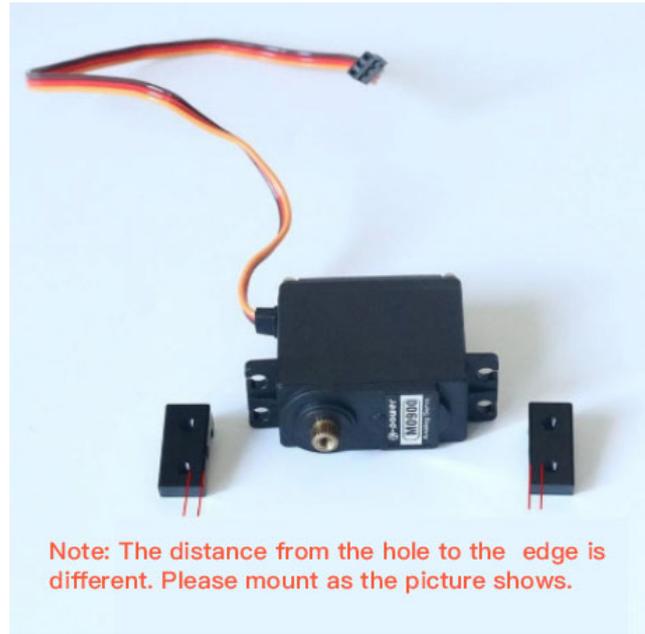


Note: The distance from the hole to the edge is different. Please mount as the picture shows.

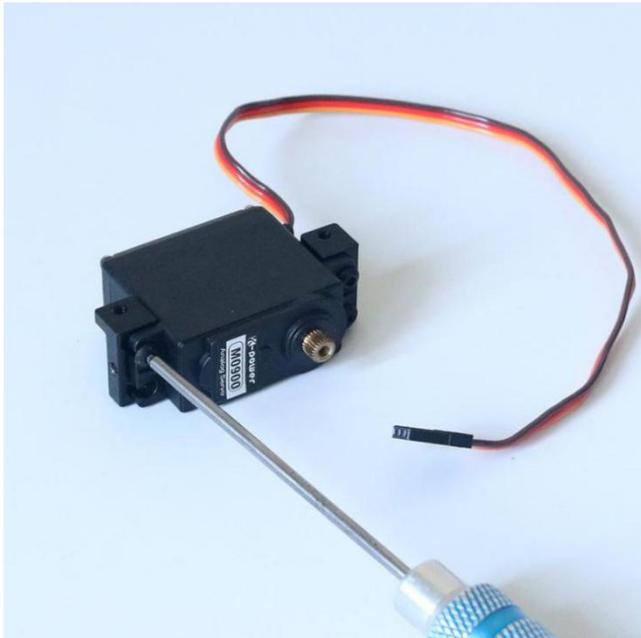

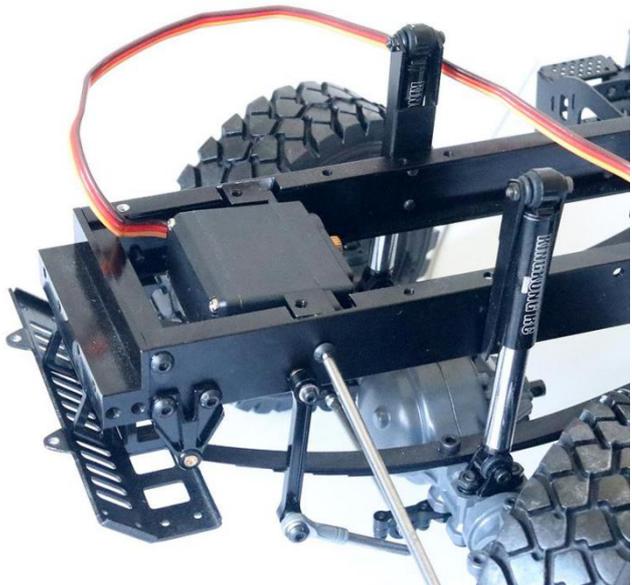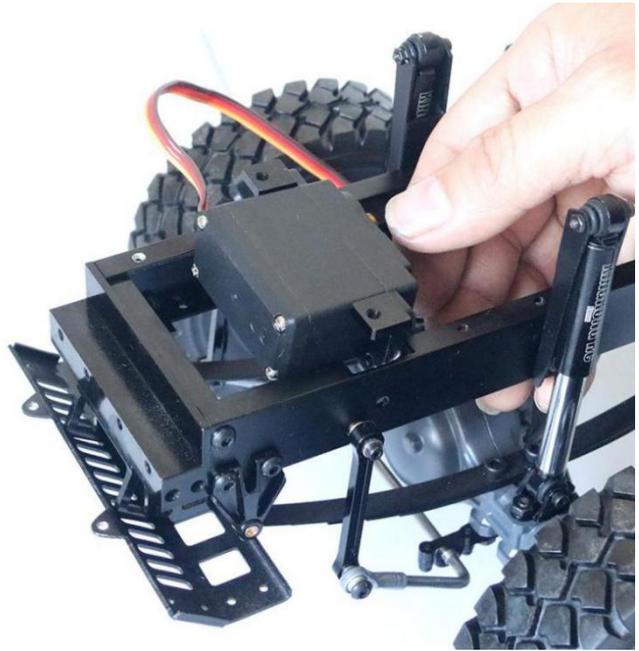

Use BHCS M3*8mm

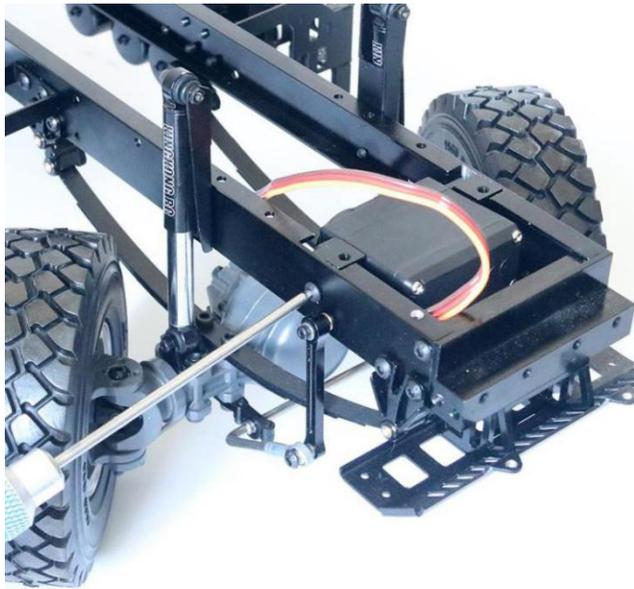



Use BHCS M3*8mm



Install the variable speed steering gear (the steering gear needs to be purchased separately)





Assemble the cable mount
and install 2pc of BHCS M3
* 8mm



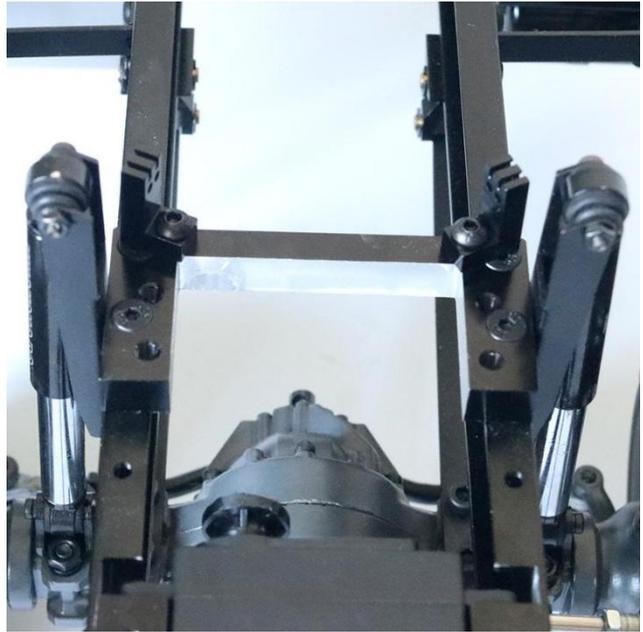
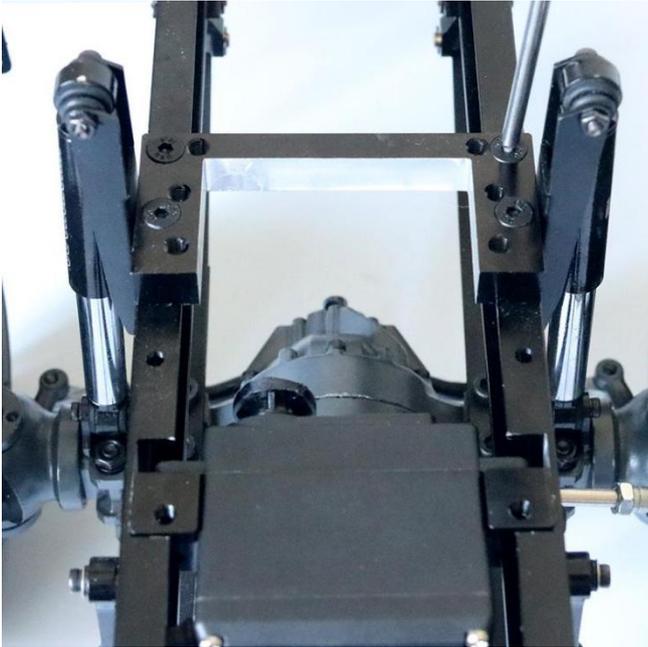


(Install 4pc FHCS M3 * 8mm)





Remove the gearbox

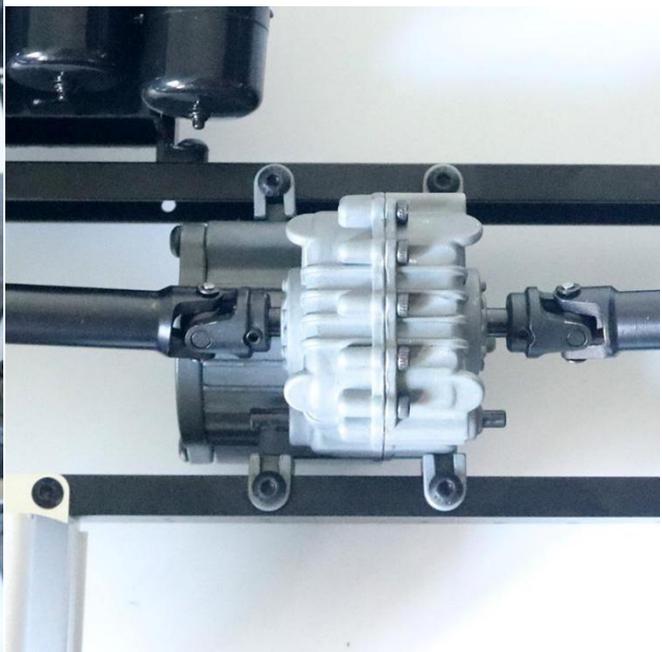
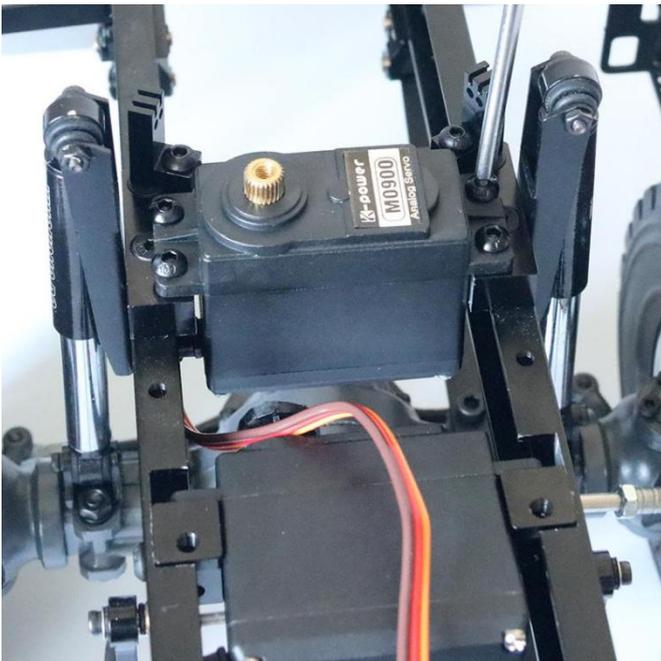






Install the gearbox (the motor needs to be purchased separately)

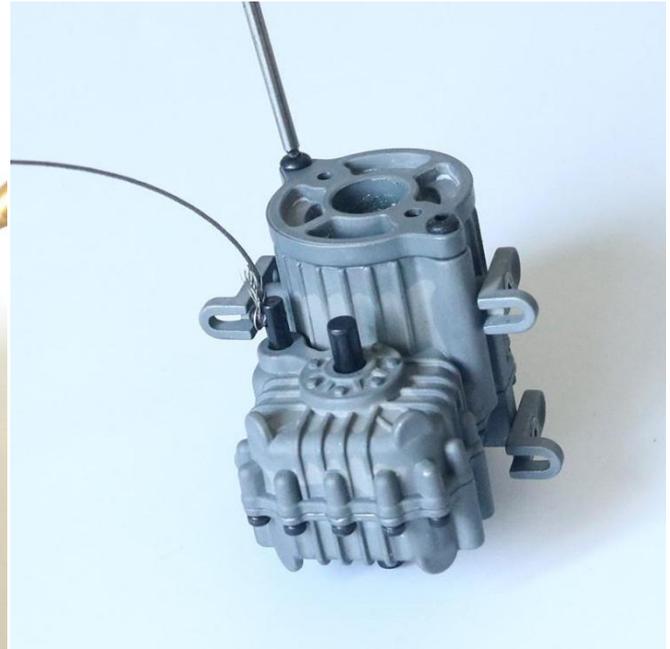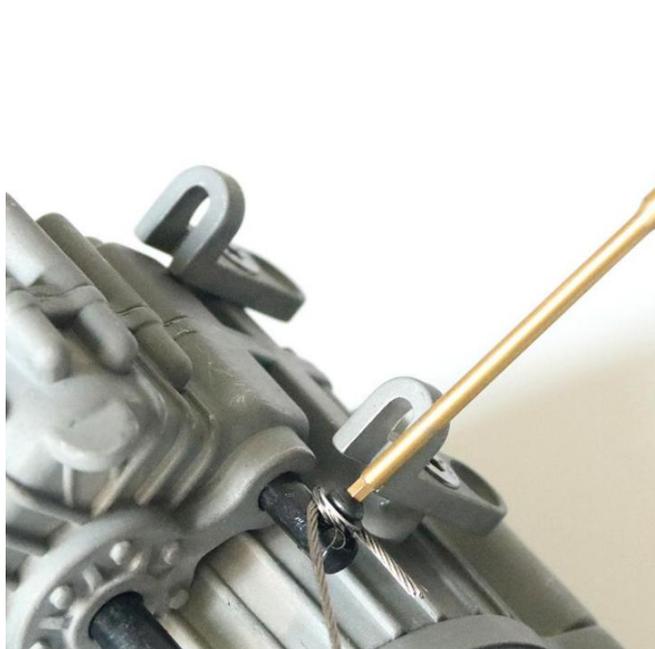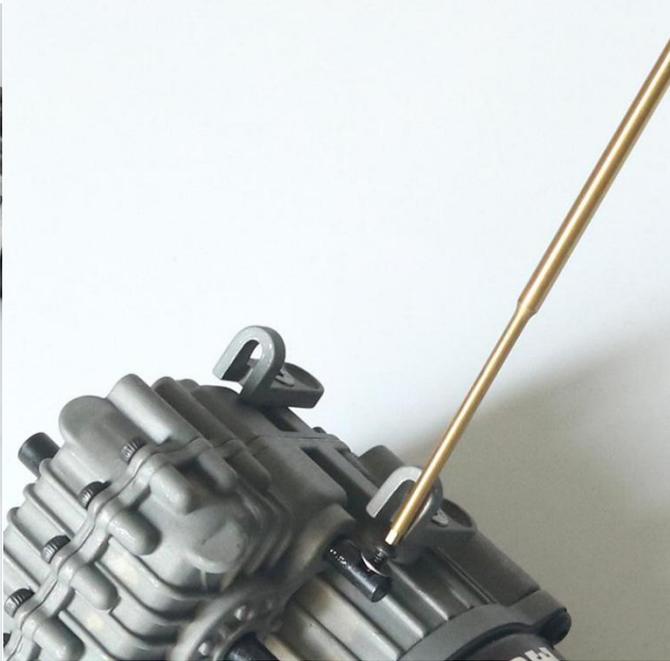
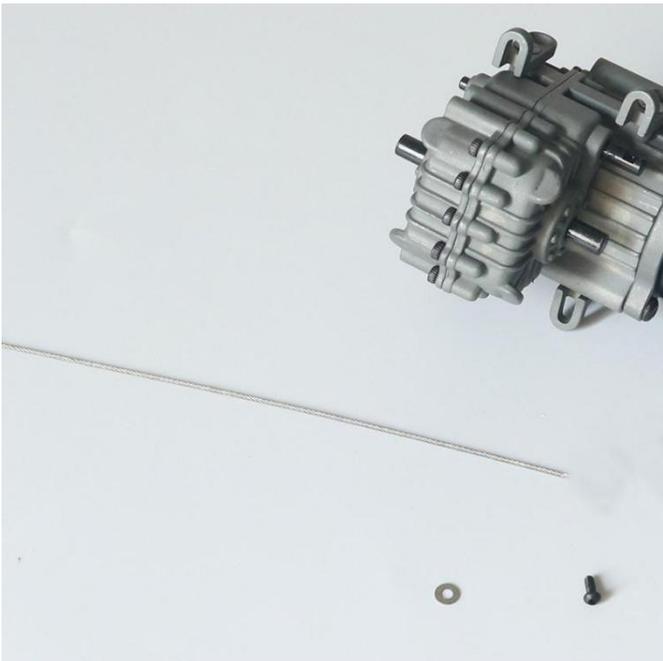


The motor needs to be purchased separately. It is recommended to use 35T, 2pc of SHCS m3 * 6mm.

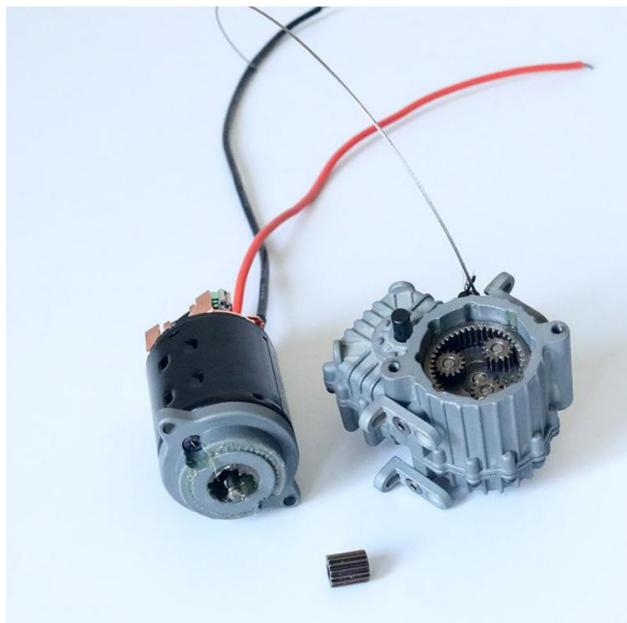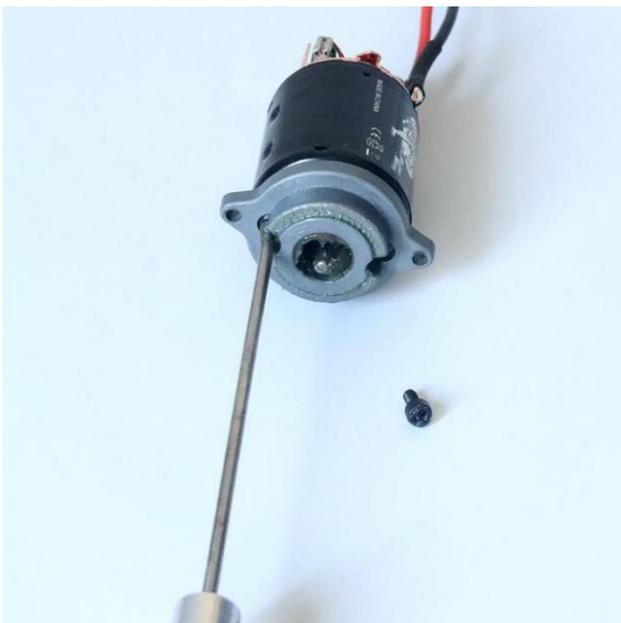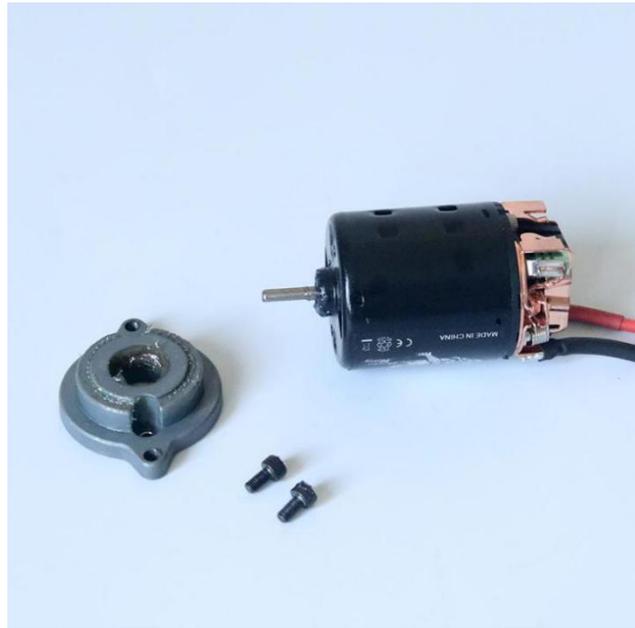
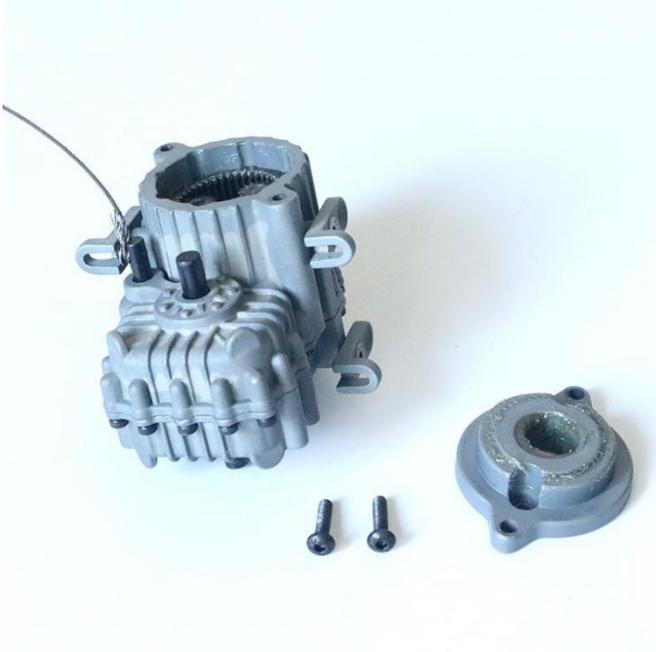


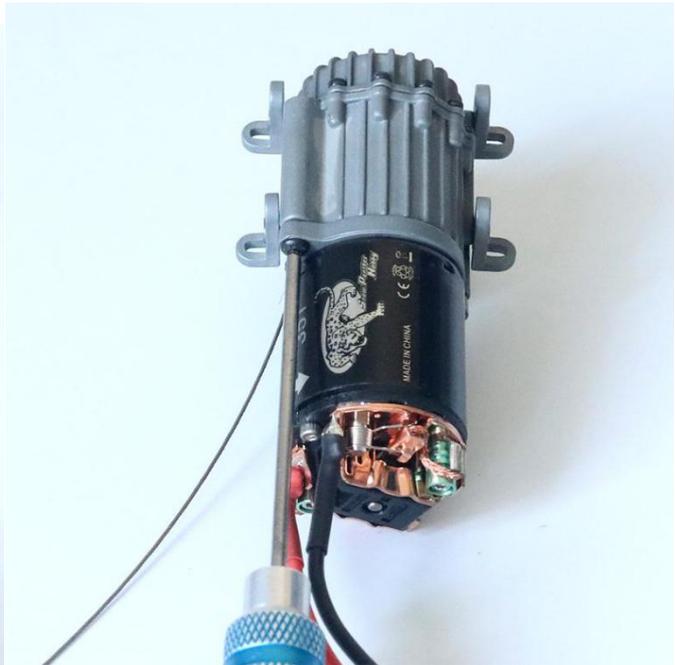
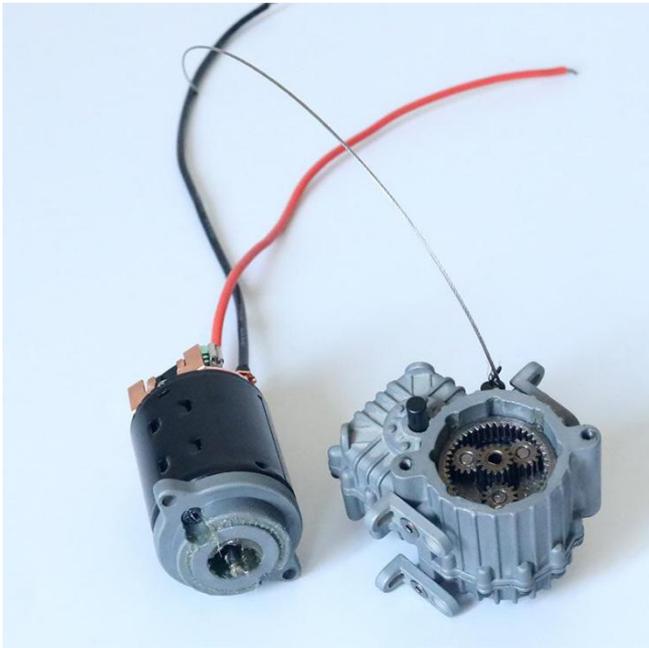


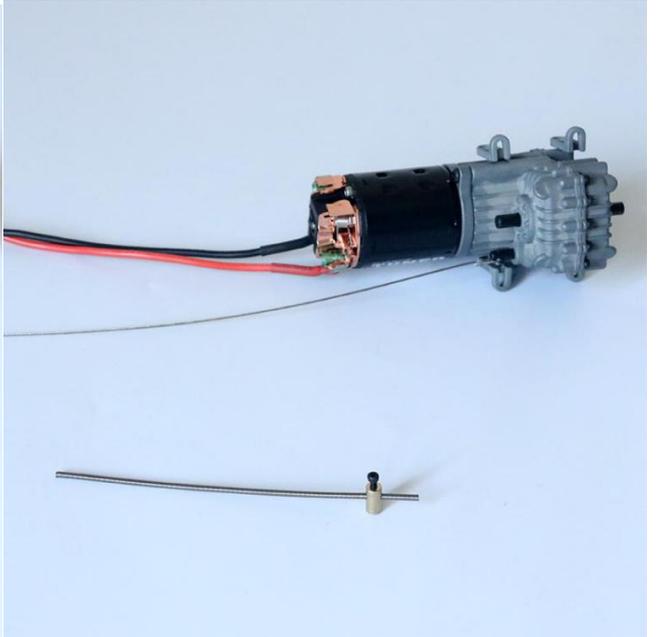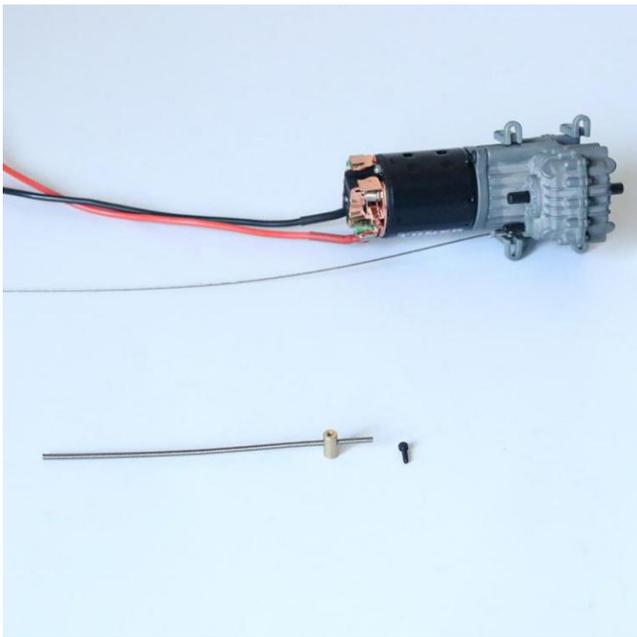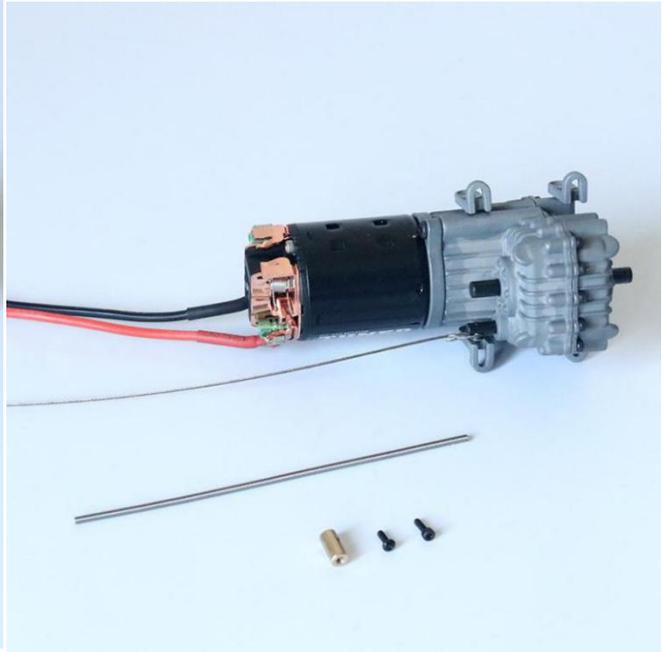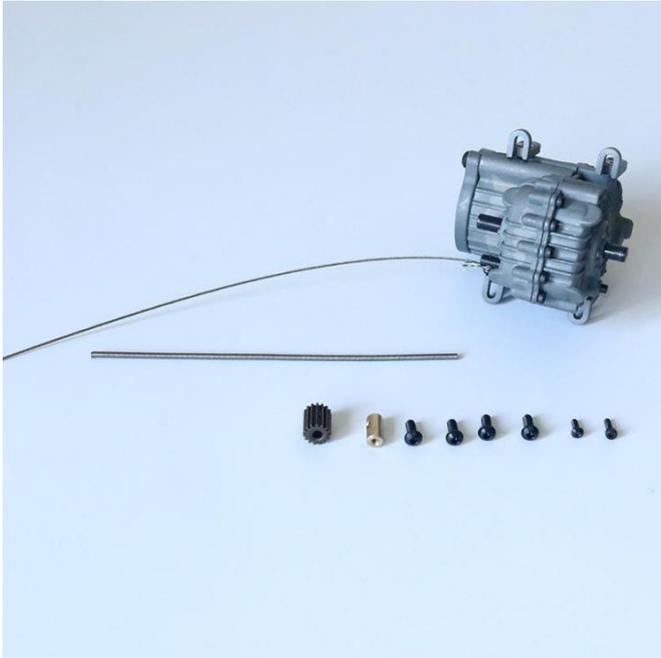

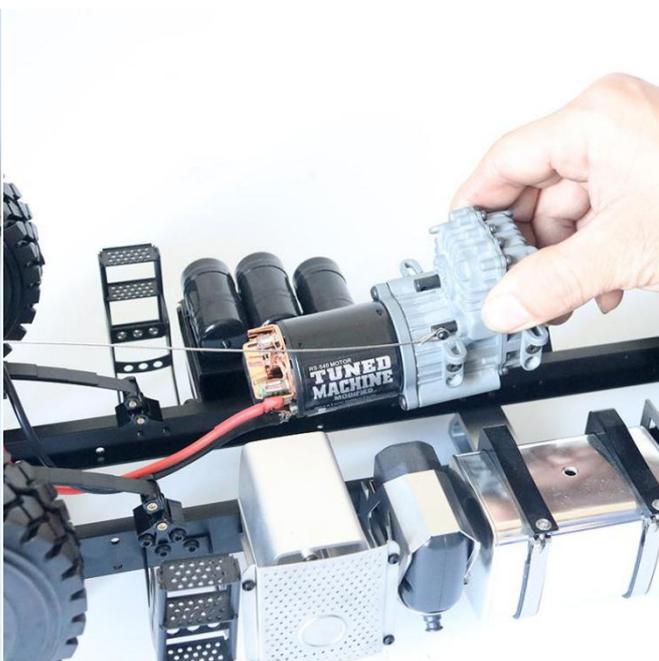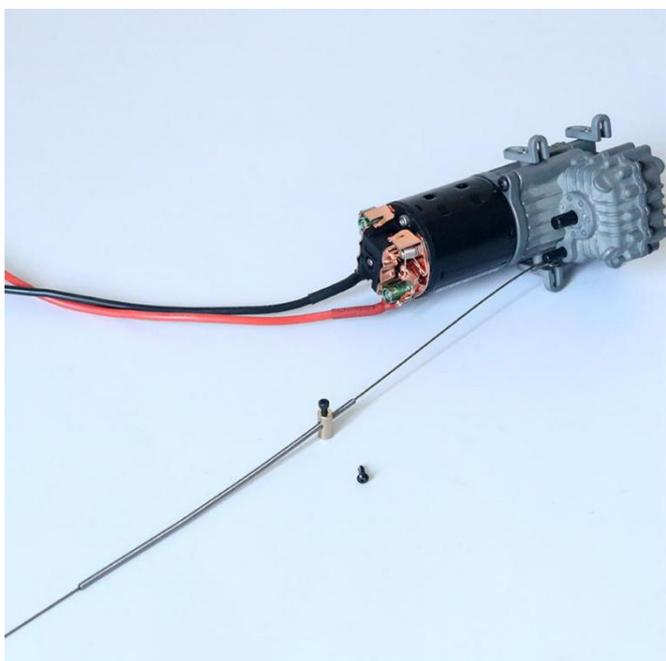



Put on the cable, fasten the cable screw with proper force, and ensure the sheath fastening passes through smoothly

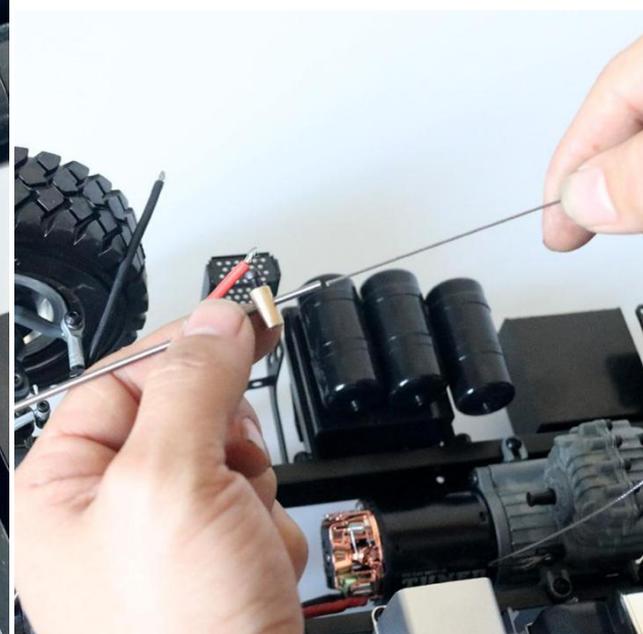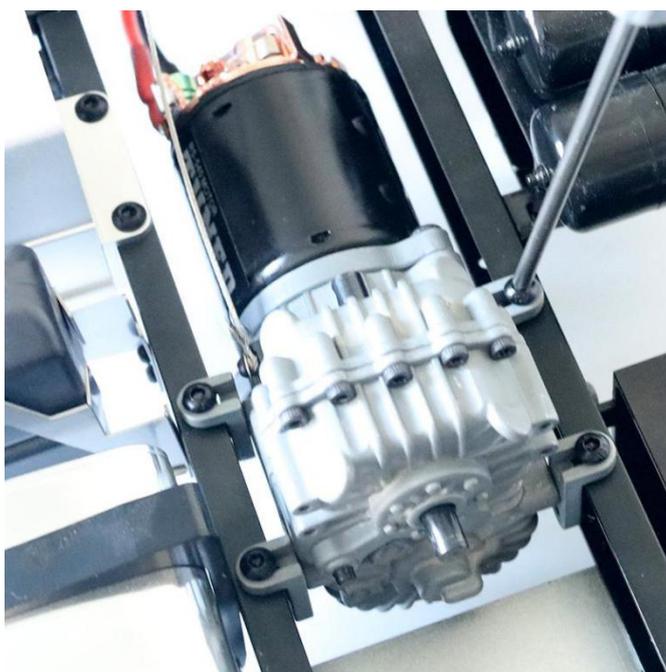




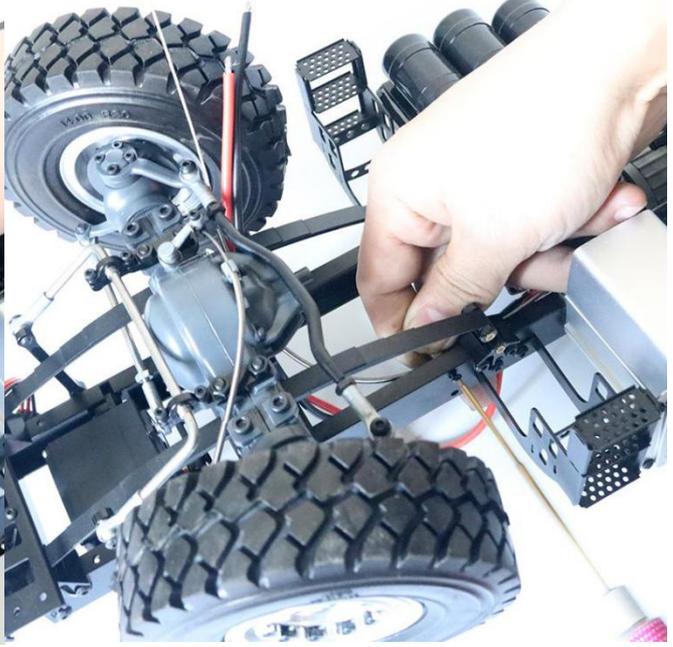
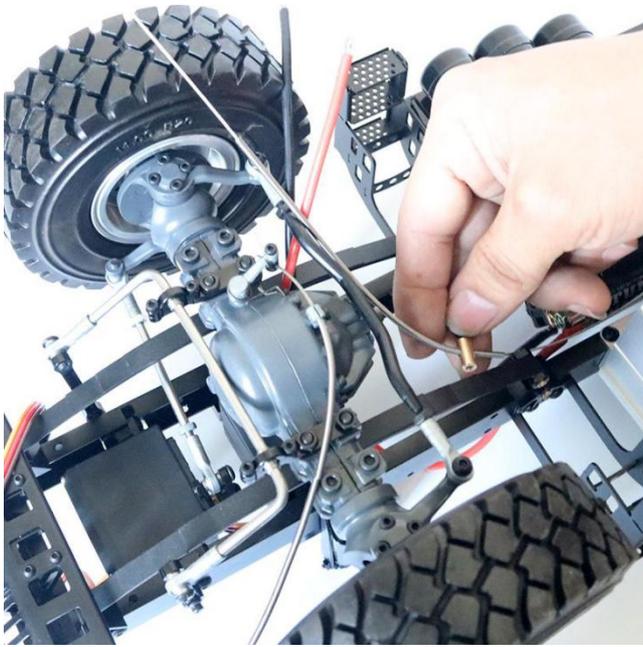





The cable passes through the cable seat




Installation diff locking, general assembly picture (mark for easy adjustment when finishing assembling)

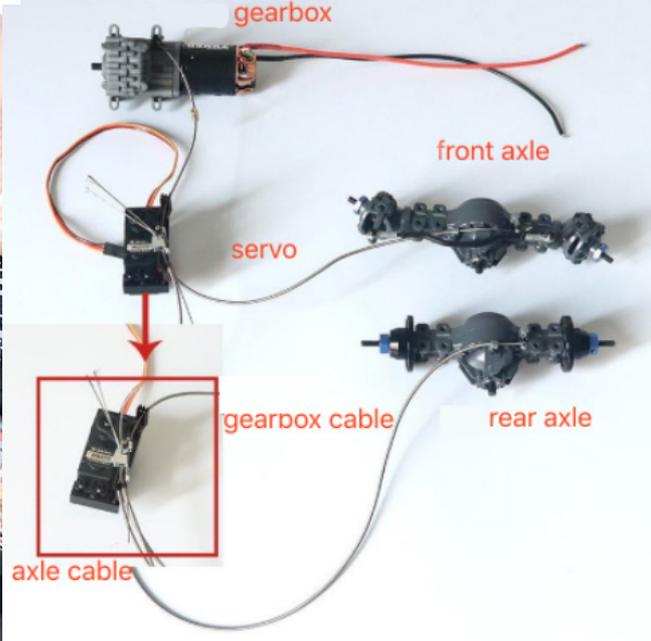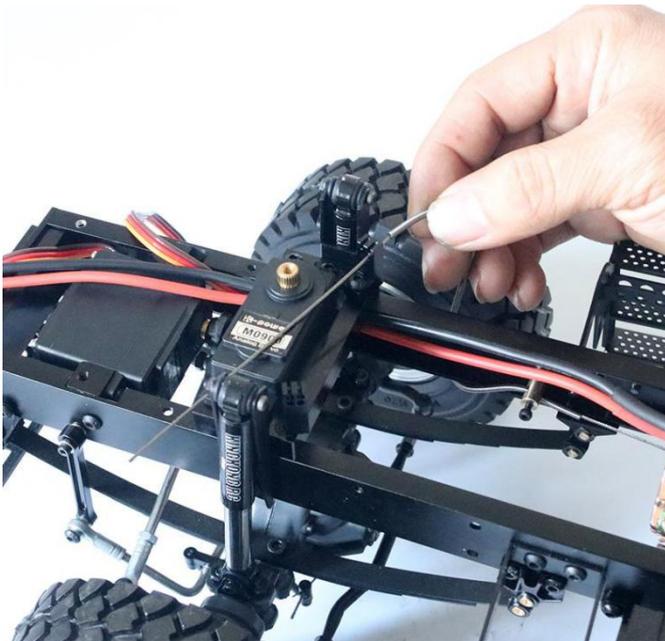


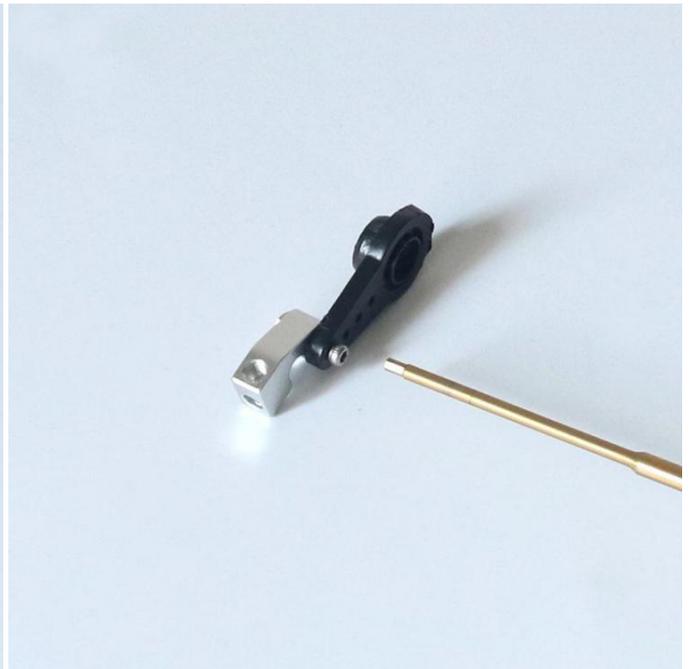


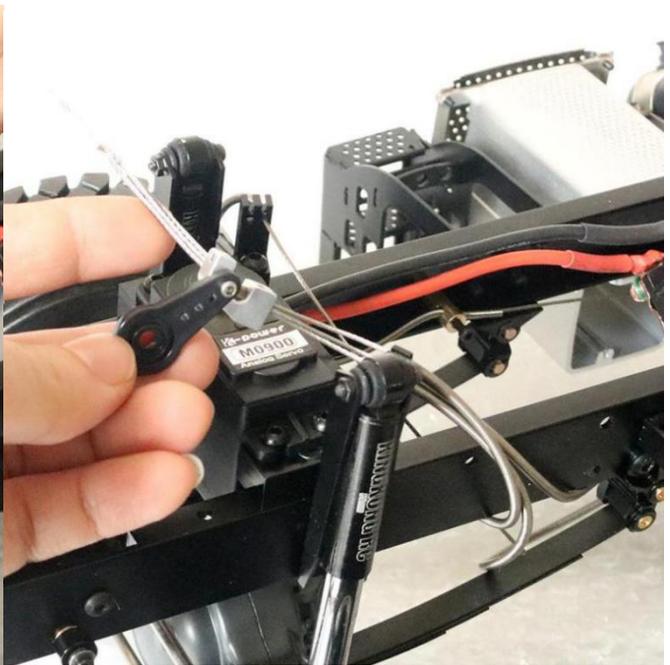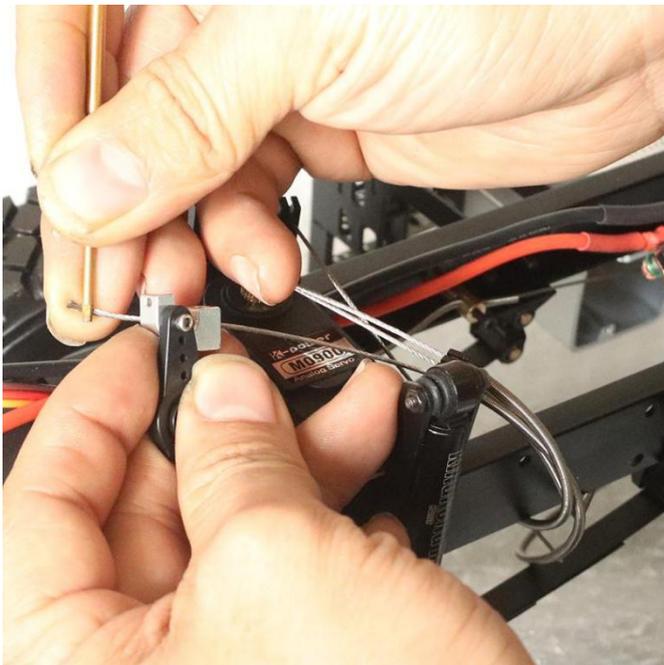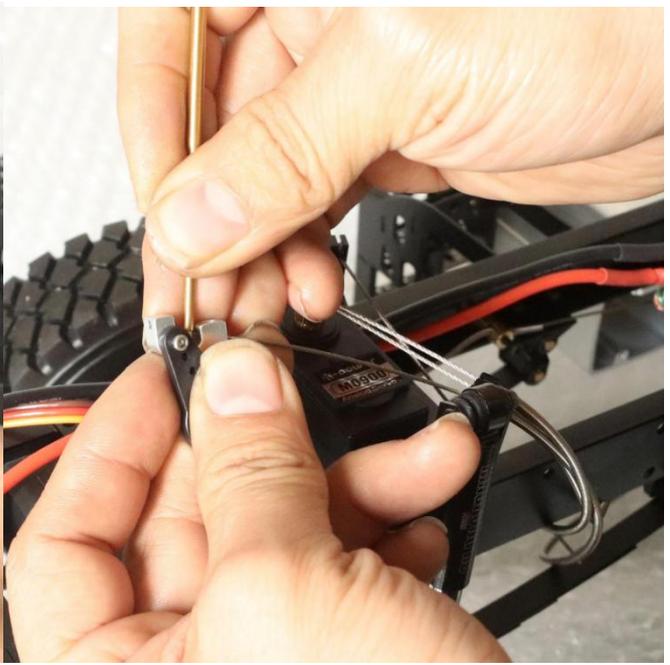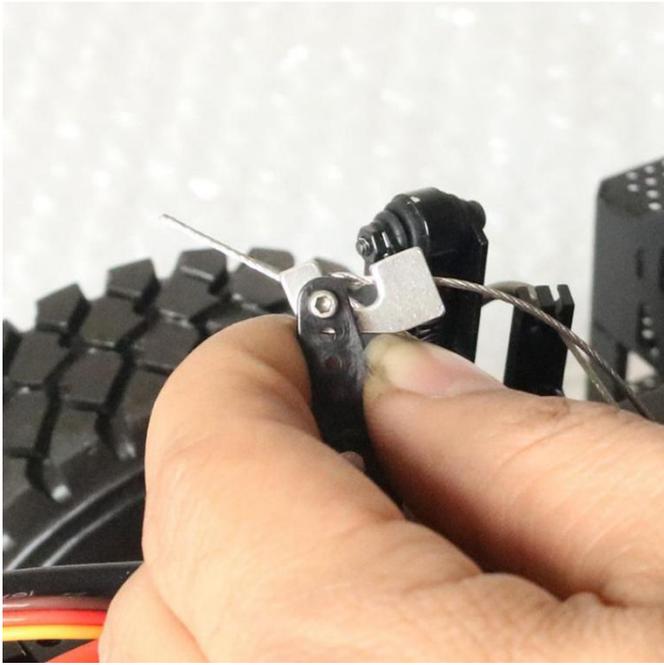

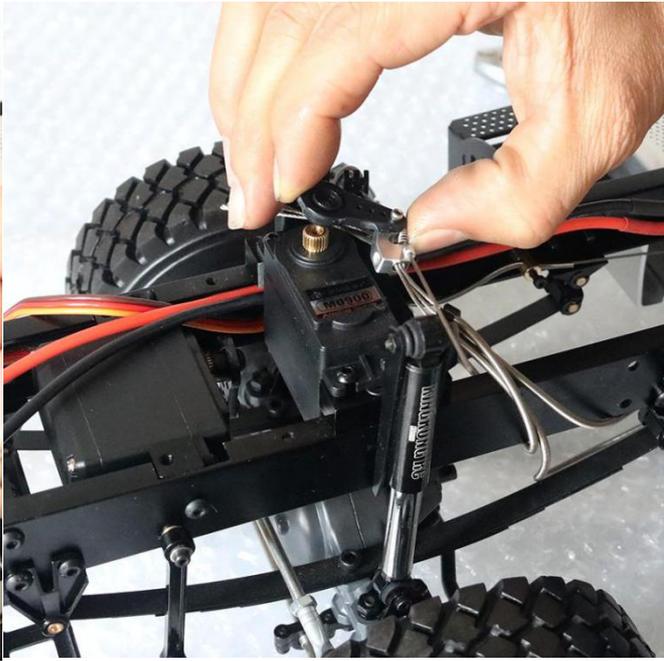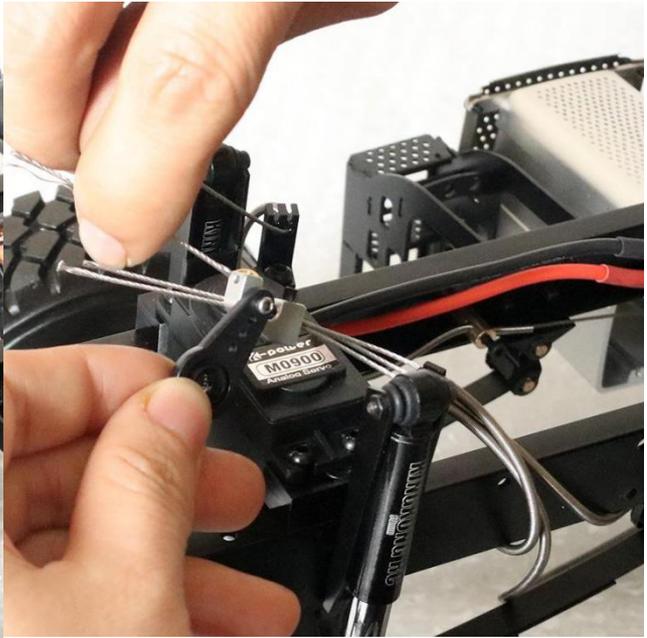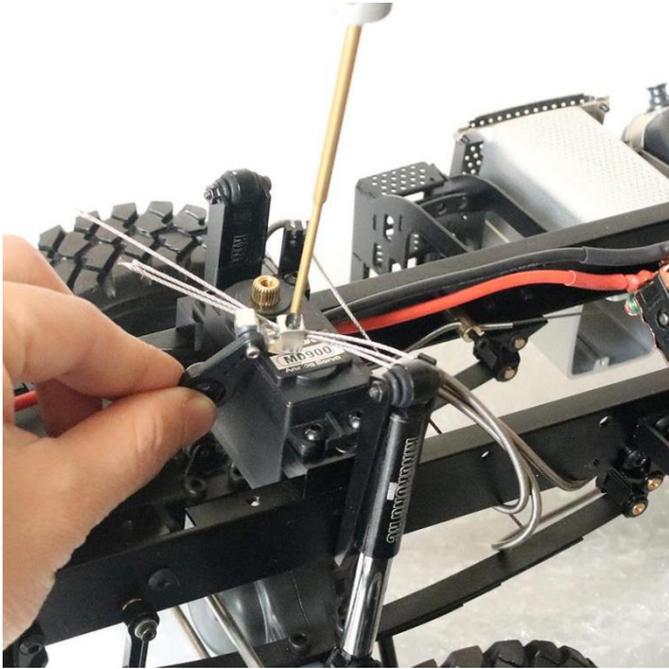

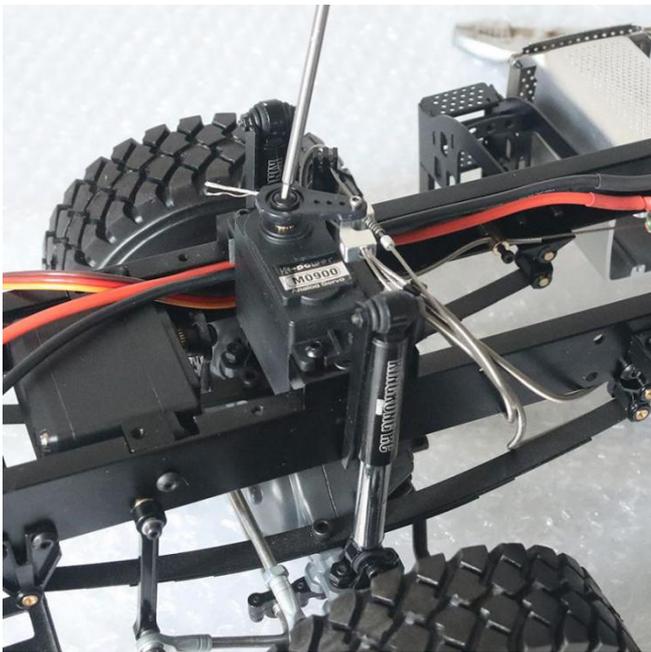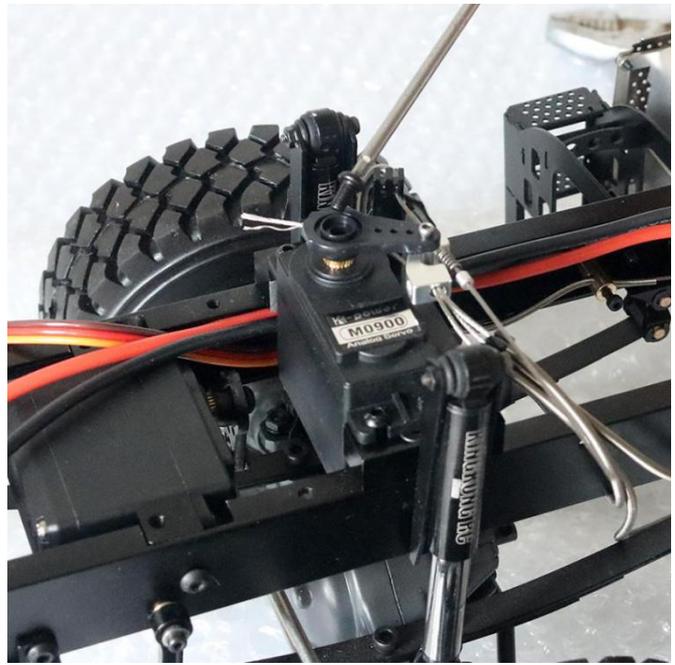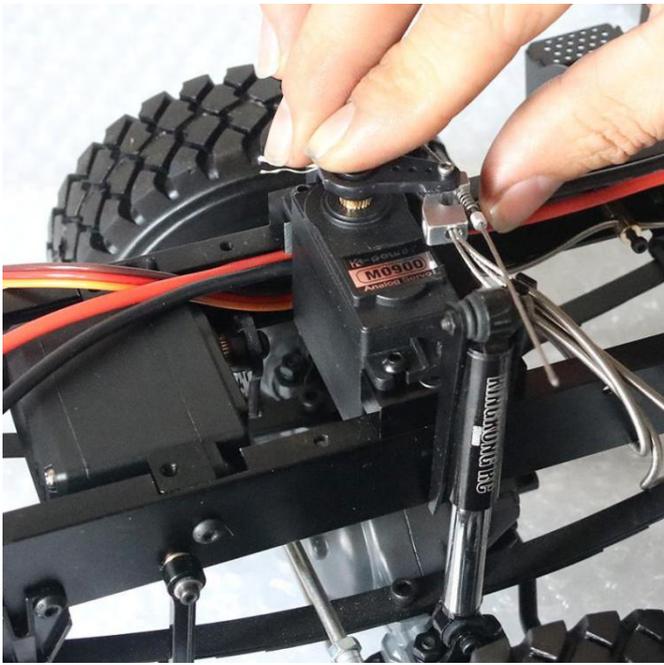


Install the cab


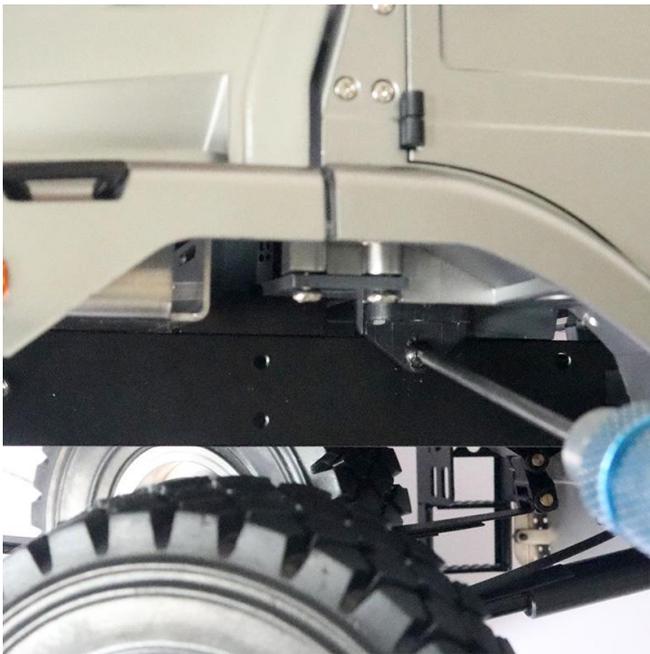
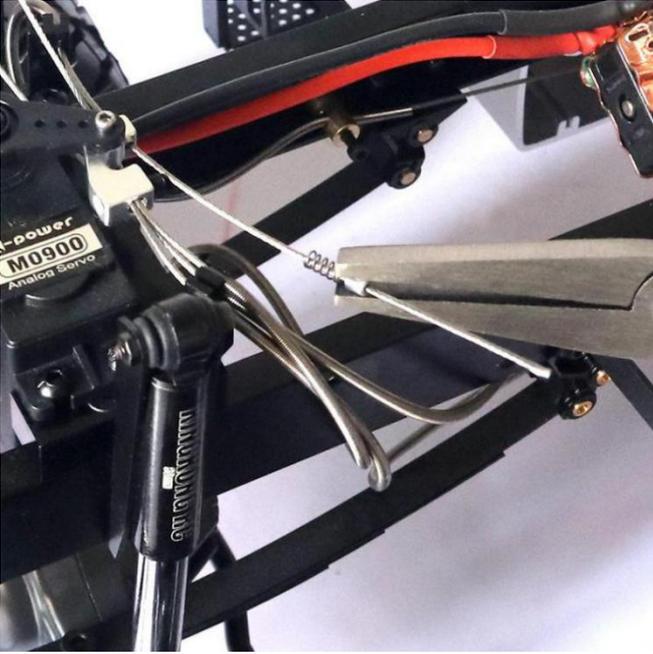


Install the hood




Install the front bumper

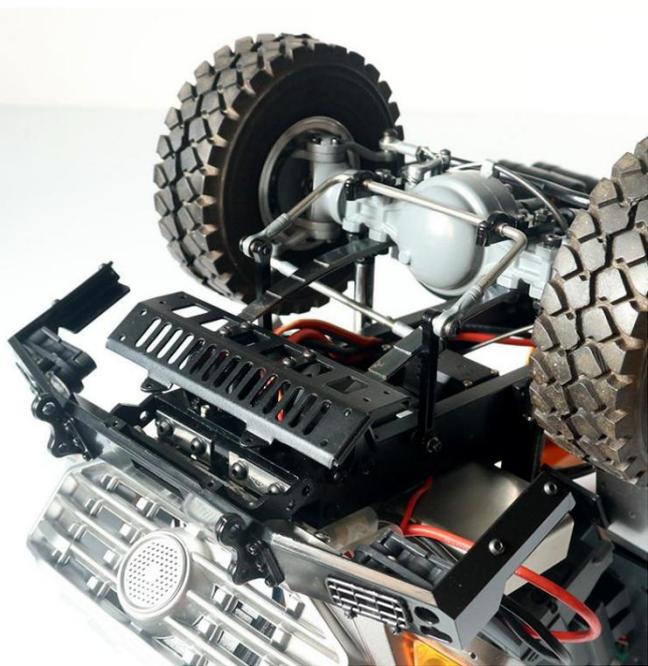

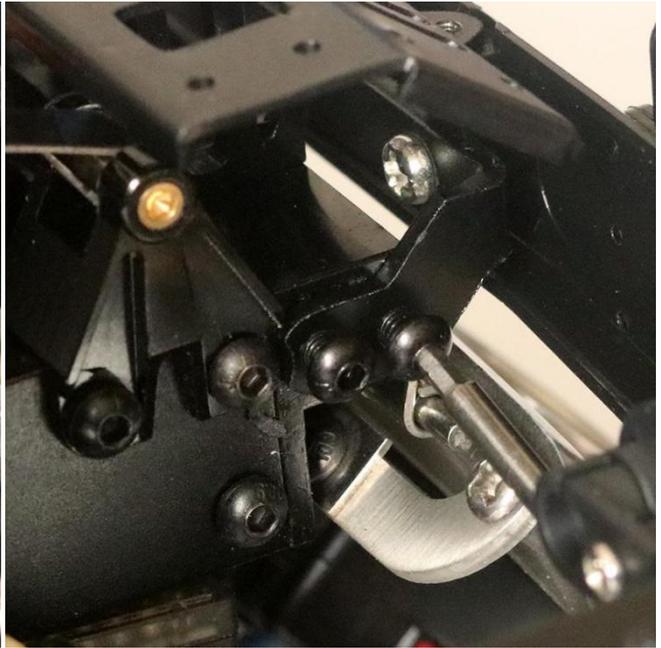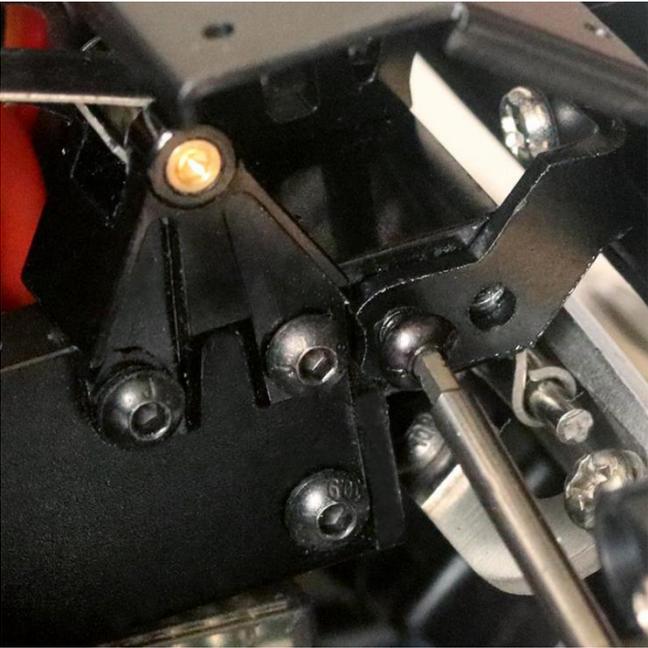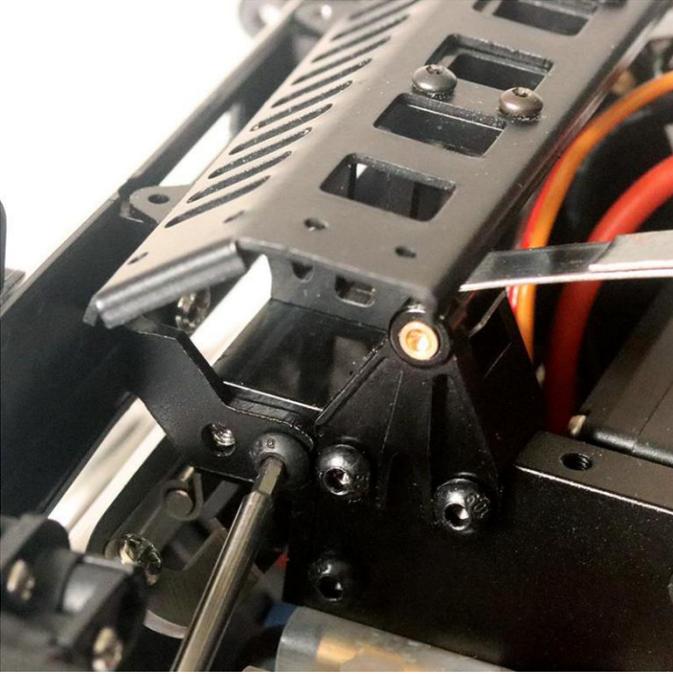

Install the wiper

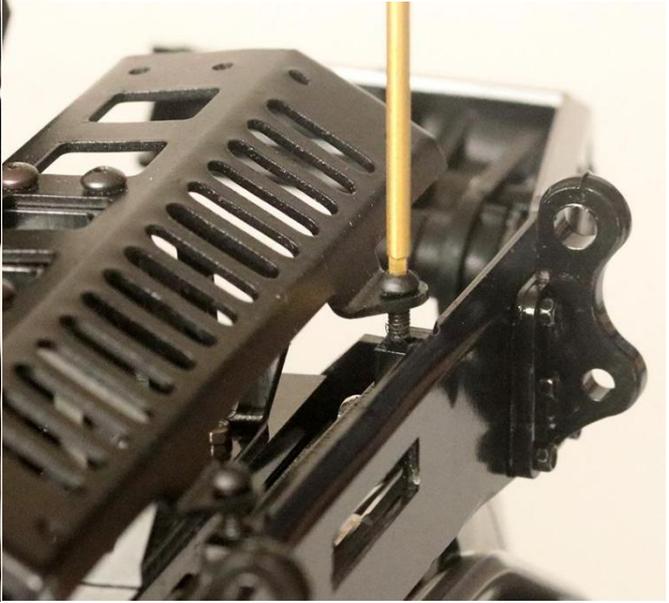

Install the antenna



Install the front grill and side grill




Install the snorkel cap





Install the right rear mirror



Install the battery

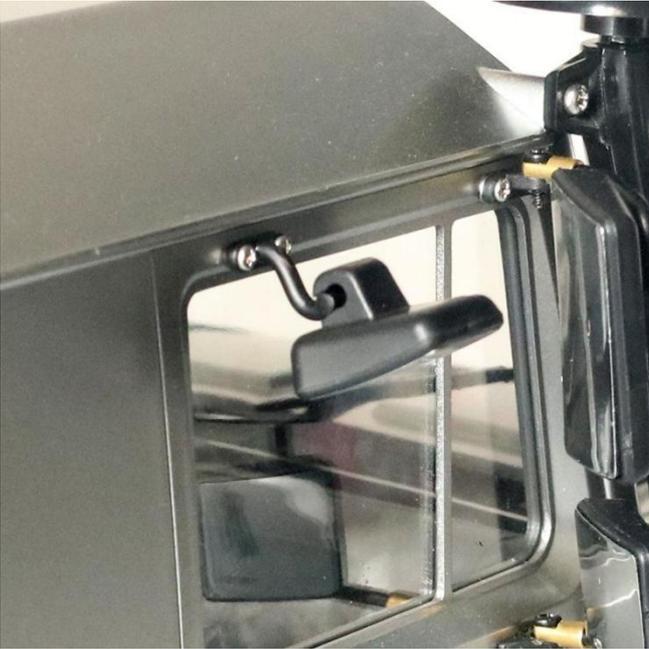

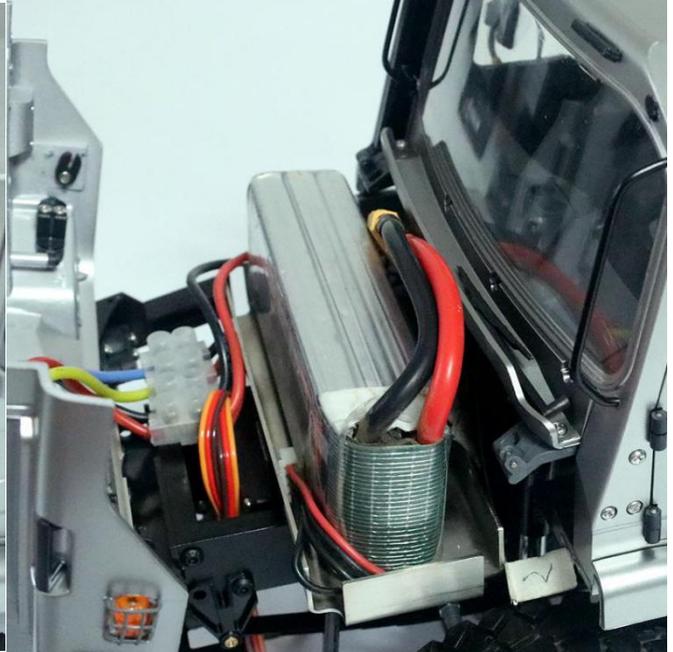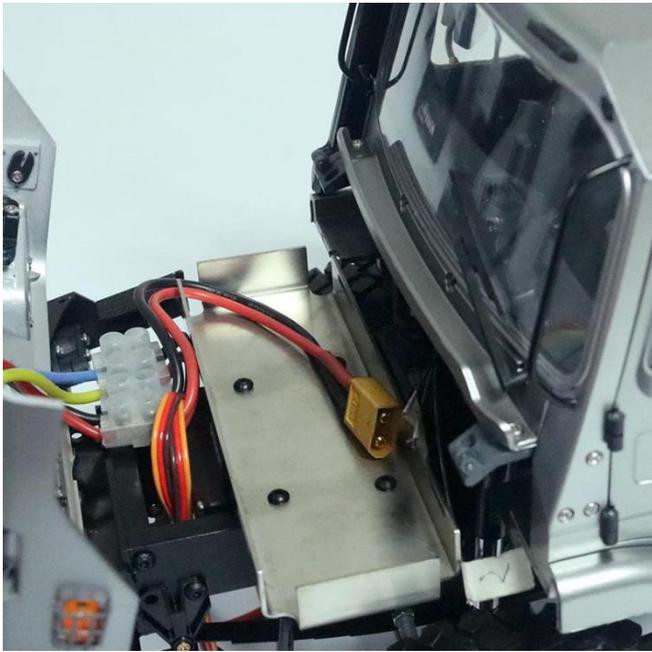

Open the door



