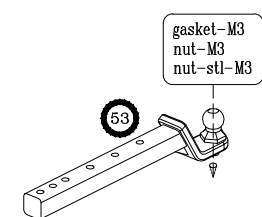













(Adjust the extension of the
to fix the Kofferraumdeckel)



- | | |
|---|------------|
|  | NLJ-M2x12 |
|  | NLJ-M2x10 |
|  | NLJ-M2x8 |
|  | BY-M2x10 |
|  | BY-M2x8 |
|  | BT-M2x10 |
|  | BT-M2x8 |
|  | BT-M2x5 |
|  | nut-stl-M2 |
|  | nut-M2 |