

开始之前：

1: 准备好如下工具

镊子（安装尾门转轴处螺帽和1.2螺丝螺帽时需要用到）、尖嘴钳、平口剪、PH0和PH1级十字螺丝刀、1.5mm内六角扳手、3M强力双面胶、剪刀、砂纸。


2: 先喷漆再组装（喷漆之前建议修剪塑胶部件的局部毛刺并清洗各部件）。

Before strating:

1、 You need these tools:

tweezers, long nose pliers, side cutter, PH0/PH1 cross screwdriver, 1.5mm hex wrench , double side tape, scissors, sandpaper.

2. Finished painting before assembling (before painting, you should remove burrs and clean the ABS parts).

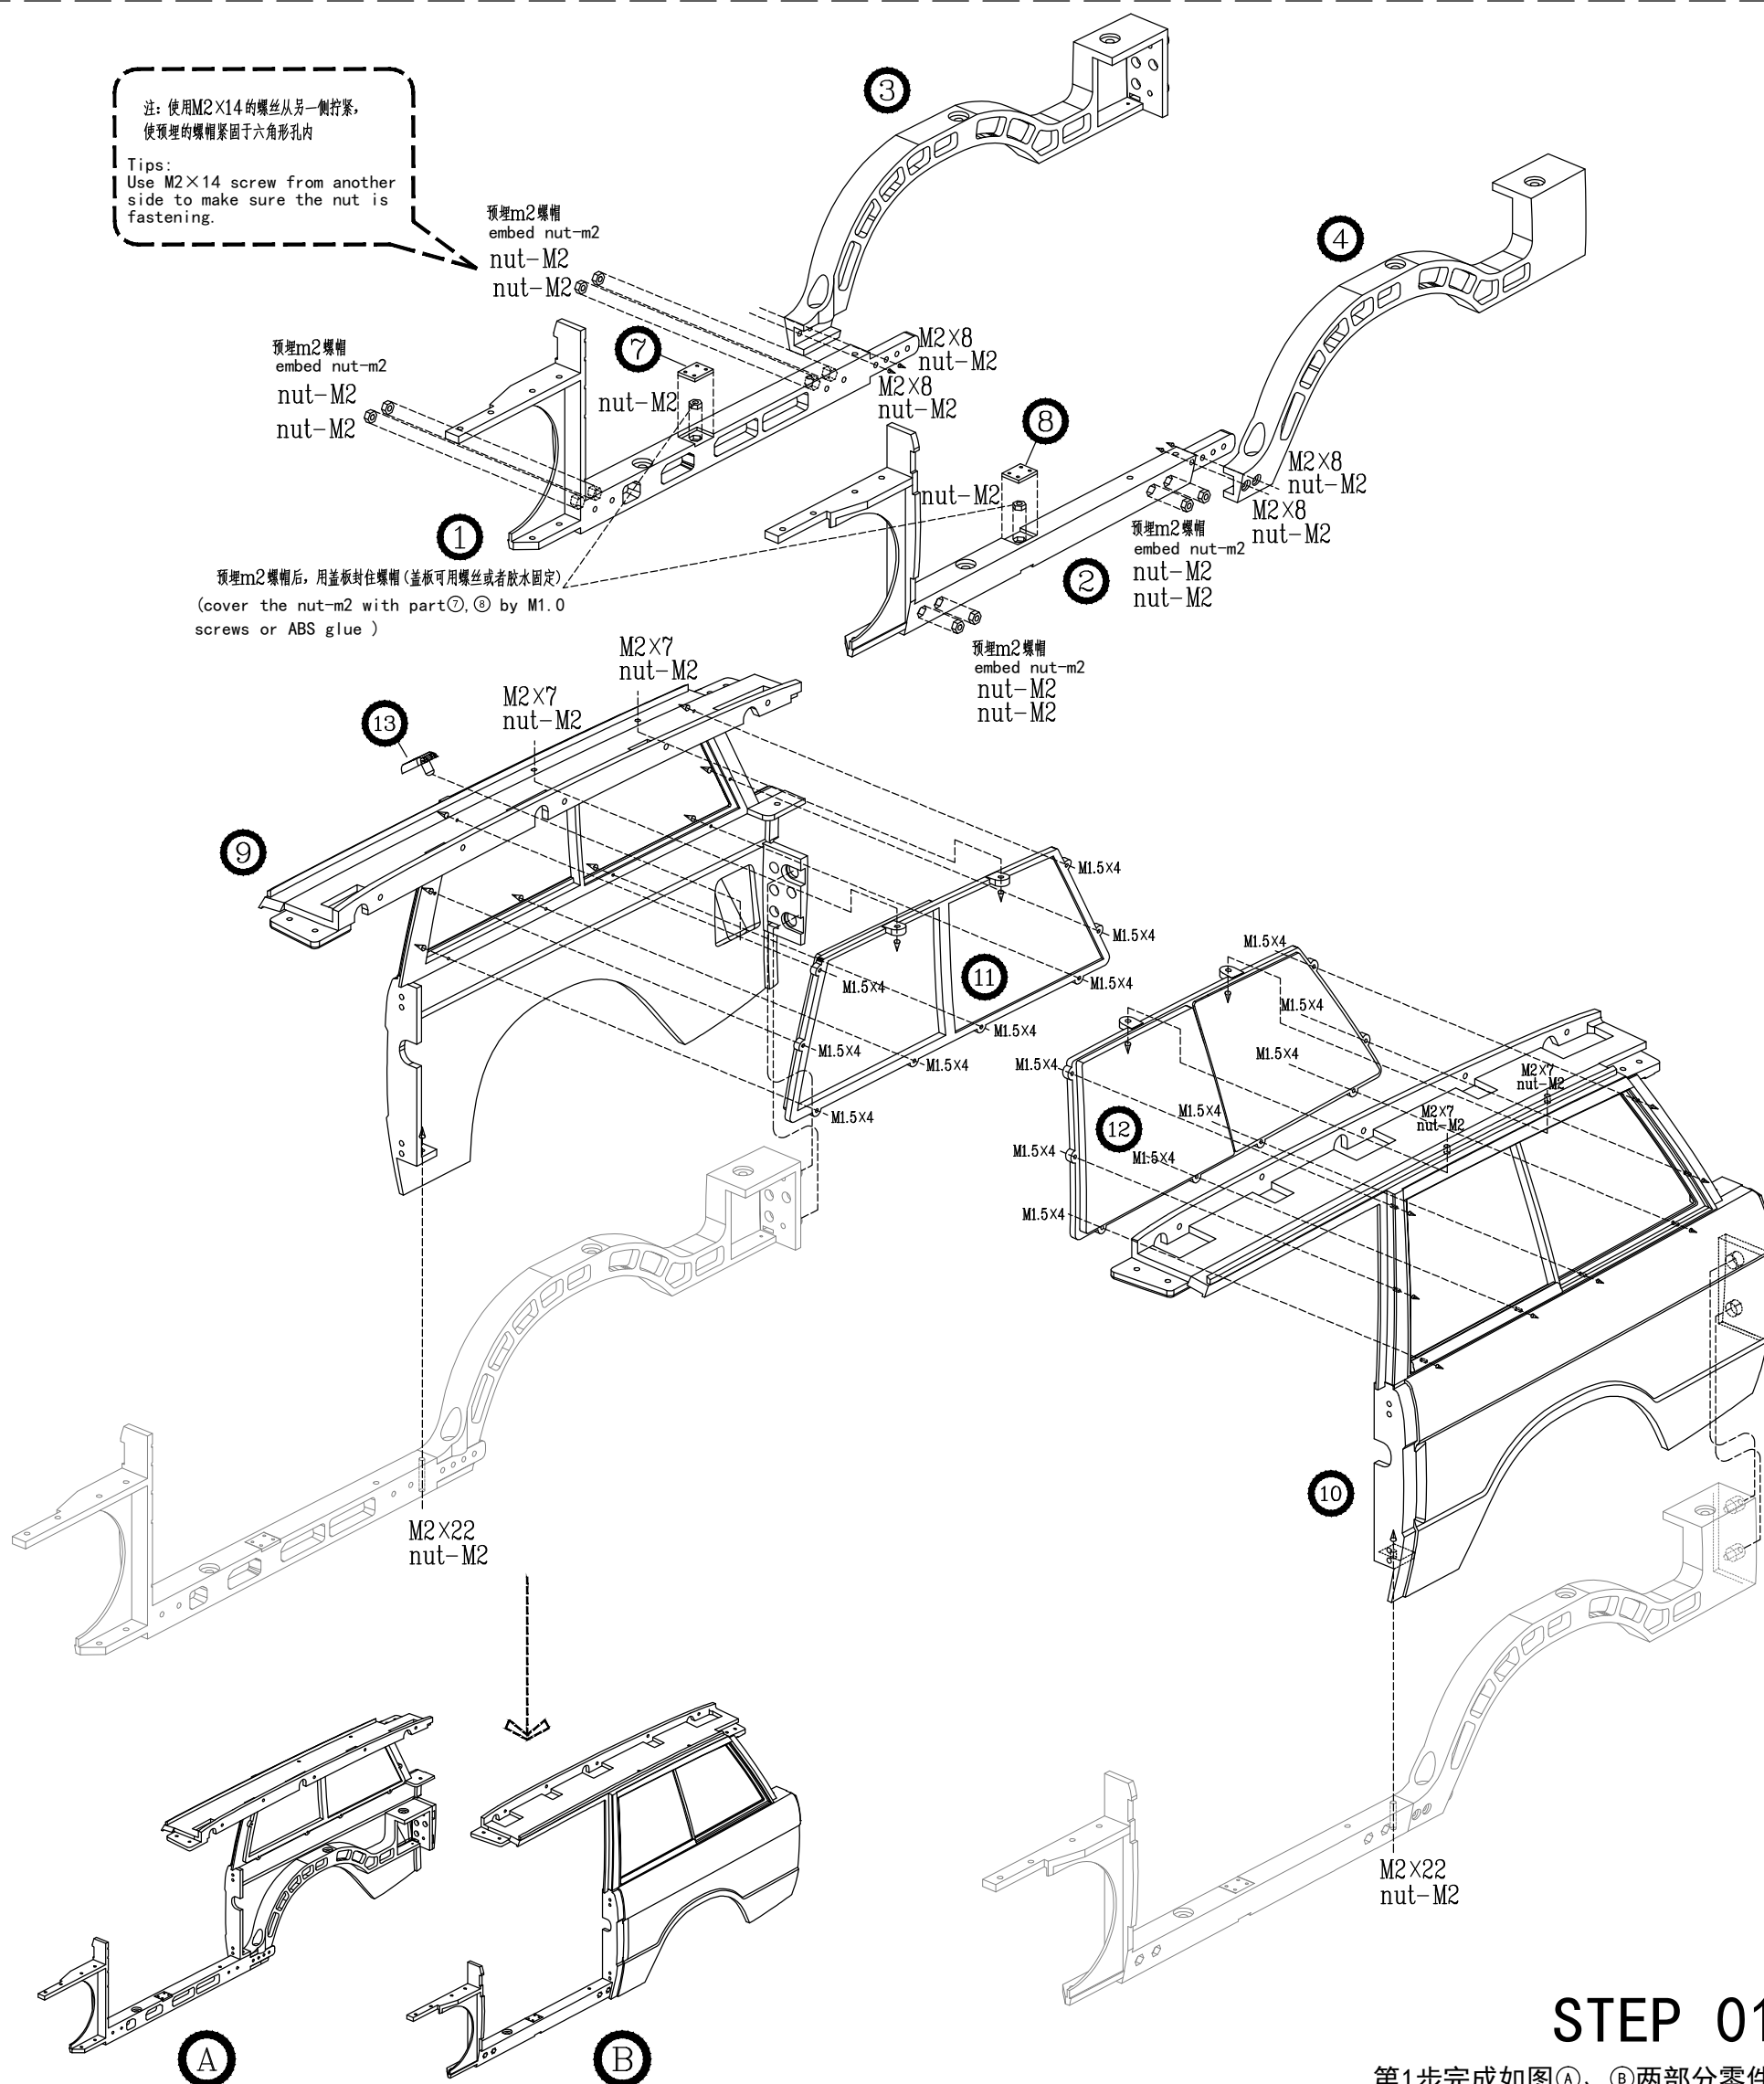

STEP 01

第1步完成如图Ⓐ、Ⓑ两部分零件
Finish part A and B after step 01