
Muscle Winch Mount Lead Kit for BRX02 (#BRD90110036)




(3) Place the switch button on the servo

the housing.

winch. The guide should snap onto



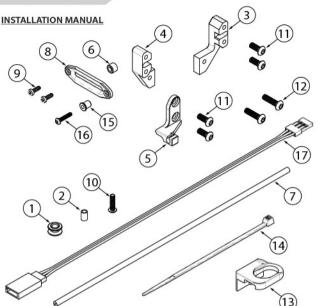

(1) This kit comes with a switch button for holding and releasing the knob Parts Included: Qty. to keep the spool engaged or (1) Pulley disengaged. (2) Pivot Tube (3) Winch Mount A (4) Winch Mount B (5) Tube Retainer (6) Nylon Washer (7) Routing Tube (8) Winch Lead


(9) M2x6 SC Screw #BRASCH2006 (10) M2.5x10 RS Screw #BRASBH2510 (11) M3x8 RS Screw #BRASBH3008 (12) M3x12 RS Screw

#BRASBH3012


(14) Zip Tie (15) Hook Holder (16) M2x10 RS Screw #BRASBH2010 (17) Extension Cable (20cm)

(13) Switch Button #BR-36Switch

(4) Position the switch button as shown, then reinstall the knob.

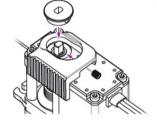



(2) Adjust the shaft with electronics connected. Turn the knob with the set screw facing the power cable. Then remove the knob.

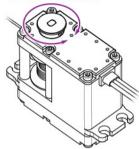



(6) Pull the switch button backwards to engage the locking mechanism.





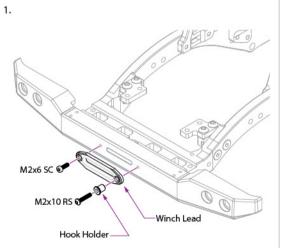

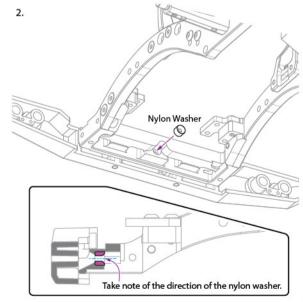

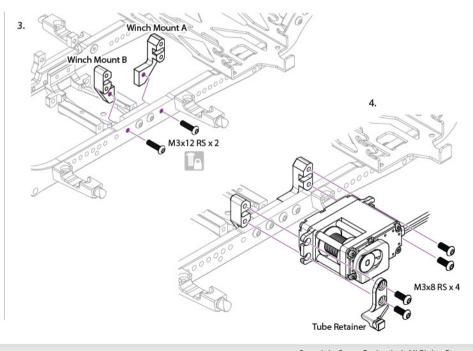

Muscle Winch Mount Lead Kit for BRX02 (#BRD90110036)



