


INSTRUCTION MANUAL



1/5 SCALE BRUSHLESS ESC
TORO BEAST V2
200A

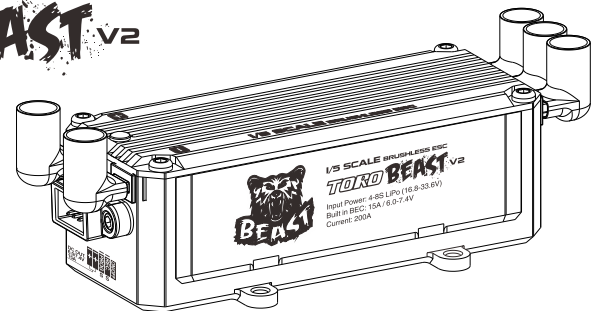

INTRODUCTION

Thank you for purchasing TORO BEAST 1/5 200A ESC V2 from SKYRC TECHNOLOGY CO.,LTD. Please read the Instruction Manual thoroughly before you use the product. These operating instructions are designed to ensure that you quickly become familiar with its features and functions and make full use of this product.

FEATURES

- CNC Machinery outcase for better heat transfer and less weight.
- Upgraded firmware which makes the car more stable when speeding up.
- Built-in high power BEC. Output voltage is selectable between 6.0V and 7.4V. Maximum output current is up to 15A.
- Support LiPo batteries up to 8S.
- Data Logging: The controller can measure and record parameters such as your battery volts, amp draw, motor rpm, and controller temperature. This is a great way to make sure that the rest of your setup is performing within its limits.
- Red copper connector is used internally of the ESC. It can decrease the internal resistance at high current situation.
- Heat transfer: The internal resistance can be reduced by laminated copper stack control technology so that the dynamic thermal equilibrium can be got. In this case, the metal heat sinks can work effectively.
- Safety features: low voltage protection, motor and ESC overheat protection and signal lost protection.
- It can be programmed by Program Box(SK-300046) or PC. The firmware can be updated by connecting the ESC with PC.

SAFETY NOTE

- It is not a toy and suitable for users older than 14 years old.
- Never allow water, moisture, oil or other foreign materials to get inside ESC, motor, or on the PC Boards. It may damage the ESC completely.
- Never disassemble the ESC and modify the components on the PC Boards.
- Suggest using the original wires and connectors which are packed in the box.
- Never solder one part for more than 5 seconds as some components will get damaged by high temperature.
- Never run the ESC w/o load at full throttle and it may damage the bearings and other moving parts.
- Please make sure the location where to fix the ESC has good airflow ventilating so that the heat could dissipate quickly.
- To avoid short circuit, please keep the ESC connectors far away from other metal parts.
- Never connect the battery in polarity in reverse.
- Please remove the pinion gear before performing calibration and programming functions with this system. Please keep your hands, hair, cloth, clear from the gear train and wheels of an armed high performance
- Before you switch on the ESC, please make sure all the cables are well soldered with the connectors (It is easy to get loose when running) . What's more, make sure the cables not touch the moving parts.
- Electronic motor timing will increase the temperatures of ESC and brushless motor. Use extreme caution when setting up and testing your application to avoid overloading and overheating.
- To avoid signal interference, please always turn on the transmitter first THEN turn on the speed control. Do the opposite when powering it off.
- Never use faulty accessories, e.g. motor which may damage the ESC. Always insulate exposed wiring with heat shrink tubing or electrical tape to prevent short circuits, which can damage ESC too.
- Always disconnect the battery pack from the speed control when not in use to avoid short circuits and possible fire hazard. When the ESC is switched off, there is still small current and it may cause over discharge of the battery after some time.
- The ESC can support 4-8 cells LiPo battery.

Note: We will not be responsible for any damage caused by non-compliance with above instruction.


PREPARATION

1) Plan Speed Control Placement

Choose a location for the speed control that is protected from debris. To prevent radio interference, place the speed control as far away from the radio receiver as possible and keep the power wires as short as possible. Select a location that has good airflow ventilating. If the ESC gets air flow, it will run cooler; and that means it will be more efficient.

2) Mount Speed Control in Vehicle

For best results we recommend you to use screws to fix the ESC to the chassis.

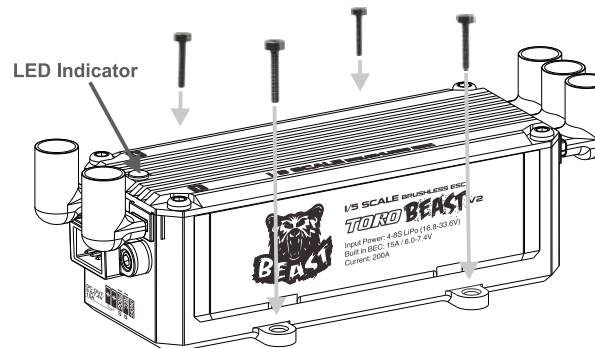

Use a small piece of double-sided tape on the ON/OFF switch.


3) Soldering

Cut the ESC's BLUE, YELLOW & ORANGE silicone motor power wires to the desired length and strip about 3.2mm-6.35mm (1/8"-1/4") of insulation from the end of each wire. "Pre-tin" the wire by heating the end and applying solder until it is thoroughly covered. CAUTION: By very careful not to splash yourself with hot solder. Place the ESC's BLUE Phase 'A' motor wire onto motor's 'A' solder tab and solder. Use soldering iron to apply heat to exposed wire; begin adding solder to tip of soldering iron and wire. Add just enough solder to form a clean and continuous joint from the plated area of the solder tab up onto the wire. Solder the ESC's YELLOW Phase 'B' motor wire to the motor's 'B' solder tab and Solder the ESC's ORANGE Phase 'C' motor wire to motor's 'C' solder tab.

For a brushless non-sensor system, there is no polarity on the motor side of the controller. Simply solder the three wires to your motor. If the car runs backwards with forward throttle, simply swap any two of the motor wires and it will reverse the direction of the car.

CONNECTION

- 1) Connect Throttle lead to ESC and other end to the Receiver (Throttle Channel, Ch2)
- 2) Solder the motor and the ESC.
- 3) Connect ESC to battery pack.

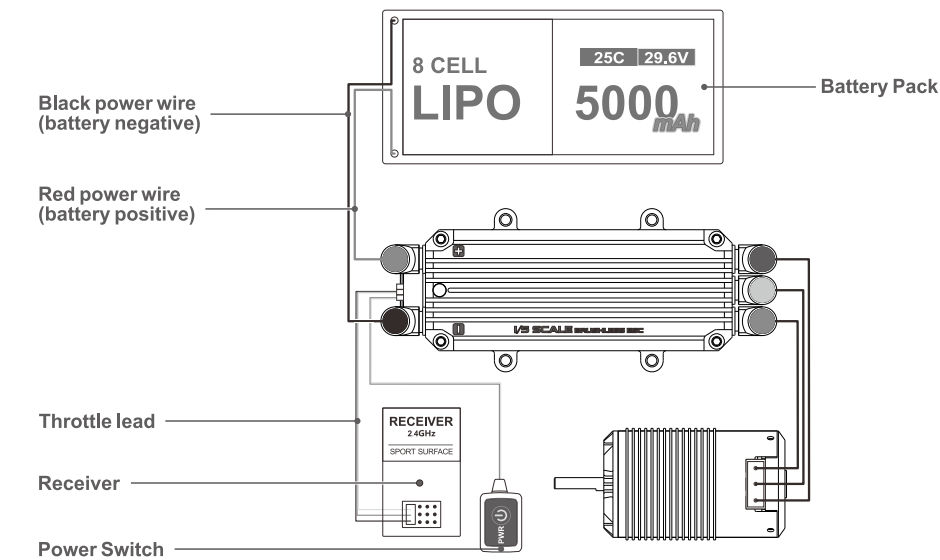

ESC CALIBRATION

Calibration is necessary for the first use of the ESC, or whenever used with a new/different transmitter. Individual transmitter's signals for full throttle, full brake and neutral vary. You must calibrate your ESC so that it will operate more effectively with your transmitter.

How to calibrate the ESC?

- ESC switch OFF.
- Connect the ESC to the battery and the motor.
- Turn on the transmitter.
- Press and hold the ESC switch for few seconds, the motor will ring long beep once. After that, the red LED will blink the motor will ring like beep-beep-beep... in a row which indicates it is time to set the neutral position, full throttle and full brake one by one. You could release the ESC switch now.
- Keep the throttle trigger in neutral position, press the ESC switch once, the green LED will blink once then extinguish and the motor will ring beep once which indicates the neutral position has been set.
- Hold full throttle and press the ESC switch once, the green LED will blink twice then extinguish and the motor will ring twice like beep-beep which indicates the full throttle has been set.
- Move the throttle trigger to full brake and hold full brake, press the ESC switch once, the green LED will blink three times then extinguish and the motor will ring three times like beep-beep-beep which indicates the full brake has been set.
- After the calibration is finished, keep the throttle in neutral position, the red LED is blinking, the ESC and the motor is ready to work.



ESC ON/OFF AND LED INDICATOR

- ESC ON/OFF: When the ESC is OFF, press the switch once, the motor will ring beep once and the red LED will blink, then the ESC is ready to work. When the ESC is on, press the switch once, the LED will extinguish and the ESC is OFF or push the throttle trigger to the maximum brake, hold for 8 seconds and the ESC is OFF.

Note 1: After running at full load, the ESC will be very hot.

Note 2: When the motor is running, the ESC can't be powered off by pressing the switch; when the motor stops working, the ESC can be powered off. In an emergency, please disconnect the battery to power off the ESC.

- Explanation of LED Indicator


The throttle trigger is in neutral position	Red LED is blinking
The motor is running while the throttle trigger doesn't reach to the highest throttle/brake position	Green LED is blinking
The throttle trigger is at the highest throttle/brake position.	Green LED stays ON

ESC PROGRAMMING


The ESC can be programmed by Program Box (optional part SK-300046) or PC (connecting PC and ESC via Program Box)

Note: The program box can be used independently to program the ESC, but also can be regarded as a connector between ESC and PC when programming in PC.

- PC via Program Box

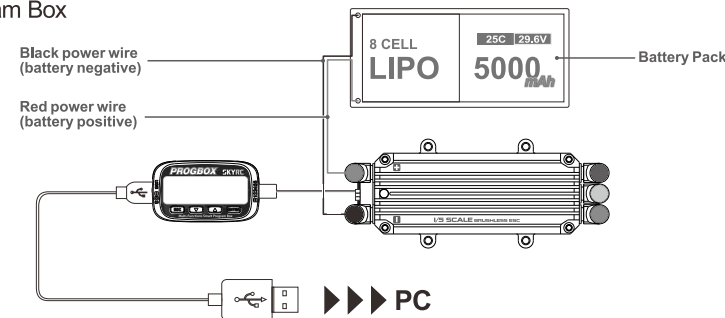

- Program Box

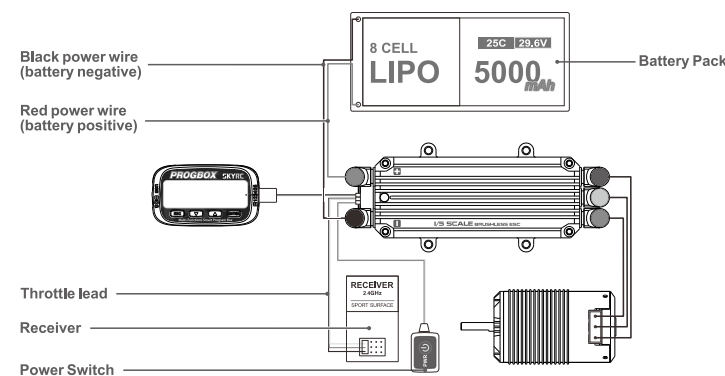

5/8

Programmable Items and Description

Section	Program Item	Description				
General Setting	Running Mode	Forward/Brake	Forward/Brake/Reverse	Forward/Reverse		
	Motor Direction	Normal	Reverse			
	Reverse Speed	25-100% (in 1% increment)				
	Voltage Cutoff*	9.6-42V (in 0.1V increment)				
	BEC Voltage	6V	7.4V			
	ESC Overheat Protection	85°C/185°F	105°C/221°F	125°C/257°F	Disable	
Throttle Control	Punch Rate Switch Point	1-99% (in 1% increment)				
	1st Stage Punch Rate	1-30				
	2nd Stage Punch Rate	1-30				
	TH Input Curve	Line	Custom			
	Throttle Dead Band	10-150us				
Brake Control	Drag Brake	0-100% (in 1% increment)				
	Brake Strength	0-100%				
	Initial Brake	=Drag Brake	0-50%			
	Brake Rate Switch Point	1-99% (in 1% increment)				
	1st Stage Brake Rate	1-20				
	2nd Stage Brake Rate	1-20				
	Brake Input Curve	Line	Custom			
Data Storage	Mode	Single	Cycle			
	Start and Stop Control	Start storage once entering in main program		Press control storage entering in main program		
	Choose data types to save	Voltage	Current	Throttle	Current RPM	ESC Temperature
	Data Saving Time increment	0.1S-10S				

* If you set the cut-off voltage manually, please note the adjustable voltage is TOTAL cut-off voltage of the battery pack.

6/8

Profiles Preset

The users could preset and store 10 sets of profiles in the ESC. These data could be called out for application at any time without any special program setting. The user could also reset the profile according to his request.

Profile One Setting Value (Default Value)

Section	Program Item	Description
General Setting	Running Mode	Forward/Brake
	Motor Direction	Normal
	Reverse Speed	25%
	Voltage Cutoff	25.6V
	BEC Voltage	6V
Throttle Control	ESC Overheat Protection	105°C/221°F
	Punch Rate Switch Point	50%
	1st Stage Punch Rate	5
	2nd Stage Punch Rate	5
	TH Input Curve	Line
Brake Control	Throttle Dead Band	0.080ms
	Throttle Status	
	Drag Brake	10%
	Brake Strength	75%
	Initial Brake	=Drag Brake
Data Storage	Brake Rate Switch Point	50%
	1st Stage Brake Rate	10
	2nd Stage Brake Rate	16
	Brake Input Curve	Line

7/8

SPECIFICATION

Constant/Burst Current	200A/800A
Motor Compatible	Brushless Sensorless ESC
Car Compatible	1/5 Off Road, On Road
Motor Limits	KV ≤ 1100, 4 Poles
Resistance	0.0002ohm
Battery Cell Count	4-8S LiPo
BEC Output	6.0V/7.4V @ 15A
Size	111x44x37mm (LxWxH)
Weight	359g (without wire)

WARRANTY AND SERVICE

The TORO BEAST 1/5 200A ESC V2 is guaranteed to be free from defects in materials or workmanship for a period of 90 DAYS from the original date of purchase (verified by dated, itemized sales receipt). Warranty does not cover incorrect installation, components worn by use, damage to case or exposed circuit boards, cross-connection of battery/motor power wires, overheating solder tabs, reverse voltage application, improper use or installation of external BEC, damage resulting from thermal overload or short-circuiting motor, damage from incorrect installation of FET servo or receiver battery pack, tampering with internal electronics, allowing water, moisture, or any other foreign material to enter ESC or get onto the PC board, incorrect installation/wiring of input plug plastic, allowing exposed wiring or solder tabs to short-circuit, or any damage caused by a crash, flooding or natural disaster. Because SKYRC has no control over the connection & use of the speed control or other related electronics, no liability may be assumed nor will be accepted for any damage resulting from the use of this product. Every SKYRC speed control & motor is thoroughly tested & cycled before leaving our facility and is, therefore, considered operational. By the act of connecting/operating speed control, user accepts all resulting liability. In no case shall our liability exceed the product's original cost. We reserve the right to modify warranty provisions without notice. This product is not intended for use by children under 14 years of age without the strict supervision of an adult. Use of this product in an uncontrolled manner may result in physical damage or injuries take extra care when operating any remote control.

For any repair or replace service, please contact your dealer in the first instance, who is responsible for processing guarantee claims.



SKYRC

Manufactured by
SKYRC TECHNOLOGY CO., LTD.
www.skyrc.com

© 2018 SkyRC Technology Co., Ltd. All Rights Reserved.
7504-1084-02 Ver 1.0

8/8